


caddytek

One-click folding 4-wheel golf push cart

Model: CaddyCruiser ONE Pro

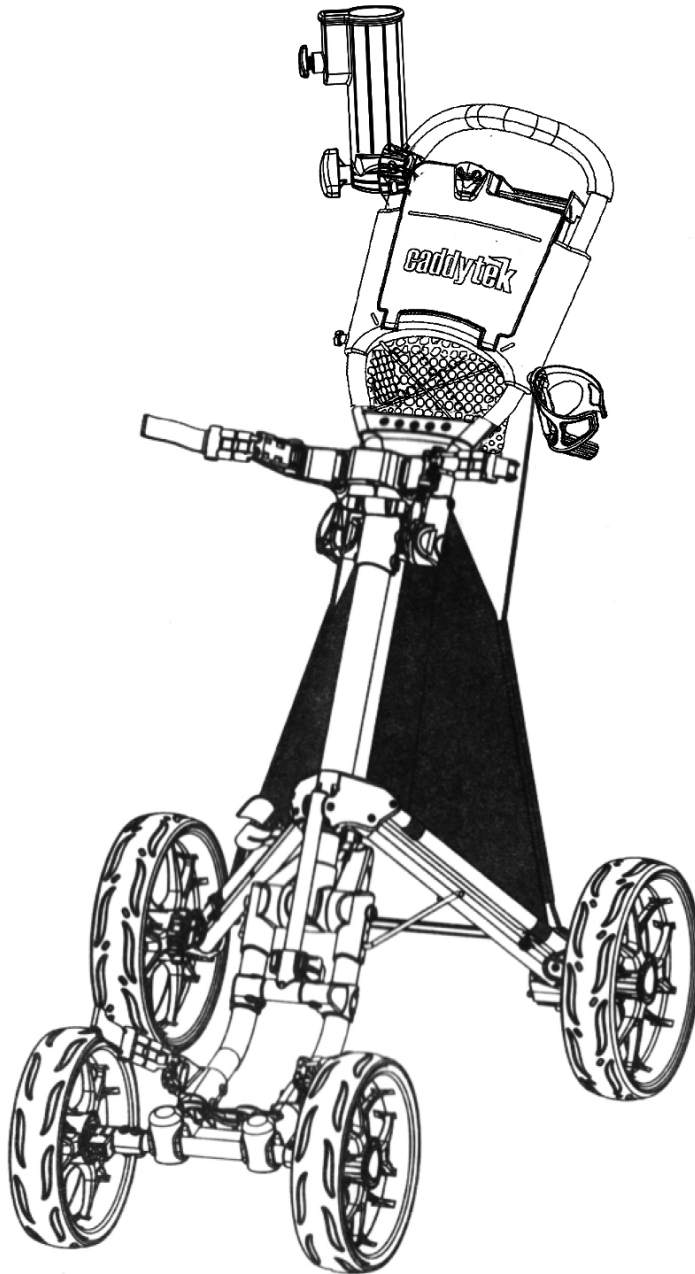

User Manual

WARNING:

FOR YOUR OWN SAFETY, PLEASE REVIEW THESE WARNINGS AND KEEP THIS USER GUIDE FOR FUTURE REFERENCE.


- Before using this golf cart, please read and understand the important instructions and warnings in this user guide.
- AVOID injury by always following the folding and unfolding the cart instructions carefully
- AVOID INJURY by keeping clear of moving parts while adjusting, folding or unfolding this cart.
- ALWAYS make sure the cart is fully extended and locked before use.
- ALWAYS make sure the cart is folded and locked properly before lifting or transporting.
- ALWAYS use the brake when parking the cart.
- DO NOT run while using this cart.
- DO NOT use accessories other than those designed specifically for this cart.
- Keep hands and fingers away from moving parts or sliding sections of the cart!
- The maximum load of this cart is 15kg.

Package contents:

1. The main frame of the cart
2. Two front wheels 26.6 cm (10.5 in.) and 2 rear wheels 29.2 cm (11.5 in.)
3. Umbrells holder
4. Basket (pre-installed on the cart)
5. Drink holder
6. This user manual
7. Hangtags on the handle
8. Tools for adjustment

Parts identification:

- A: PVC handle grip
B: Scorecard holder assembly
C: Handle frame
D: Upper bag holder bracket assembly
E: Adjustable handle mechanism
F: Main connecting rod
G: Main frame
H: Leg bracket
I: 2 holes right leg frame
J: 4 holes leg frame
K: 2 holes left leg frame
L: Left stabilization bar
L1: Right stabilization bar
M: Footbrake assembly
N: Left rear wheel holder
N1: Right rear wheel holder
O: Holding slot for folded cart frame
P: Supporting cable
Q: Sub-connecting rods
R: Front wheel fork assembly
S: Rear wheel assembly
T: Lower bag holder bracket assembly
U: Front wheel lock mechanism
V: Front wheel assembly
W: Umbrella holder base
X: Umbrella holder
Y: Basket with cooler
Y1: Handle mesh net
Z: Drink holder
Z1: Umbrella holder storage rack

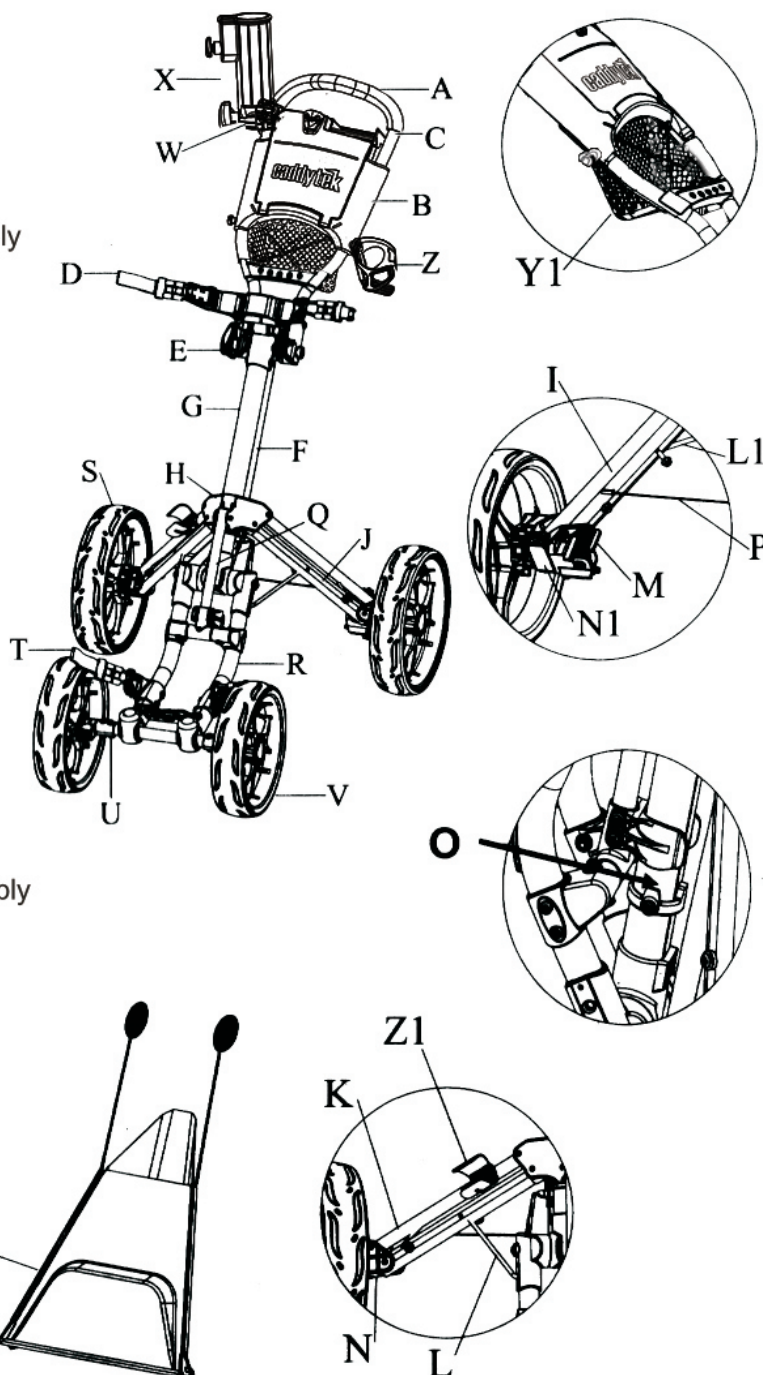

Extending the cart

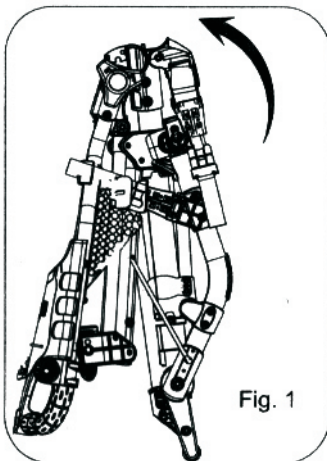


Fig. 1

Lift the upper bag bracket as shown in Fig. 1.


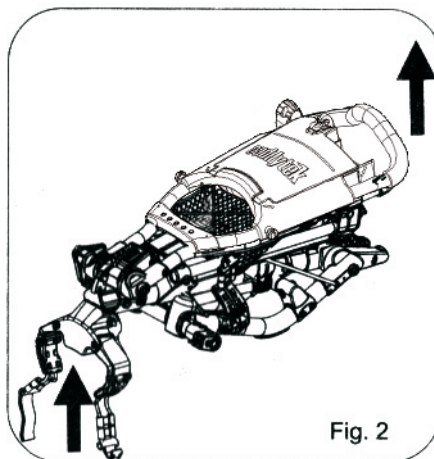


Fig. 2

Simply pull the handle and upper bag bracket as shown in Fig. 2 to extend the cart. (Shake the cart slightly to release the main frame from the holding slot if necessary.)

Unfolding motion

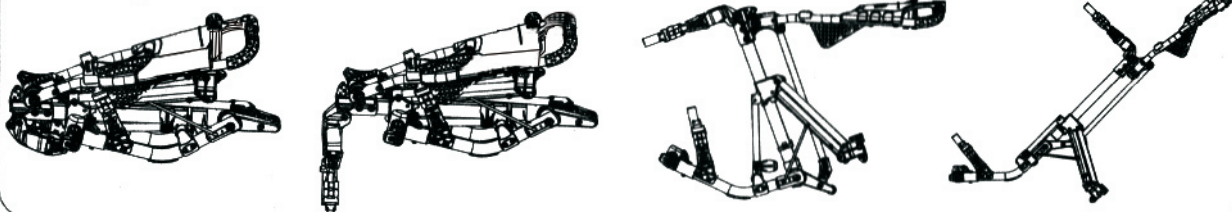

Install wheels

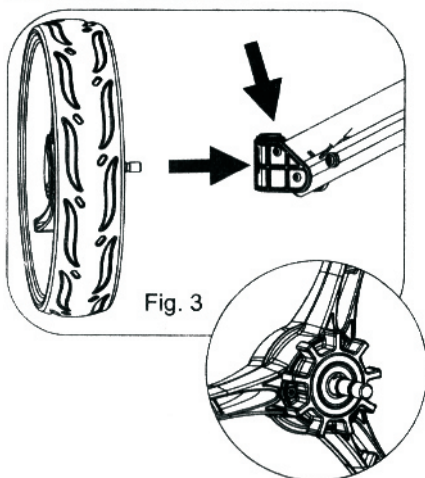


Fig. 3

Press the red bottom on the leg frame and insert the wheels as shown in Fig. 3 to install the rear wheels.


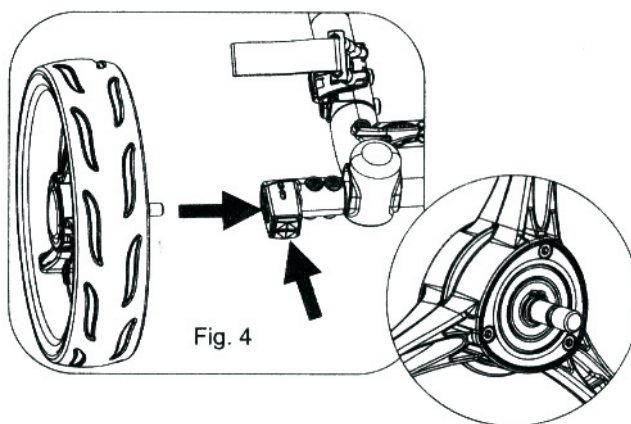



Fig. 4

Press the red bottom on the front wheel axle and insert the wheels as shown in Fig. 4 to install the front wheels.




Folding the cart

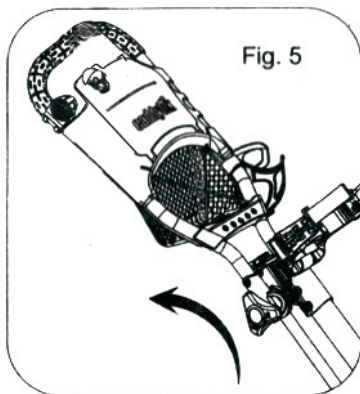


Turn the red knob as shown in Fig. 5 to release and tighten the handle.

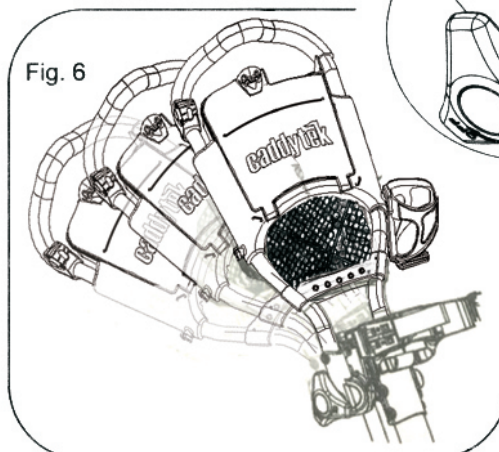

To achieve the optimal folded size, adjust the handle to the 2nd highest location marked by the small label near red knob as shown in Fig. 6.

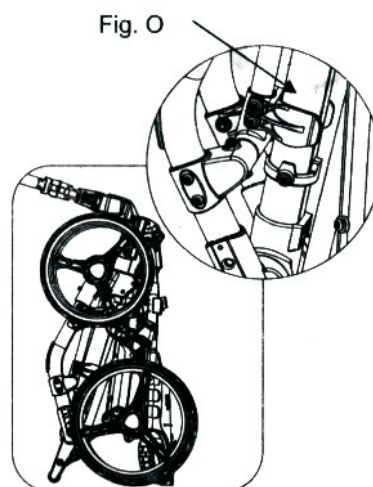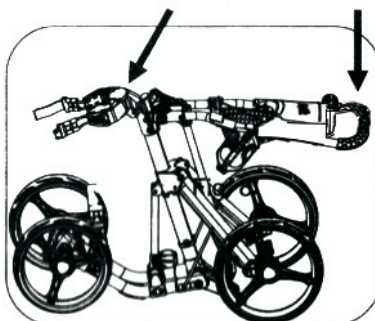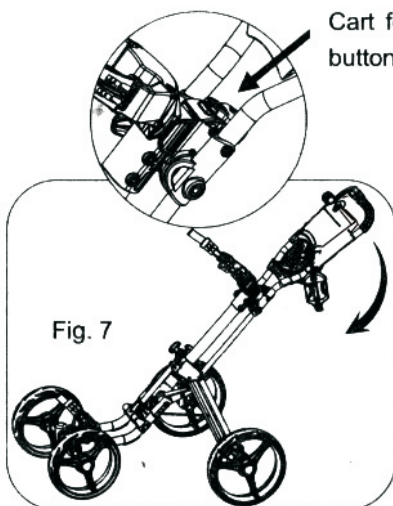

Press the red folding button and push the handle downward as shown in Fig. 7 and Fig. 8 to fold the cart till the main frame clicks into the holding slot as in FIG. 8.

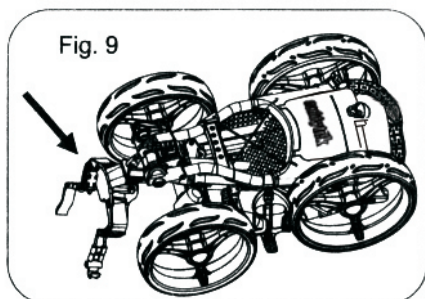

Push the upper bag bracket downward as shown in Fig. 9.




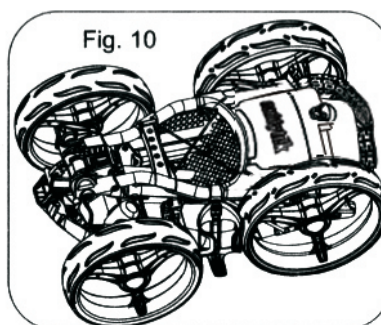


Fig. 10 shows the cart is folded.

Install umbrella holder

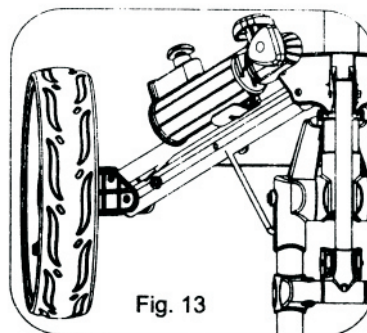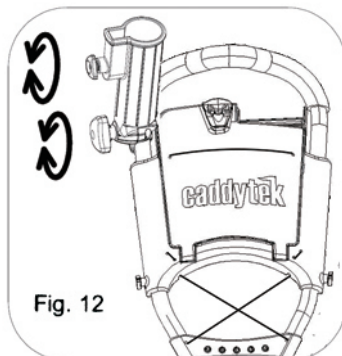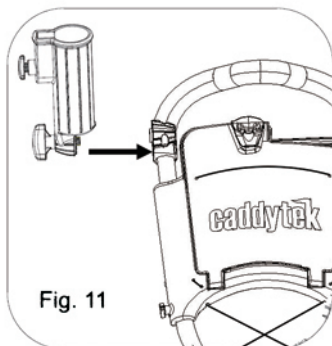


To put in use:

Simply attach the umbrella holder onto the cart as in Fig. 11 & 12.

To store:

Attach the umbrella holder to the storage rack on the right leg frame as in Fig. 13.



Use the brake

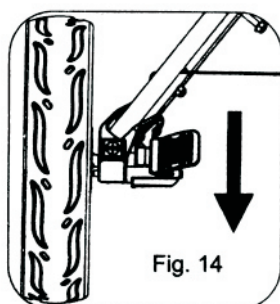

Press the brake pedal to brake and push again to release as Fig. 14.


Install drink holder

Fig. 15

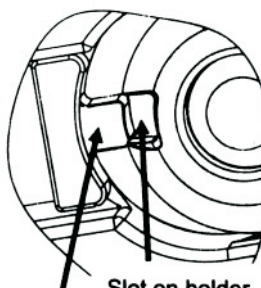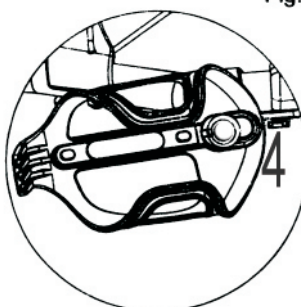



Slot on holder

Fixed block on base notch

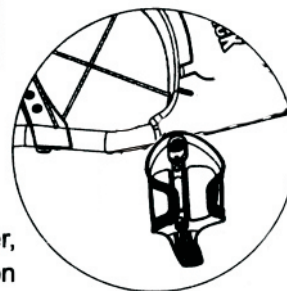

When installing the drink holder, align the smallest part of the slot on the holder with the fixed blocks. Then pull horizontally to fit the holder on the base.

Front wheel alignment

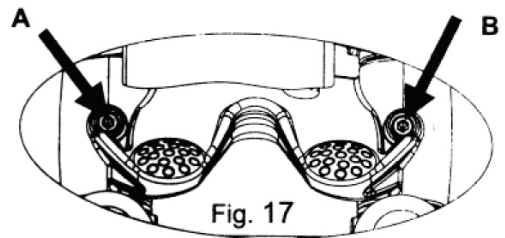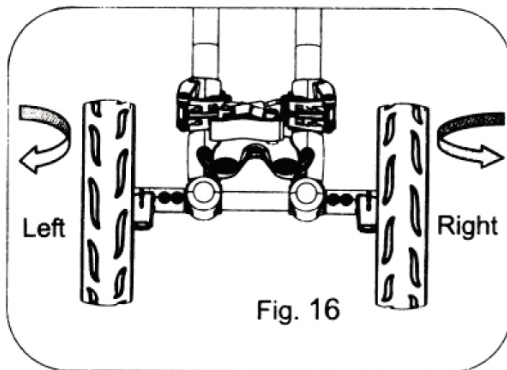

Alignment adjusting screws A/B





Fig. 18

Hex wrench

If the cart veers to the right, please use the hex wrench to turn screw A counterclockwise and Screw B clockwise to adjust the alignment.

If the cart veers to the left, please use the hex wrench to turn screw A clockwise and screw B counterclockwise to adjust the alignment.

Bag holder strap adjustment

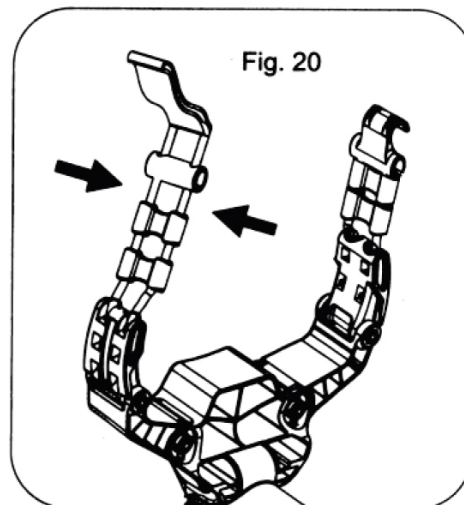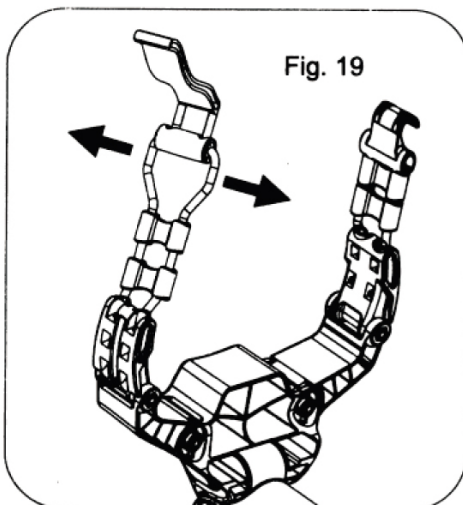

Refer to Figs. 19 and 20:

1. Pull the elastic strap out of the strap buckle as in Fig. 19.
2. Adjust the strap to desired length.
3. Push the elastic strap back to the strap buckle as in Fig. 20.

WARRANTY

CaddyTek Pty Ltd warrants its products to be free of defects and workmanship for one year from the date of purchase. We will either repair or replace defective products at our option.

Normal wear and tear of the product and damage from abnormal use are not considered manufacturer's defect. This warranty does not apply to any claim of physical damage to item(s) used in connection with CaddyTek Pty Ltd products. In the case of deterioration due to normal use we will repair the item for a normal charge. CaddyTek Pty Ltd is the sole judge of any claim or warranty.

For customers in Australia, please contact CaddyTek Pty Ltd for the services. For customers outside of Australia, please contact your dealer for the warranty services or you are welcome to contact CaddyTek Pty Ltd directly.

CaddyTek Pty Ltd
ABN: 26 154 633 753
Unit 6, 22-24 Princes Road East
AUBURN NSW 2144
<http://www.caddytek.com.au>