


PARTS LIST

- A Foam handle
- B Umbrella Holder Base
- C Scorecard Holder
- D Hand Grip
- D1 Net
- E Sliding Lock
- F Upper Bracket
- G Joint
- H Main Frame Tube
- I Leg Bracket
- J 2 Holes Leg Frame
- J1 3 Holes Leg Frame
- K Left Wheel Mechanism
- K1 Right Wheel Mechanism
- L Anti-Splay Wire
- M Rear Wheel
- N Lower Bracket
- P Front Wheel
- Q Left Weight Stabilizer
- Q1 Right Weight Stabilizer
- Q2 Drink Holder

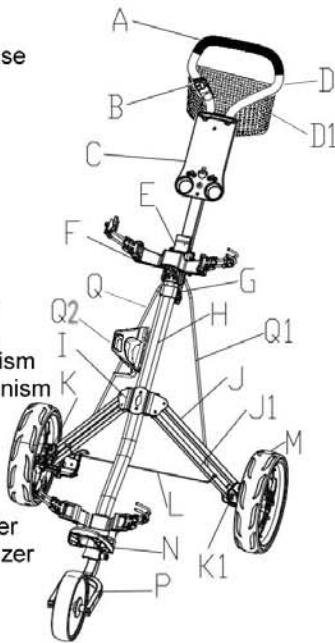

MAINTENANCE

To clean, wipe cart with a soft, dry cloth. Car polish may be used to maintain finish. Lubricate moving parts every 6 months.

Warning:

For your own safety, please read and understand these warnings and keep this user guide for future reference. Always make sure the cart is fully extended and locked before use. Always make sure the cart is folded and locked properly before lifting or transporting.

Do not run while using this product.

Do not use accessories other than those designed for use with your carts. Keep all packing materials away from children and recycle where possible or where required by law.

Warning: Keep hands and fingers away from moving or sliding parts! Always keep control of the buggy - Do not let it run down hills without full control.


ASSEMBLY STEP

Fig.1




Lift the handle to level position as Fig.1

Fig.3

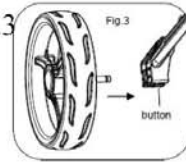


Press the button on the wheel holder to assembly rear wheel as Fig.3

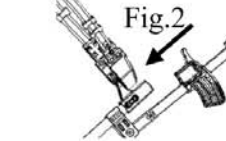

Move the slide lock downside and lock to upper bracket as Fig.2

Fig.4

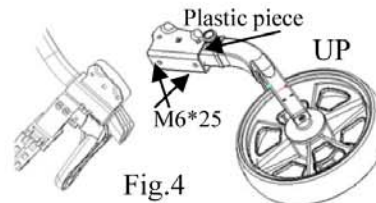

Take out the fixed steel piece and screws from instruction PE bag, then going the screws through the holes and keep the "up" toward front as Fig.4.


Fig.5



Completely Unfolding and assembly as Fig.5

FOLDING

Fig.6

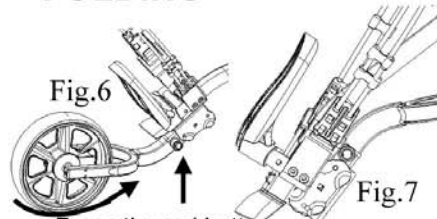

Press the red button to release front wheel, then fold until the pin inserts in the hole as FIG.6 and 7

Fig.7


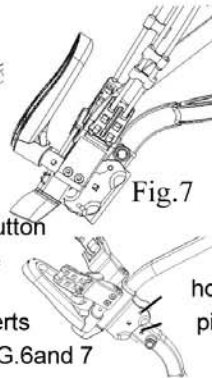


Fig.8

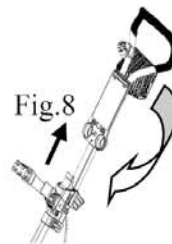

Move the slide lock up to release the handle as Fig.8

SLIDE LOCK MECHANISM

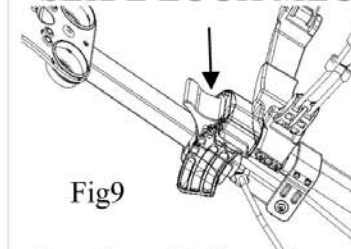


Fig.9

Press the red button and adjust the slide lock to required handle height as Fig.9

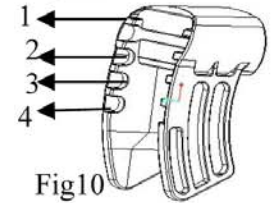


Fig.10

Adjustable handle with 4 positions height as Fig.10

FOOT BRAKE MECHANISM

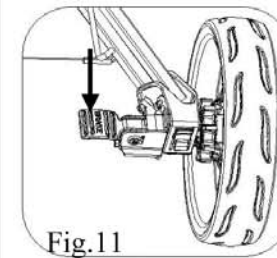


Fig.11

Push on the brake pedal to stop the rear wheel and pull off to release as Fig.11

Front Wheel Adjustment Mechanism

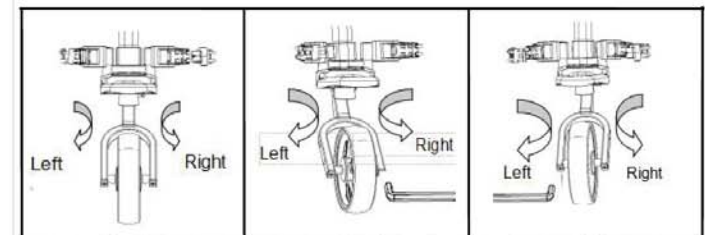


Fig.1

Fig.2

Fig.3

1. If during use, you find the cart veers to the right or left, please see the instructions below to correct this problem. (Fig.1)

2. If the cart veers to the left, face the front wheel of the cart and use the Allen wrench provided to screw the right bolt counterclockwise or the left bolt clockwise until the front wheel is centered between the front fork. (Fig.2)

3. If the cart veers to the right, face the front wheel of the cart and use the Allen wrench provided to screw the left bolt counterclockwise or the right bolt clockwise until the front wheel is centered between the front fork. (Fig.3)