


# **caddytek**

## **CaddyLite EZ-S Pro**

**Swivel EZ-Fold  
3 Wheel Golf Push Cart**

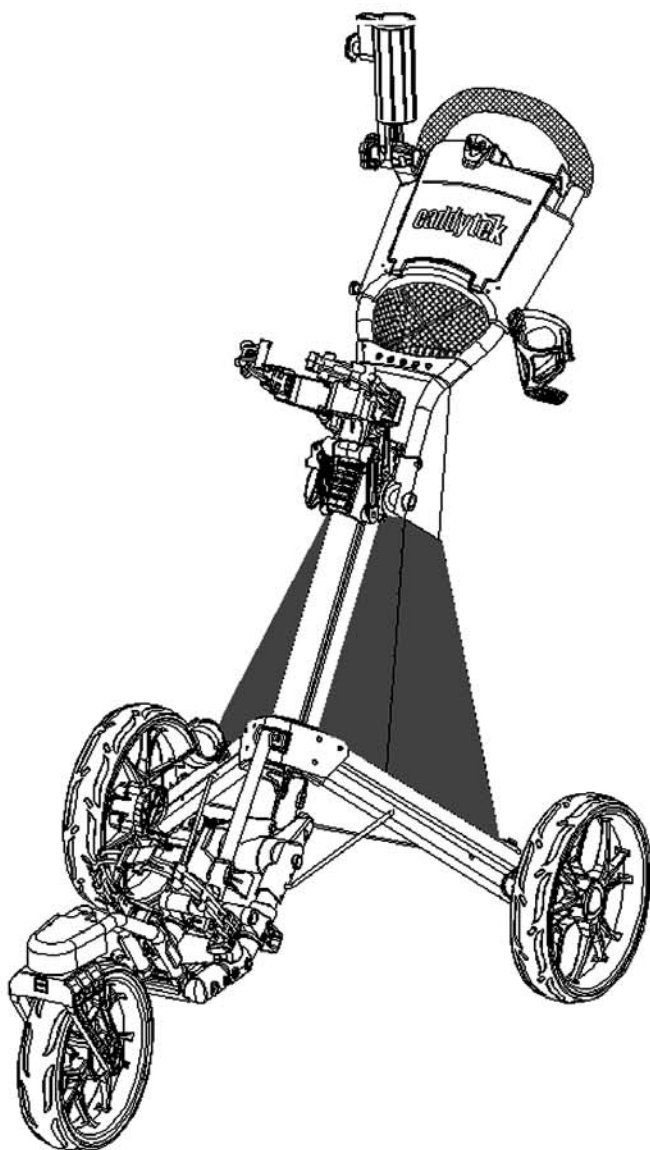

User Manual

## **WARNING:**

FOR YOUR OWN SAFETY, PLEASE REVIEW THESE WARNINGS AND KEEP THIS USER GUIDE FOR FUTURE REFERENCE.

- Before using this golf cart, please read and understand the important instructions and warnings in this user guide.
- AVOID injury by always following the folding and unfolding the cart instructions carefully
- AVOID INJURY by keeping clear of moving parts while adjusting, folding or unfolding this cart.
- ALWAYS make sure the cart is fully extended and locked before use.
- ALWAYS make sure the cart is folded and locked properly before lifting or transporting.
- ALWAYS use the brake when parking the cart.
- DO NOT run while using this cart.
- DO NOT use accessories other than those designed specifically for this cart.
- Keep hands and fingers away from moving parts or sliding sections of the cart!
- The maximum load of this cart is 15kg.


## Package contents:

1. The main frame of the cart with the front wheel
2. Two main wheels
3. Umbrella holder
4. Drink holder
5. User manual
6. Tools for adjustment


In case any of above item is missing or damaged, please email [service@caddytek.com.au](mailto:service@caddytek.com.au) to report.

## Parts identification:



- A: PVC handle grip
- B: Umbrella holder
- C: Umbrella holder base
- D: Scorecard holder assembly
- E: Umbrella holder storage rack
- F: Handle frame
- G: Upper bag holder bracket assembly
- H: Handle height adjusting knob assembly
- I: Main frame
- J: Front connection Rod
- J1: Main connection Rod
- K: Leg frame bracket
- L: 2 holes right leg frame
- L1: 2 holes left leg frame
- M: 4 holes right leg frame
- N: Lower bag holder bracket assembly
- O: Optional seat installation right slot
- O1: Optional seat installation left slot
- P: Supporting cable
- Q: Right stabilization bar
- Q1: Left stabilization bar
- R: Right wheel lock mechanism
- R1: Left wheel lock mechanism
- S: Rear wheel assembly
- T: Front wheel fork assembly
- U: Front wheel assembly
- V: Foot brake assembly
- W: Basket with cooler
- X: Drink holder
- Y: Handle mesh net
- Z: Main frame folding holder

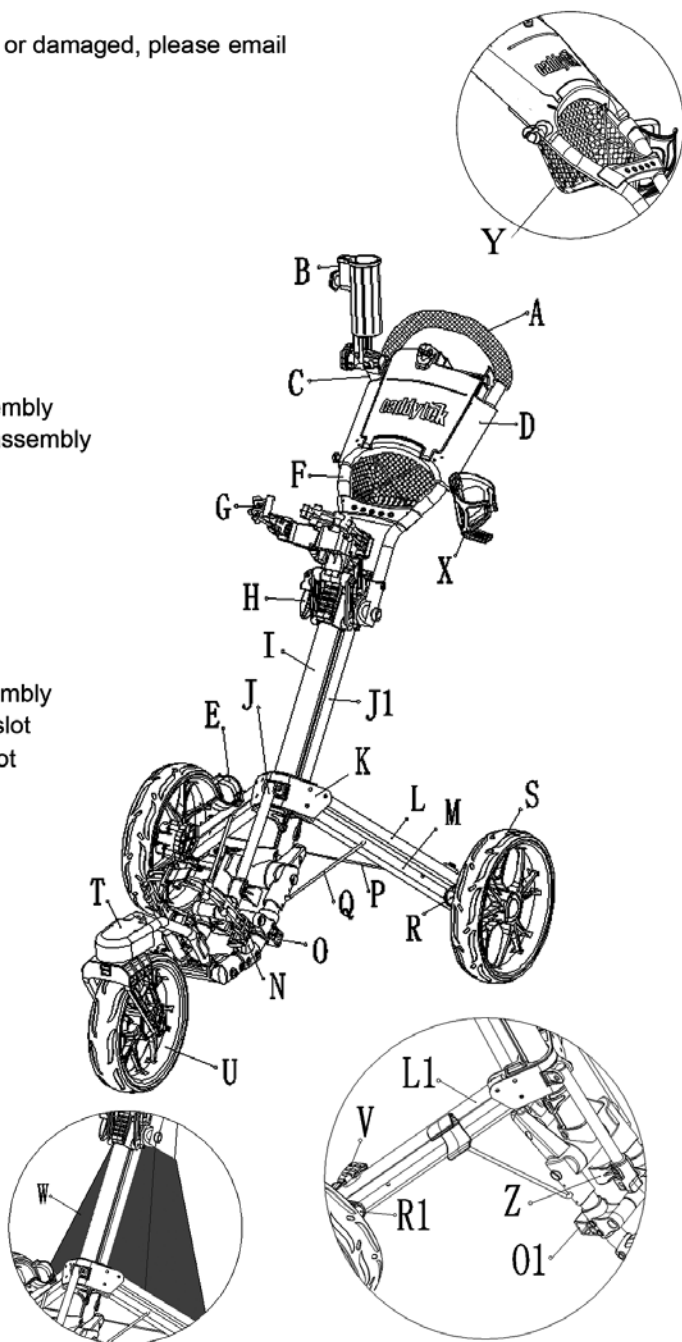


## Assembly the cart

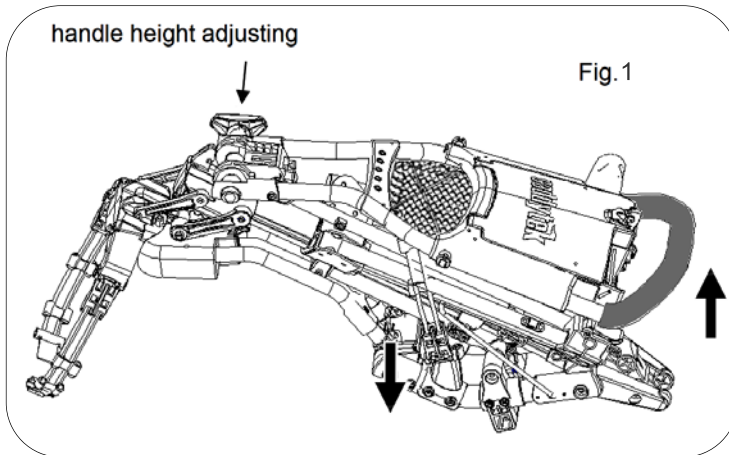


Make sure the handle height adjusting knob is fully tightened.  
Pull the handle and upper bag bracket as shown in Fig. 1 to extend the cart.  
(Shake the cart slightly to release the main frame from the holding slot if necessary.)

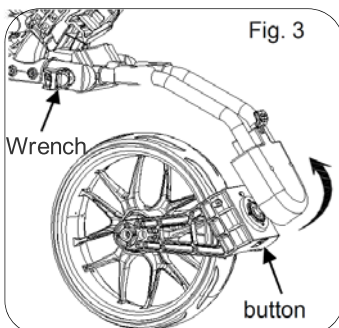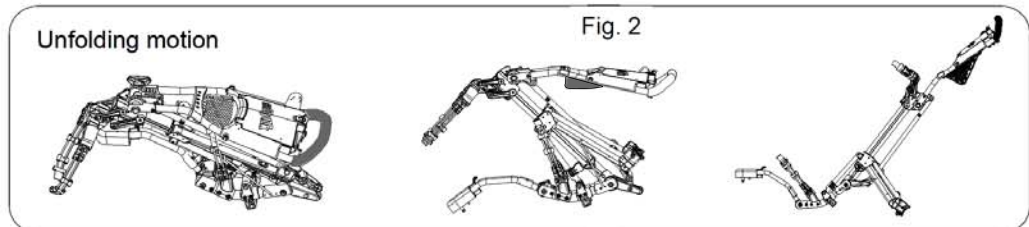

Press the button to assemble front wheel. Rotate the front wheel 45 degrees and lock the wrench as in fig.3.

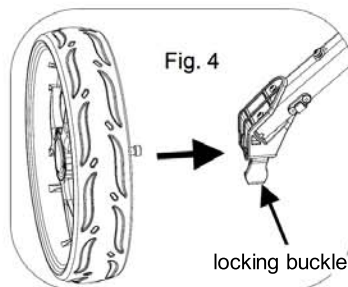


Release the wheel locking buckle, insert the wheel axel into the wheel holder completely and then tighten the locking buckle.

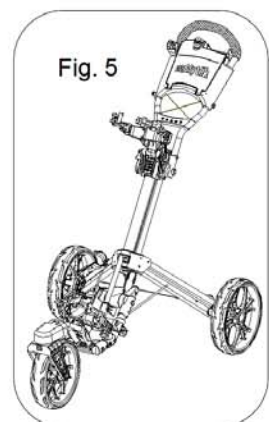


The cart is fully extended as shown in Fig. 5




## Folding the cart

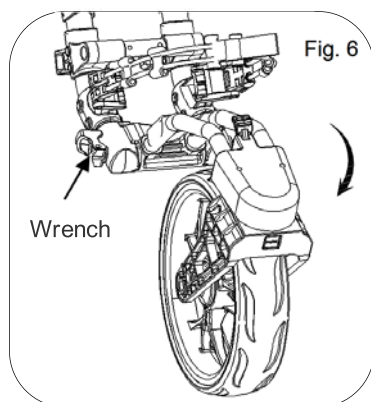




Release the wrench and rotate the front wheel 45 degrees as in fig.6.

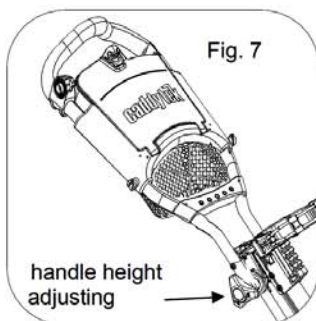

Make sure the handle height adjusting knob is fully tightened. Slightly lift up the handle as Fig. 7 then press the folding button and push the handle downward as shown in Fig. 8 , Fig. 9 to fold the cart till the main frame clicks into the holding slot as in Fig.10 .

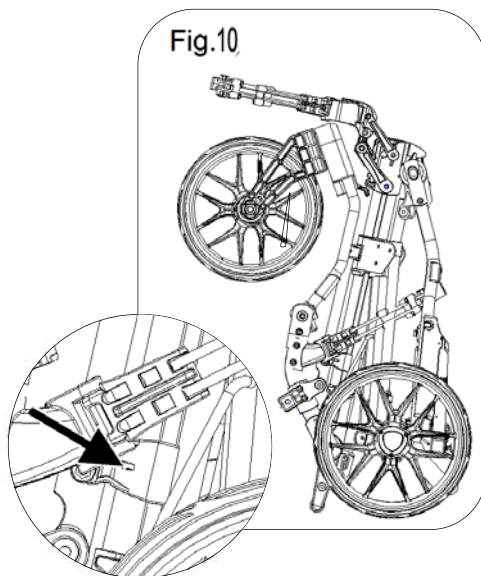
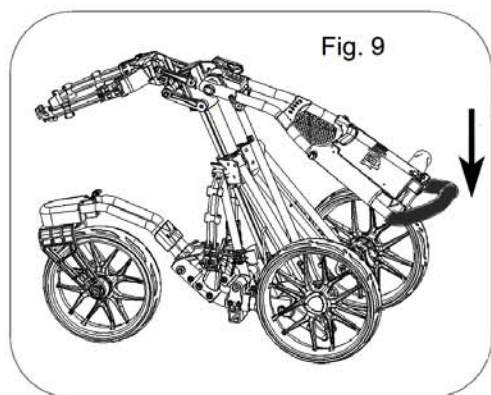
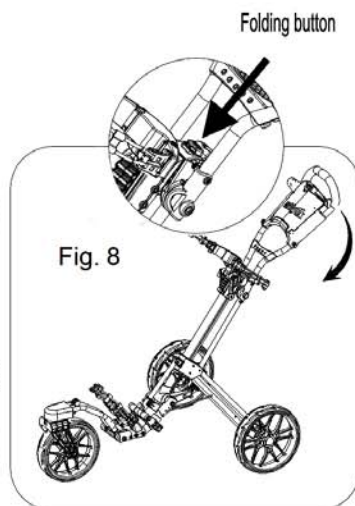


## Install the drink holder

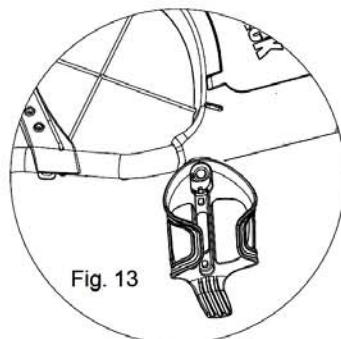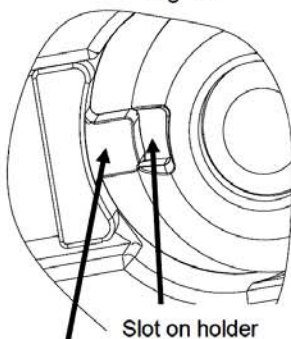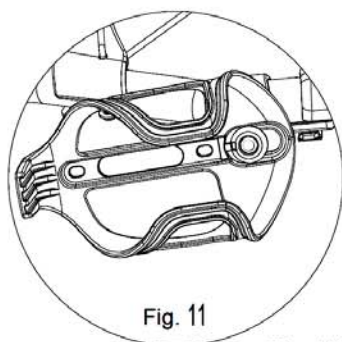

When installing the drink holder, align the smallest part of the slot on the holder with the fixed blocks. Then pull horizontally to fit the holder on the base.

## Umbrella Holder

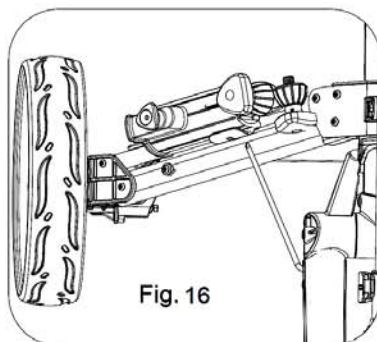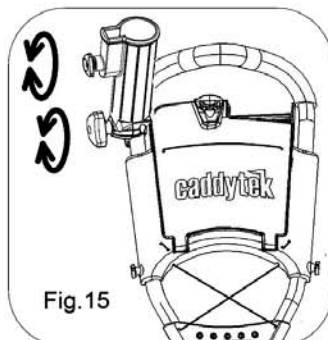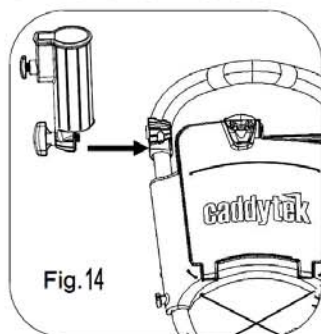

To put in use:  
Simply attach the umbrella holder onto the cart as in fig. 14/15



To store:  
Attach the umbrella holder to the storage rack on the left leg frame as in Fig. 16 .

## Use the brake



Push down the brake pedal to stop the cart and pull up to release.

## Upper Bag Holder Bracket Adjustment

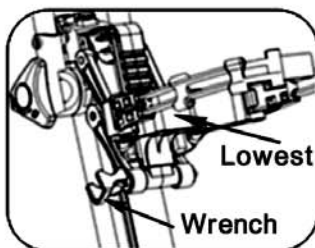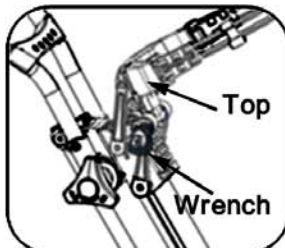

Press the wrench to fix the bracket, and pull up the wrench to adjust the bracket to a proper position.



## Front Wheel Alignment

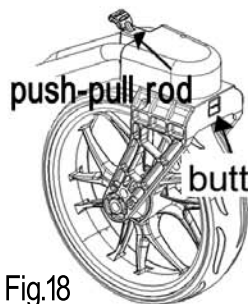


Fig.18

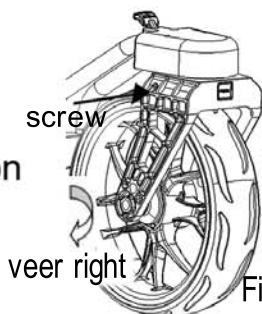


Fig.19

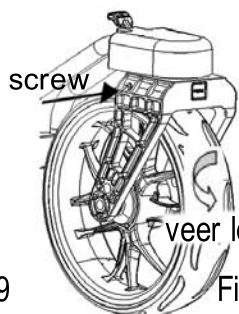


Fig.20

1.Pull the rod as fig.18 to lock the wheel to go straight; push the rod to release the wheel for swivel. Press the button to take off the front wheel.

2.If the cart veers to the right, face the front wheel of the cart and use the Allen wrench provided to screw the bolt counterclockwise until the front wheel is cetenred between the front fork.(Fig.19)

3.If the cart veers to the left, face the front wheel of the cart and use the Allen wrench provided to screw the bolt clockwise until the front wheel is cetenred between the front fork.(Fig.20)

## Bag Holder Strap Length Adjustment

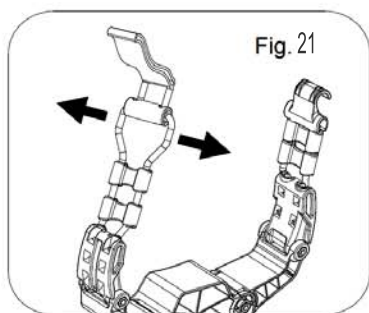


Fig. 21

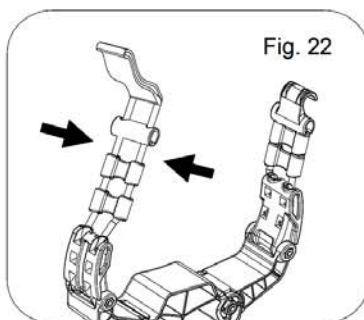


Fig. 22

Refer to the Fig. 21 & Fig. 22 :

1. Pull the elastic strap out of the strap buckle as in fig.21
2. Adjust the strap to the desired length.
3. Push the elastic strap back to the strap buckle as in fig. 22

## **WARRANTY**

CaddyTek Pty Ltd warrants its products to be free of defects and workmanship for one year from the date of purchase. We will either repair or replace defective products at our option.

Normal wear and tear of the product and damage from abnormal use are not considered manufacturer's defect. This warranty does not apply to any claim of physical damage to item(s) used in connection with CaddyTek Pty Ltd products. In the case of deterioration due to normal use we will repair the item for a normal charge. CaddyTek Pty Ltd is the sole judge of any claim or warranty.

For customers in Australia, please contact CaddyTek Pty Ltd for the services. For customers outside of Australia, please contact your local dealer(s) or agent(s) for the warranty services.

**CaddyTek Pty Ltd**

**ABN: 26 154 633 753**

Unit 6, 22-24 Princes Road East

AUBURN NSW 2144

<http://www.caddytek.com.au>