
SIM 5 series Lamp Kit

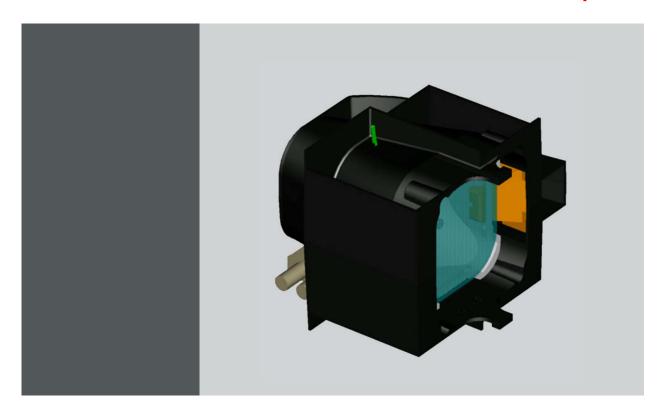

Installation manual

R9841842



Factory: Barco nv, Simulation Division Noordlaan 5, B-8520 Kuurne Phone: +32 56.36.82.11 Fax: +32 56.36.84.86

Support: www.barco.com/esupport Visit us at the web: www.barco.com

Changes

Barco provides this manual 'as is' without warranty of any kind, either expressed or implied, including but not limited to the implied warranties or merchantability and fitness for a particular purpose. Barco may make improvements and/or changes to the product(s) and/or the program(s) described in this publication at any time without notice.

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information in this publication; these changes are incorporated in new editions of this publication.

The latest edition of Barco manuals can be downloaded from the Barco web site www.barco.com/en/signin.

Copyright ©

All rights reserved. No part of this document may be copied, reproduced or translated. It shall not otherwise be recorded, transmitted or stored in a retrieval system without the prior written consent of Barco.

Disposal Information

Waste Electrical and Electronic Equipment



This symbol on the product indicates that, under the European Directive 2012/19/EU governing waste from electrical and electronic equipment, this product must not be disposed of with other municipal waste. Please dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information about recycling of this product, please contact your local city office or your municipal waste disposal service.

For details, please visit the Barco website at: http://www.barco.com/en/AboutBarco/weee

Guarantee and Compensation

Barco provides a guarantee relating to perfect manufacturing as part of the legally stipulated terms of guarantee. On receipt, the purchaser must immediately inspect all delivered goods for damage incurred during transport, as well as for material and manufacturing faults Barco must be informed immediately in writing of any complaints.

The period of guarantee begins on the date of transfer of risks, in the case of special systems and software on the date of commissioning, at latest 30 days after the transfer of risks. In the event of justified notice of complaint, Barco can repair the fault or provide a replacement at its own discretion within an appropriate period. If this measure proves to be impossible or unsuccessful, the purchaser can demand a reduction in the purchase price or cancellation of the contract. All other claims, in particular those relating to compensation for direct or indirect damage, and also damage attributed to the operation of software as well as to other services provided by Barco, being a component of the system or independent service, will be deemed invalid provided the damage is not proven to be attributed to the absence of properties guaranteed in writing or due to the intent or gross negligence or part of Barco.

If the purchaser or a third party carries out modifications or repairs on goods delivered by Barco, or if the goods are handled incorrectly, in particular if the systems are commissioned operated incorrectly or if, after the transfer of risks, the goods are subject to influences not agreed upon in the contract, all guarantee claims of the purchaser will be rendered invalid. Not included in the guarantee coverage are system failures which are attributed to programs or special electronic circuitry provided by the purchaser, e.g. interfaces. Normal wear as well as normal maintenance are not subject to the guarantee provided by Barco either.

The environmental conditions as well as the servicing and maintenance regulations specified in the this manual must be complied with by the customer.

Mercury Notice



This Barco product consists of materials that may contain mercury, which must be recycled or disposed of in accordance with local, state, or country laws:

· Within this system, the lamps in the device contain mercury

Trademarks

Brand and product names mentioned in this manual may be trademarks, registered trademarks or copyrights of their respective holders. All brand and product names mentioned in this manual serve as comments or examples and are not to be understood as advertising for the products or their manufacturers.

TABLE OF CONTENTS

1.	Saf	Safety 3		
	1.1	Safety guidelines	3	
	1.2	Recycling guidelines	3	
2.	Intr	roduction	. 5	
	2.1	Kit description	. 5	
3.	Lar	mp replacement procedure	. 7	
	3.1	Reset lamp runtime	. 7	
	3.2	Removing the rear cover	8	
	3.3	Removing the lamp		
	3.4	Installing the lamp	. 10	
		Installing the rear cover		

1. SAFETY

1.1 Safety guidelines



WARNING: Hot Surface and Risk of Explosion: Switch the projector to stand by and let it cool down for at least 15 minutes. These lamps consist of a quartz arc tube operating at very high temperature and high pressure which may explode suddenly. There is a risk of personal injury and property damage from hot quartz arc tube particles if handled incorrectly.



WARNING: Risk of Electrical Shock: Power down the projector and unplug the power cord from the wall outlet. Once the projector is cooled down and the power is off, continue with the procedure.



WARNING: Lamp Runtime Warning: Do not exceed the indicated maximum total lifetime of the lamp for safe operation in normal power mode. Do not use it longer! Always replace the lamp with the BARCO lamp kit.



WARNING: UV Radiation Exposure: Never light the lamp if the rear cover (lamp cover) of the projector is removed, unless you wear UV radiation eye and skin protection.



WARNING: : Do not operate the projector longer than one minute with the rear cover removed.



CAUTION: : Never operate the projector with only one lamp installed.

1.2 Recycling guidelines



WARNING: Do not break or crush lamps because this may pose health and environmental risks when mercury vapors are released.



CAUTION: To avoid breaking the lamps, repack carefully when storing and transporting them.



CAUTION: Lamps may not be disposed as normal household trash.

Contact your local waste disposal facility for information on the recycling program for HID (High Intensity Discharge) lamps in your area.



Disposal options for mercury-containing lamps

- Recycle through a municipal or solid waste district household hazardous waste collection program in accordance with local regulations.
- Direct shipment to lamp recycler
- · Shipment through a hazardous waste transporter

2. INTRODUCTION

Overview

· Kit description

2.1 Kit description

Kit content

The kit contains following parts:

- 2 UHP lamps;
- This lamp installation manual.

The lamps are compatible with all SIM 5 series.

Lamp description

Type : UHPPower: 250 Watt



Image 2-1 Lamp view

Typical lifetime of the lamp

The typical lifetime, monitored in projector software (NOT GUARANTEED!) is mentioned in the table below.

Projector type	Projector article numbers	Typical lifetime (in hours)
SIM 5+	R9040380 – R9240380	1500
SIM 5R	R9040381 – R9240381	1500
SIM 5W	R9040395 – R9240395	3000

3. LAMP REPLACEMENT PROCEDURE

Overview

- · Reset lamp runtime
- · Removing the rear cover
- · Removing the lamp
- Installing the lamp
- · Installing the rear cover



Resetting the lamp runtime requires access to the hidden menu of the projector. Select *More...* in the *Lamps* menu, and enter the password (by default 0000) followed by Enter to get access.

3.1 Reset lamp runtime

When to reset the lamp runtime?

The lamp runtime should only be reset when placing a new lamp.




WARNING: Lamp runtime reset as well as the lamp replacement can only be done by a Barco authorized technician

Necessary tools

No tools.

How to reset the lamp runtime?

- 1. Press MENU to activate the tool bar
- 2. Press \rightarrow to select the Lamps item
- 3. Press \downarrow to pull down the *Lamps* menu
- 4. Use ↑ or ↓ to select Reset Runtime
- 5. Press \rightarrow to open the Reset Runtime menu
- 6. Use \uparrow or \downarrow to select the lamps to be reset

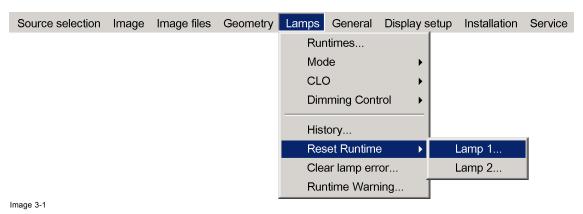

7. Press ENTER

A dialog box is displayed



Image 3-2

- 8. Use ←or →, the numeric keys on the remote, or the keypad to change the serial number of the lamp (serial number 0000000 will not be accepted).
- 9. Select Accept to reset the lamp runtime and to confirm the serial number of the new lamp

3.2 Removing the rear cover



WARNING: Before removing a cover, switch off the mains power and unplug the mains power cord from the wall outlet.

Necessary tools

Crosshead screwdriver Ph2

How to remove the rear cover

1. Remove the cover lock screw



Image 3-3 Rear cover: fixing screw

2. Remove the rear cover



Image 3-4 Rear cover removed

3.3 Removing the lamp

Introduction


This projector has two lamps. The way to remove the lamp is identical for each of lamps. The procedure below describes how to remove **lamp 1**.

Necessary tools

No tools.

How to remove the lamp?

1. Unplug the lamp power connector

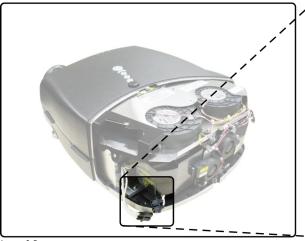

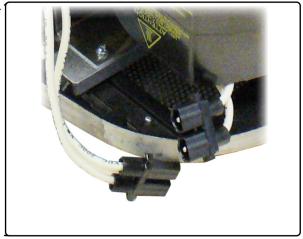
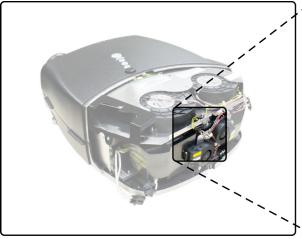


Image 3-5 Lamp 1: unplugging the power connector

2. Pull the lamp locking handle to release the lamp



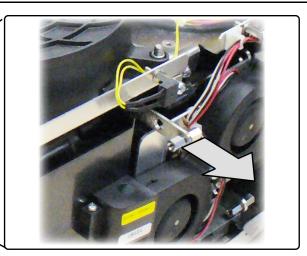


Image 3-6 Lamp 1: unlocking

3. Slide the lamp sidewards, then backwards to remove it



Image 3-7 Lamp 1: removing

3.4 Installing the lamp

Introduction


This projector has two lamps. The way to install the lamp is identical for each of lamps. The procedure below describes how to install **lamp 1**.

Necessary tools

No tools.

How to install the lamp?

1. Make sure that the lamp locking handle is pulled out

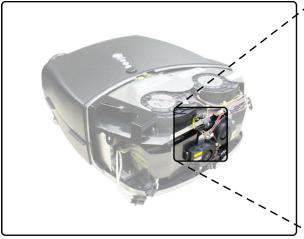

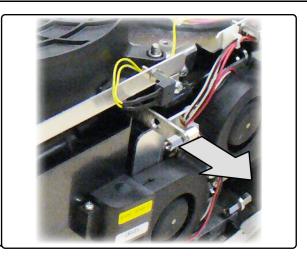


Image 3-8 Lamp 1 locking system must be unlocked

2. Slide in the lamp into its correct position



Image 3-9 Lamp 1: sliding it in its position

3. Push the lamp locking handle to lock the lamp



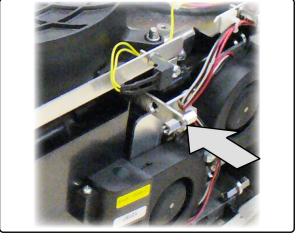


Image 3-10 Lamp 1: locking

4. Plug in the lamp power connector

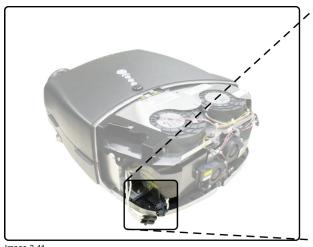




Image 3-11 Lamp 1: make the power connection

3.5 Installing the rear cover

Necessary tools

Crosshead screwdriver Ph2

How to install the rear cover

- 1. Put the rear cover into its correct position
- 2. Insert and tighten the cover lock screw



Image 3-12 Rear cover: fixing screw