



# DLP PROJECTION TV OWNER'S MANUAL

Please read this manual carefully before operating your set.  
Retain it for future reference.  
Record model number and serial number of the set.  
See the label attached on the back cover and quote this  
information to your dealer when you require service.

Model number :  
Serial number :

FOR THE GUARANTEE TERMS & CONDITIONS,  
PLEASE REFER TO BACK COVER OF THIS MANUAL

P/NO : 3828VA0394T (MB02JB, 100K/092V TX)  
(3840VA0024A/B, 3840VA0016C, 373-026F)

---

# Contents

---

<b>Installation</b>	<b>3</b>
<b>Location and function of controls</b>	<b>4</b>
Remote control handset	
Battery installation	
Front panel / Rear panel	
<b>Basic operation</b>	<b>8</b>
On and off / Programme selection	
Volume adjustment / Quick view / Mute function	
On screen language selection (option)	
<b>On screen menus</b>	<b>9</b>
Menu selection	
<b>SETUP menu</b>	<b>10</b>
Auto programme tuning	
Manual programme tuning	
Fine tuning / Programme edit	
Calling the programme table	
<b>PICTURE menu</b>	<b>15</b>
PSM(Picture Status Memory)	
Picture adjustment	
<b>AUDIO menu</b>	<b>16</b>
SSM (Sound Status Memory)	
AVL (Auto Volume Leveler)	
Balance adjustment / Equalizer (option)	
Sound output selection / Stereo/Dual reception	
NICAM reception	
<b>TIME menu</b>	<b>20</b>
Auto Sleep / Sleep timer	
<b>SPECIAL menu</b>	<b>21</b>
Main picture source selection	
Auto AV switching	
Child lock / Picture format	
<b>Picture in picture (PIP) function</b>	<b>23</b>
On and off / Input mode selection for sub picture	
Swapping between main and sub pictures	
Program selection for sub picture / Sub picture size	
Sub picture freeze / Sub picture position change	
<b>Connection of external equipment</b>	<b>27</b>
Aerial socket / Euro scart Sockets	
Audio out sockets (AUDIO OUT)	
DVD input sockets	
DTV input sockets	
Audio/Video input sockets	
S-Video/Audio input sockets (option)	
<b>Troubleshooting check list</b>	<b>31</b>

---

---

# Installation

---

## Power

This set operates on an AC mains supply, the voltage is as indicated on the label on the back cover. Never apply DC power to the set. In the event of thunderstorms or powercuts, please pull out the aerial and mains plugs.

## Warning

To prevent fire or shock hazard, do not expose the set to rain or moisture.

## Wiring (in U.K. only)

This set is supplied with a BS 1363 approved 13 amp mains plug, fused at 5 amp. When replacing the fuse always use a 5 amp BS 1362, BSI or ASTA approved type. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer or "LG Electronics U.K. Ltd."

If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

## Warning (in U.K. only)

A mains plug removed from the mains lead of this set must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket.

Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol or coloured green or green and yellow.

If any other plug is fitted, use a 5 amp fuse, either in the plug, or at the distribution board.

## Important (in U.K. only)

The wires in this mains lead are coloured in accordance with the following codes:

BLUE: NEUTRAL  
BROWN: LIVE

As the colours of the wires in the mains lead of this set may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

## Service

Never remove the back cover of the set as this can expose you to very high voltage and other hazards. If the set does not operate properly, unplug it and call your dealer.

## Aerial

Connect the aerial cable to the socket marked 175  $\Omega$  on the back cover. For the best reception an outdoor aerial should be used.

## Location

Position your set so that no bright light or sunlight falls directly onto the screen. Care should be taken not to expose the set to any unnecessary vibration, moisture, dust or heat. Also ensure that the set is placed in a position to allow a free flow of air. Do not cover the ventilation openings on the back cover.

Avoid having a fixed image remaining on the screen for a long period of time. Typically a frozen still picture from a VCR or DVD, 4:3, 14:9 or 16:9 picture format or if a CH label is present the fixed image may remain visible on the screen.

 
**Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.**

# Location and function of controls

All the functions can be controlled with the remote control handset. Some functions can also be adjusted with the buttons on the front panel of the set.

## Remote control handset

Before you use the remote control handset, please install the batteries. See the next page.

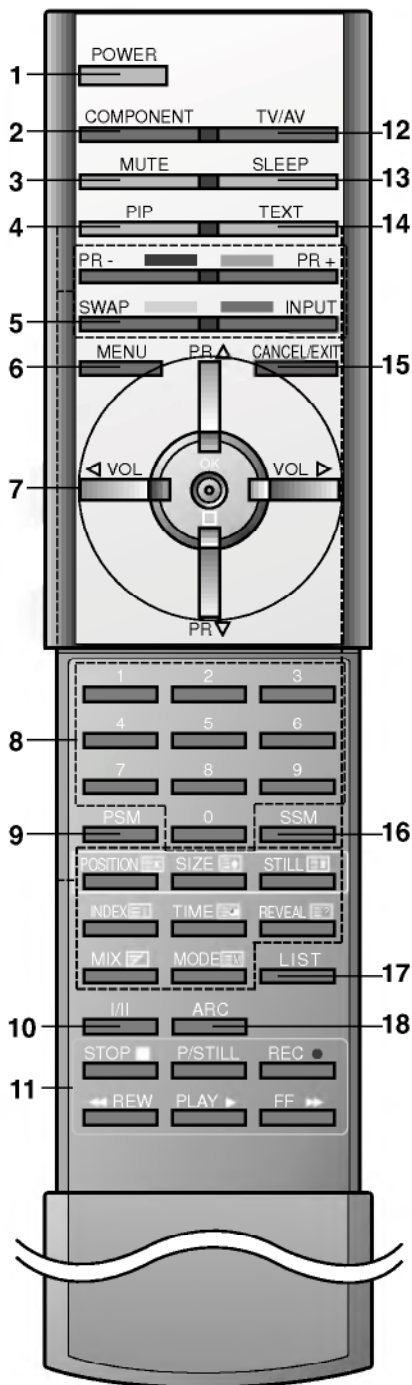

(With TELETEXT)

1. **POWER**  
switches the set on from standby or off to standby.
2. **COMPONENT**  
selects **Component1**, or **Component2** modes.
3. **MUTE**  
switches the sound on or off.
4. **PIP BUTTONS**  
**PIP**  
switches the sub picture on or off.  
**PR +/-**  
selects a programme for the sub picture.  
**SWAP**  
alternates between main and sub picture.  
**INPUT**  
selects the input mode for the sub picture.  
**SIZE**  
adjusts the sub picture size.  
**STILL**  
freezes motion of the sub picture.  
**POSITION**  
relocates the sub picture in clockwise direction.
5. **SWAP**  
returns to the previously viewed programme.
6. **MENU**  
selects a menu.
7. **▲ / ▼ (Programme Up/Down)**  
selects a programme or a menu item.  
switches the set on from standby.  
**◀ / ▶ (Volume Up/Down)**  
adjusts the volume.  
adjusts menu settings.  
**OK**  
accepts your selection or displays the current mode.
8. **NUMBER BUTTONS**  
switches the set on from standby or directly select a number.
9. **PSM (Picture Status Memory)**  
recalls your preferred picture setting.
10. **I/II**  
selects the language during dual language broadcast.  
selects the sound output.
11. **VCR BUTTONS**  
control a LG video cassette recorder.


## Location and function of controls

 - 12. TV/AV**  
selects the remote operating mode.  
switches the set on from standby.
- 13. SLEEP**  
sets the sleep timer.
- 14. TELETEXT BUTTONS**  
These buttons are used for teletext.  
For further details, see the 'Teletext' section.
- 15. CANCEL/EXIT**  
Clears all on-screen displays and returns to TV viewing from any menu.
- 16. SSM (Sound Status Memory)**  
recalls your preferred sound setting.
- 17. LIST**  
displays the programme table.
- 18. ARC (Aspect Ratio Control)**  
changes the picture format.


**Note :** In teletext mode, the **PR +/-**, **SWAP** and **INPUT** buttons are used for teletext function.

### Battery installation

The remote control handset is powered by two AAA type batteries. To load the batteries, turn the remote control handset over and open the battery compartment. Install two batteries as indicated by the polarity symbols (⊕ and ⊖) marked inside the compartment.

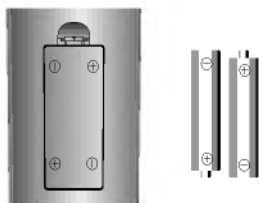

 **Note :** To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time.

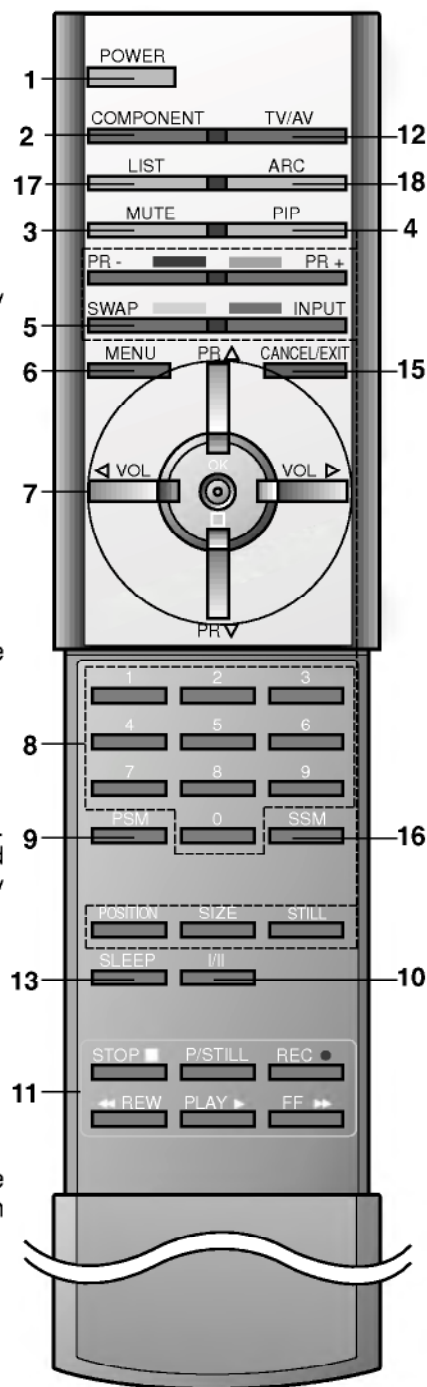


(Without TELETEXT)

## Location and function of controls
 
### Front panel

Lamp indicator, temperature indicator, and operation indicator, located side the front panel controls reveal the operating status of the DLP (Digital Light Processing) projection TV.


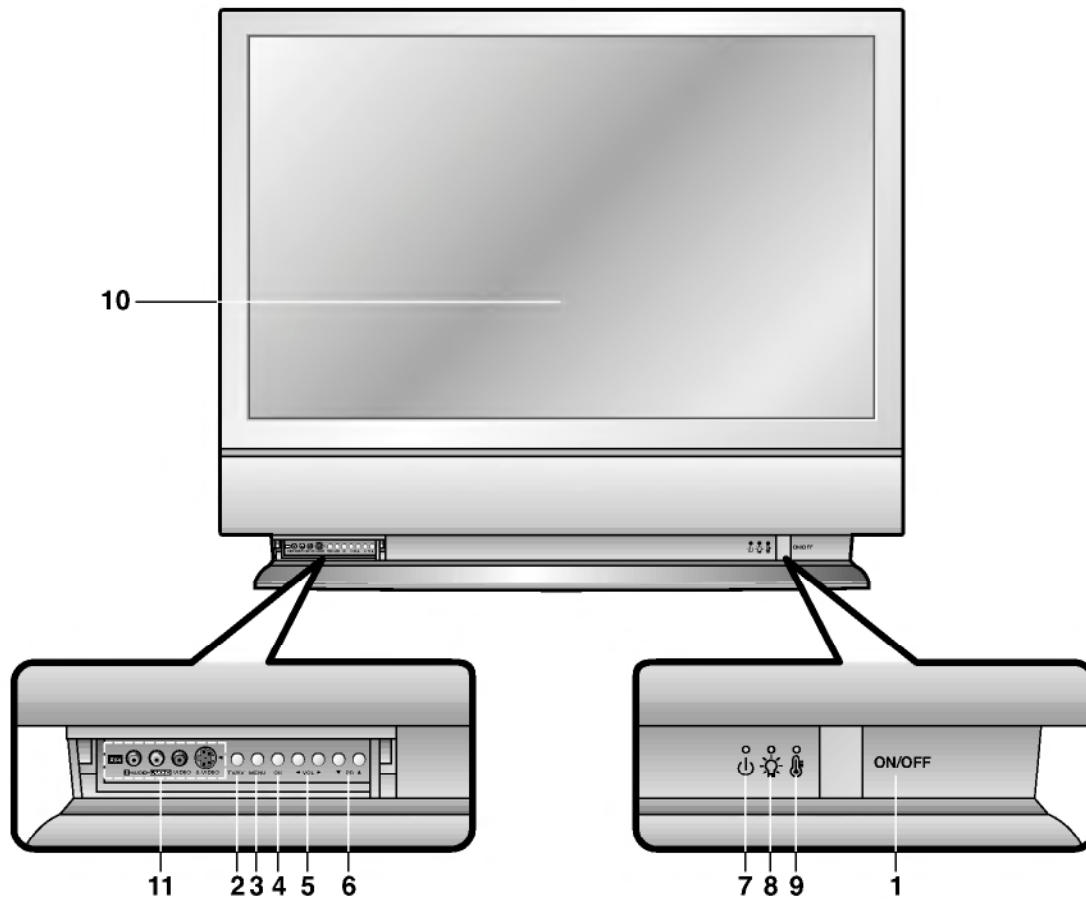


1. **MAIN POWER (ON/OFF)**  
switches the set on or off.
2. **TV/AV**  
selects TV or AV mode.  
switches the set on from standby.
3. **MENU**  
selects a menu.
4. **OK**  
accepts your selection or displays the current mode.
5. **◀ / ▶ (Volume Down/Up)**  
adjusts the volume.  
adjusts menu settings.
6. **▲ / ▼ (Program Up/Down)**  
selects a program or a menu item.  
switches the set on from standby.
7. **OPERATION INDICATOR** (Refer to p.7)
8. **LAMP INDICATOR** (Refer to p.7)
9. **TEMPERATURE INDICATOR** (Refer to p.7)
10. **REMOTE CONTROL SENSOR**
11. **AUDIO/VIDEO IN SOCKETS (AV4)**  
Connect the audio/video out sockets of external equipment to these sockets.  
**S-VIDEO/AUDIO IN SOCKETS (S-VIDEO)**  
Connect the S-VIDEO out socket of an VCR to the **S-VIDEO** socket.  
Connect the audio out sockets of the VCR to the audio sockets as in **AV4**.

**Note :** There might be a faint white trace on the center of the screen according to the position. This is normal and is a characteristic of the screen.

# Location and function of controls
  
## Rear panel

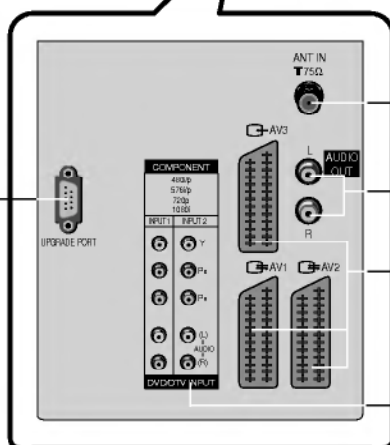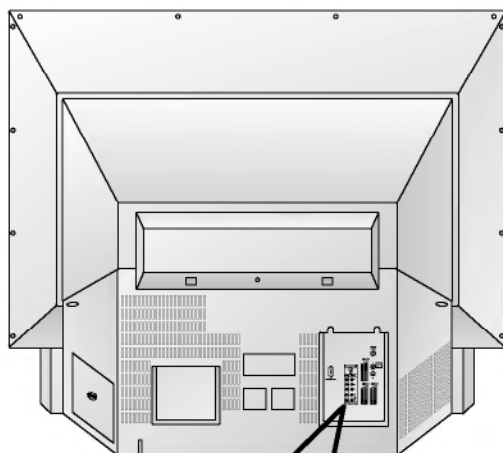

### UPGRADE PORT

This port is used to upgrade the software version and debug without changing the hardware. Be careful not to use this port. Just contact your dealer or service centre.

AERIAL SOCKET

AUDIO OUT SOCKETS

EURO SCART SOCKETS

DVD/DTV INPUT SOCKETS

## •Status Indicators

Operation Indicator	Off	Power cord is not connected.
	Red	Power Cord is connected, unit is on standby.
	Green	On
	Orange (flashing)	Preparing operation in standby.
Lamp Indicator	Orange	Projection lamp is reaching the end of its life and needs to be replaced with a new lamp.
	Green (flashing)	The lamp cover is not closed.
Temperature Indicator	Orange	The set is overheating.
	Red	The set has shut down due to overheating.
	Red (flashing)	The set has shut down, check the cooling fan.

 
# Basic Operation

## On and off

1. Before turning the set on, be sure that the main power switch on the set is pushed on.  
When the main switch is pushed on, the LED will be lit up red. This mode is Stand-by.
2. If the set is in stand-by mode, press the POWER, ▲ / ▼, TV/AV, COMPONENT or NUMBER button on the remote control handset to turn it on fully. The LED will blink orange for a while and then lit up green when the power is successfully on.
3. To turn the set off, press the power button on the remote control handset. The set reverts to the stand-by mode.

### Note :

- a. The lamp cooling fan will continue to spin for approximately 120 seconds after the power is turned off by the remote control handset.
- b. Normally, don't push off the main power switch. Instead, use the remote control to turn the power off.
- c. When the set is turned on again immediately after turning off, it takes around 30 to 50 seconds for sufficient cooling.
- d. When the power is switched off using the main power switch on the set, the internal cooling system also stops operating. Therefore, power-on by main power switch takes around 30 to 50 seconds for sufficient cooling.
- e. Forced Power-Off : When the set decides itself that the circumstance is not proper for operation, the set will go to the stand-by mode automatically. Please retry to turn on the set after a short period of time.
- f. When the set is switched on, there might be a strange sound from the set.

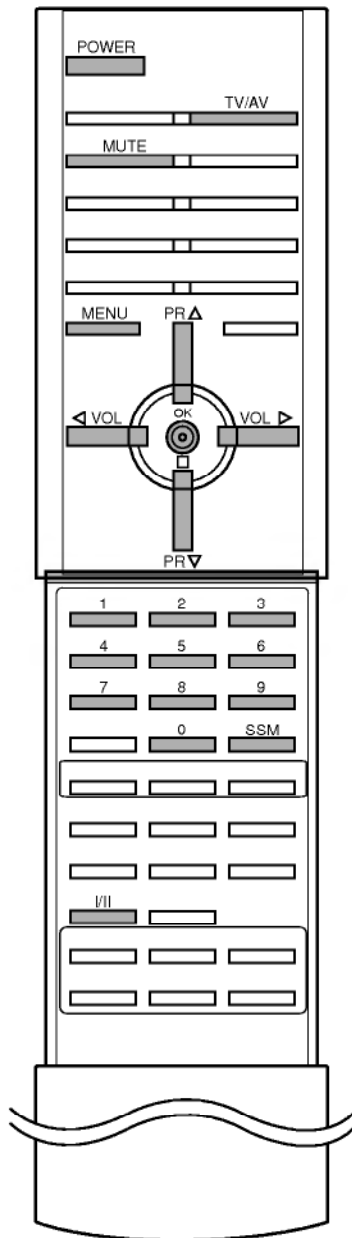

## Programme selection

You can select a programme number with the ▲ / ▼ or NUMBER buttons.

 
## Volume adjustment

Press the ◀ / ▶ button to adjust the volume.

## Quick view

Press the SWAP button to view the last programme you were watching.

## Mute function

Press the MUTE button. The sound is switched off and the display  appears.

You can cancel it by pressing the MUTE, ◀ / ▶, SSM, VII button.

## On screen language selection (option)

The menu can be displayed on the screen in desired language. First select your language.

1. Press the MENU button and then ▲ / ▼ button to select the Special menu.
2. Press the ▶ button and then the ▲ / ▼ button to select **Language**.
3. Press the ▶ button and then the ▲ / ▼ button to select your desired language.
4. Press the OK or ◀ button.  
All the on screen displays will appear in the selected language.
5. Repeatedly press the MENU button to return to normal TV viewing.



 
# On Screen Menus

The dialogue between you and your set takes place on screen with an operator menu. The buttons required for the operating steps are also displayed.



## Menu selection

1. Press the **MENU** button and then **▲** / **▼** button to display each menu.
2. Press the **▶** button and then the **▲** / **▼** button to select a menu item.
3. Repeatedly press the **MENU** button to return to normal TV viewing.

**Note** : On some models, the **BG**, **L** will display.

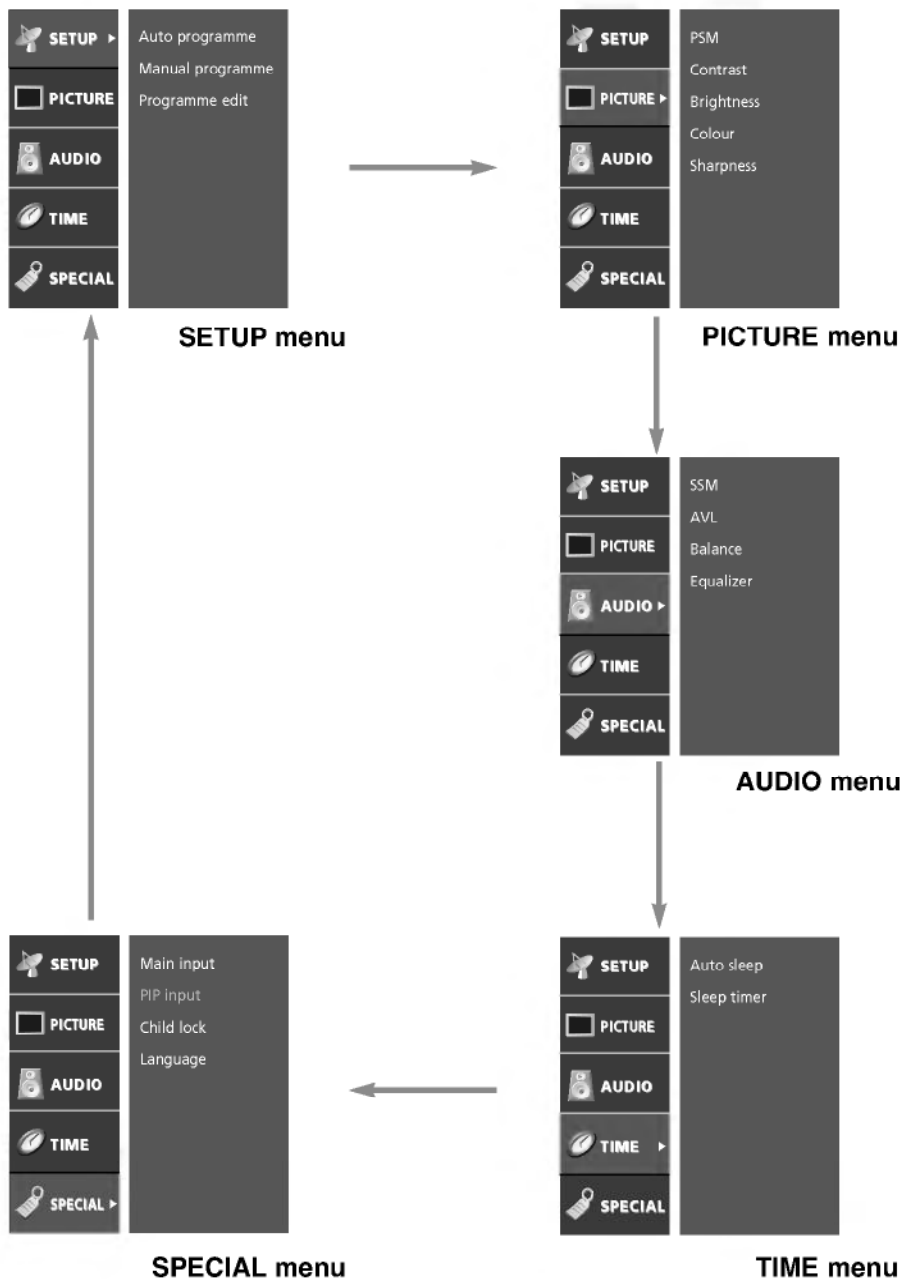

# SETUP Menu

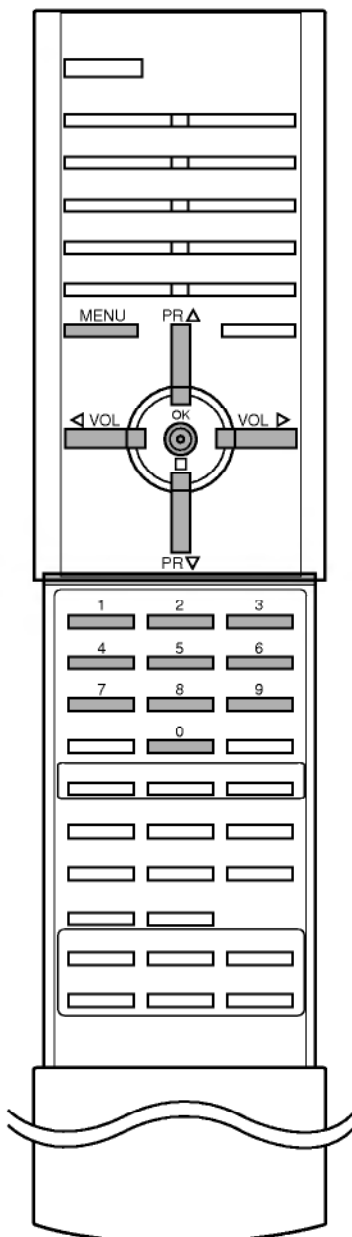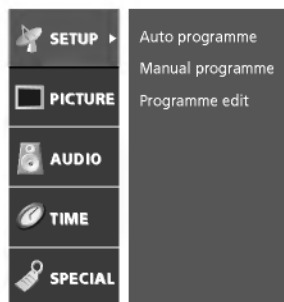  


Up to 100 TV stations can be stored in this set by programme numbers (0 to 99). Once you have preset the stations, you will be able to use the ▲ / ▼ or NUMBER buttons to scan the stations you programmed. Stations can be tuned using automatic or manual modes.

## Auto programme tuning

 
All stations that can be received are stored by this method. It is recommended that you use auto program during installation of this set.

1. Press the **MENU** button and then ▲ / ▼ button to select the **SETUP** menu.
2. Press the ► button and then ▲ / ▼ button to select **Auto programme**.
3. Press the ► button to select **System**. Select a TV system with the ▲ / ▼ button;

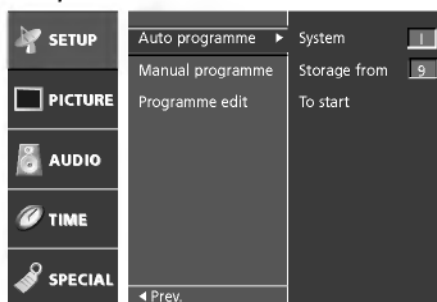

- L** : SECAM L/L' (France: SECAM-L models only)
- BG** : PAL B/G, SECAM B/G (Europe/East Europe)
- I** : PAL I/II (U.K./Ireland)
- DK** : PAL D/K, SECAM D/K (East Europe)

 4. Press the ► button to select **Storage from**. Select the beginning programme number with the ▲ / ▼ button or NUMBER buttons on the **Storage from** menu.
5. Press the ► button to select **To start**.
6. Press the ► button to begin auto programming.

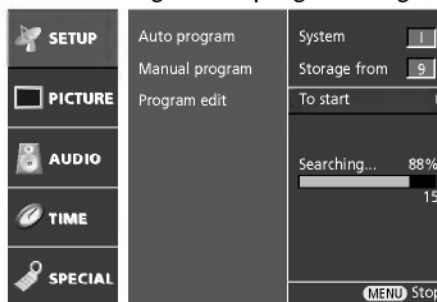

All receivable stations are stored. The station name is stored for stations which broadcast VPS (Video Programme Service), PDC (Programme Delivery Control) or TELETXT data. If no station name can be assigned to a station, the channel number is assigned and stored as **C** (V/UHF 01-69) or **S** (Cable 01-47), followed by a number.

To stop auto programming, press the **MENU** button.

When auto programming is completed, the **Programme edit** menu appears on the screen. See the 'Program Edit' section to edit the stored programme.


7. Repeatedly Press the **MENU** button to return to normal TV viewing.

# SETUP Menu
 
## Manual programme tuning


Manual programme lets you manually tune and arrange the stations in whatever order you desire. Also you can assign a station name with five characters to each programme number.

1. Press the **MENU** button and then **▲ / ▼** button to select the **SETUP** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Manual programme**.
3. Press the **▶** button to display the **Manual programme** menu.
4. Press the **▶** button to select **System**. Select a TV system with the **▲ / ▼** button;

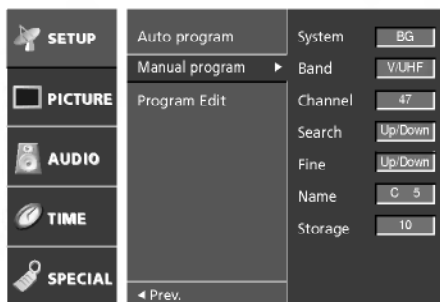

- L** : SECAM L/L' (France: SECAM-L models only)
- BG** : PAL B/G, SECAM B/G (Europe/East Europe)
- I** : PAL I/II (U.K./Ireland)
- DK** : PAL D/K, SECAM D/K (East Europe)

 5. Press the **▶** button to select **Band**. Press the **▲ / ▼** button to select **V/UHF** or **Cable** as required.
6. Press the **▶** button to select **Channel**. Select the desired channel number with the **▲ / ▼** button or **NUMBER** buttons. If possible, select the channel number directly with the number buttons.
7. Press the **▶** button to select **Search**. Press the **▲ / ▼** button to commence searching. If a station is found the search will stop.
8. If this station is the one required, press the **◀ / ▶** button to select **Storage**. Select the desired programme number (0 to 99) with the **▲ / ▼** button or **NUMBER** buttons.
9. Press the **OK** button to store it.
10. To store another station, repeat steps 4 to 9.
11. Repeatedly press the **MENU** button to return to normal TV viewing.

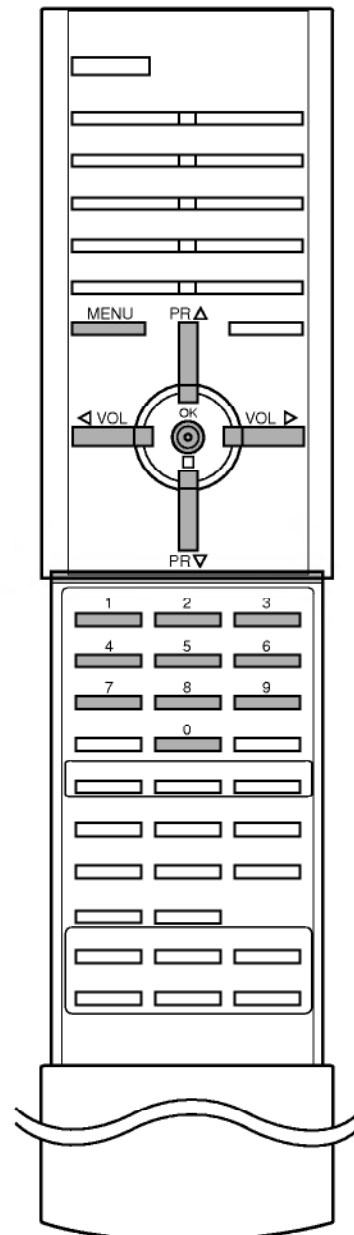


# SETUP Menu



## Assigning a station name

 
1. Repeat the 'Manual programme tuning' steps 1 to 3.
2. Press the ► button to select **Name**.
3. Press the ▲ button. You can use a blank, +, -, the numeric 0 to 9 and the alphabet A to Z.  
With the ▼ button you can select in the opposite direction.
4. Select the next position by pressing the ► button and then take your choice of the second character, and so on.
5. Press the **OK** button.
6. Repeatedly press the **MENU** button to return to normal TV viewing.

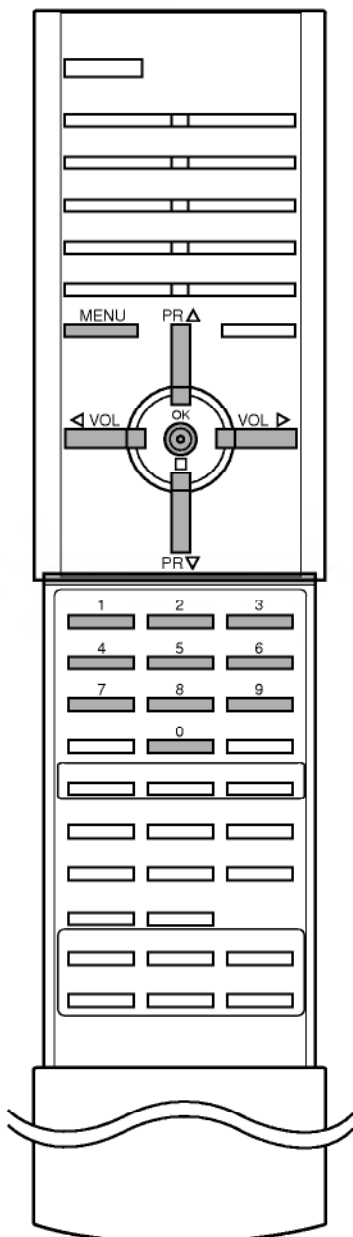

## Fine tuning

Normally fine tuning is only necessary if reception is poor.

 1. Repeat the 'Manual programme tuning' steps 1 to 3.
2. Press the ► button to select **Fine**.
3. Press the ▲ / ▼ button to fine tune for the best picture and sound.

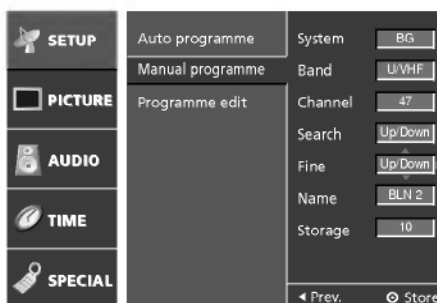


4. Press the **OK** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.  
The finely tuned program will be indicated by yellow number during program selection.

# SETUP Menu
 
## Programme edit

This function enables you to delete or skip the stored programmes. Also you can move some stations to other programme numbers or copy a blank station data into the selected programme number.

1. Press the **MENU** button and then **▲ / ▼** button to select the **SETUP** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Programme edit**.
3. Press the **▶** button to display the **Programme edit** menu.

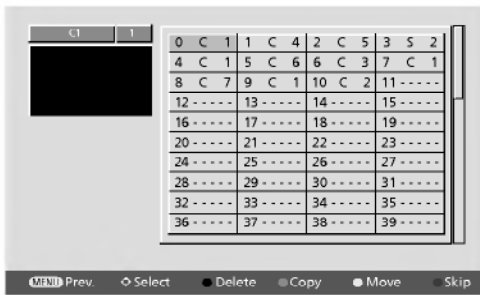

### Deleting a programme

1. Select a programme to be deleted with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **RED** button twice.  
The selected programme is deleted, all the following programmes are shifted up one position.

### Copying a programme

1. Select a programme to be copied with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **GREEN** button.  
All the following programmes are shifted down one position.

### Moving a programme

 
1. Select a programme to be moved with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **YELLOW** button.
3. Move the programme to the desired programme number with the **▲ / ▼** or **◀ / ▶** button.
4. Press the **YELLOW** button again to release this function.

### Skipping a programme number

1. Select a programme number to be skipped with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **BLUE** button. The skipped programme turns to blue.
3. Press the **BLUE** button again to release the skipped programme.

When a programme number is skipped it means that you will be unable to select it using the **▲ / ▼** button during normal TV viewing. If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the programme edit or table menu.

Repeatedly press the **MENU** button to return to normal TV viewing.

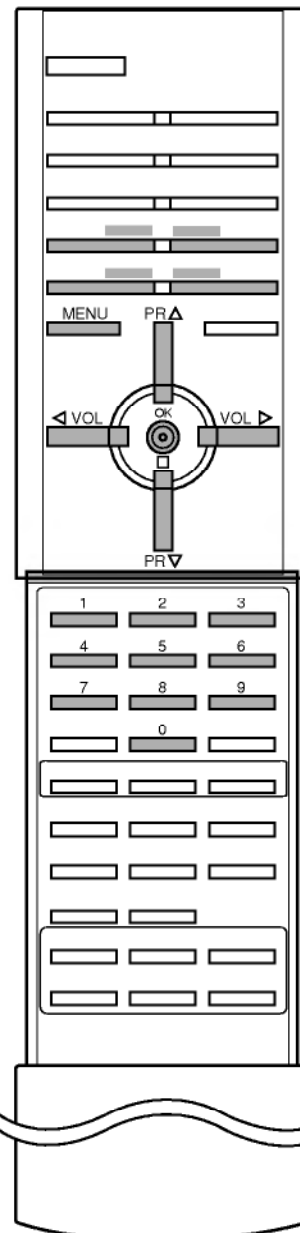



# SETUP Menu

## Calling the programme table

You can check the programmes stored in the memory by displaying the program table.

### Displaying program table

  Press the **LIST** button to display the Programme table menu. The programme table appears on the screen.

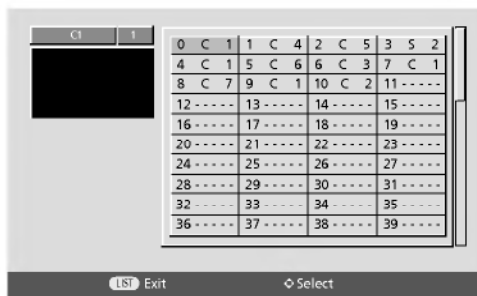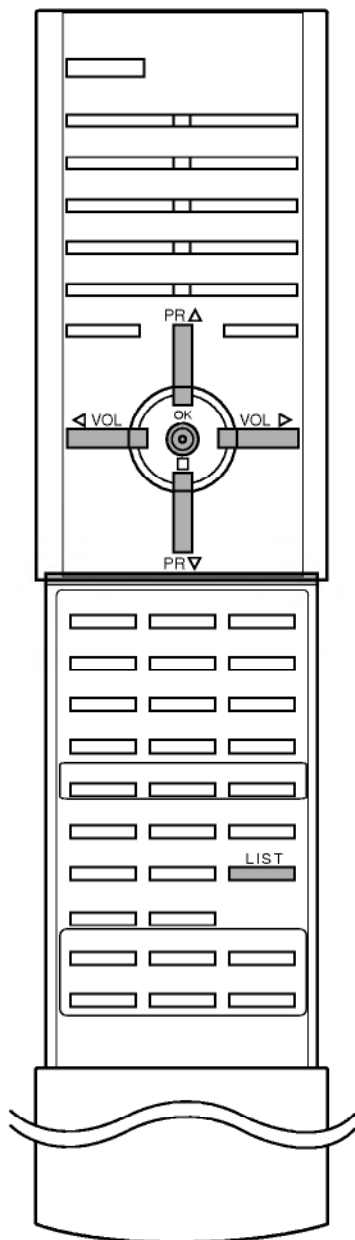

### Note :

- You may find some blue highlighted programmes shown. They have been set up in the program edit mode.
- Some programmes with the channel number shown in the program table indicate there is no station name assigned.

### Selecting a programme in the programme table

Select a programme with the ▲ / ▼ or ◀ / ▶ button. The set switches to the chosen programme number.

### Paging through a programme table

There are 3 programme table pages in which contain 100 programmes.

 
 
Pressing the ▲ / ▼ or ◀ / ▶ button repeatedly turns the pages.

Press the **LIST** button to return to normal TV viewing.

# PICTURE Menu

## PSM (Picture Status Memory)

1. Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.
2. Press the ► button and then ▲ / ▼ button to select **PSM**.
3. Press the ► button and then ▲ / ▼ button to select a picture setting on the **PSM** pull-down menu.

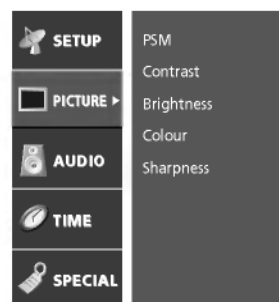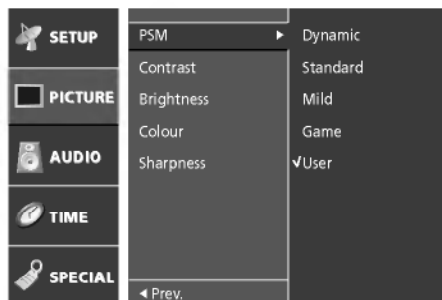


4. Press the **OK** or ◀ button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

## Picture adjustment

 
You can adjust picture contrast, brightness, color intensity, sharpness and tint (NTSC AV only) to the levels you prefer.

1. Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.
2. Press the ► button and then ▲ / ▼ button to select the desired picture item.
3. Press the ► button and then ◀ / ▶ button to make appropriate adjustments, then it will be stored for the picture **User**.

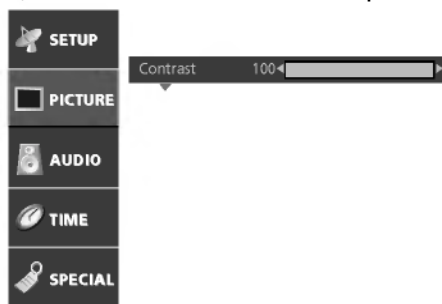


4. Press the **OK** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

 To recall your preferred setting, press the **PSM** button until the desired picture (**Dynamic**, **Standard**, **Mild**, **Game** or **User**) appears. The picture **Dynamic**, **Standard**, **Mild** and **Game** are programmed for good picture reproduction at the factory and cannot be changed.

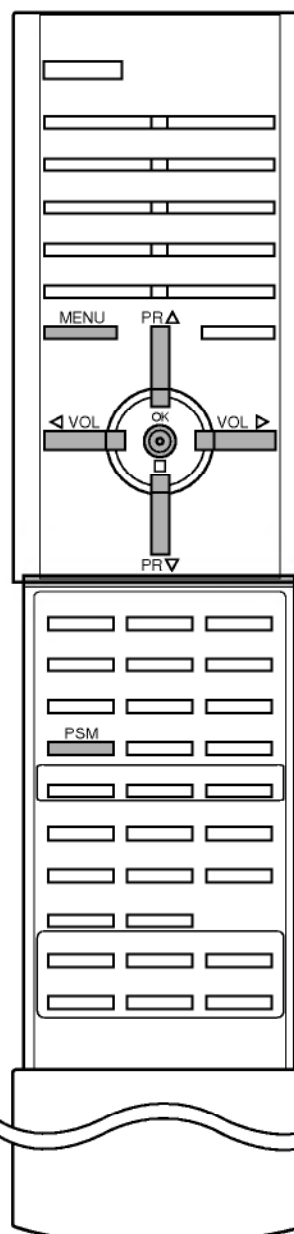



# AUDIO MENU

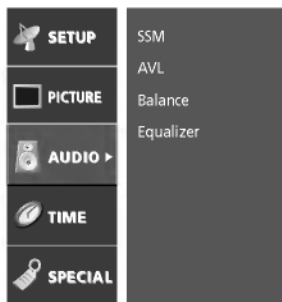 

## SSM (Sound Status Memory)

You can select your preferred sound setting; Dolby Virtual, Flat, Music, Movie, or Speech and you can also adjust the sound frequency of equalizer, balance. If you switch AVL to on, the set automatically keeps on an equal volume level even if you change programmes.

  1. Press the **MENU** button and then **▲ / ▼** button to select the AUDIO menu.
2. Press the **▶** button and then **▲ / ▼** button to select **SSM**.
3. Press the **▶** button and then **▲ / ▼** button to select a sound setting on the **SSM** pull-down menu.

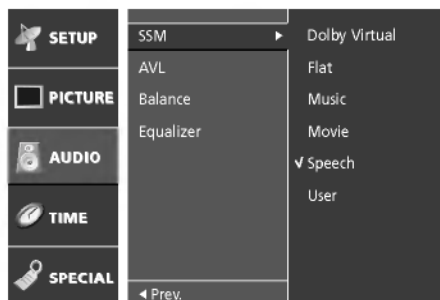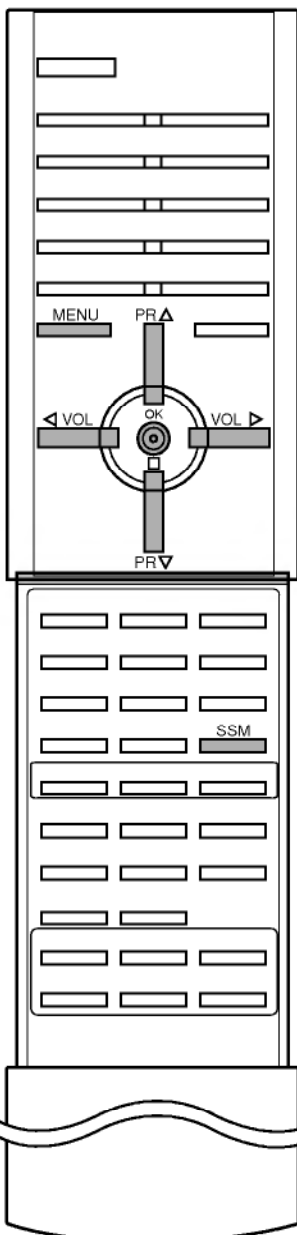

4. Press the **OK** or **◀** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

### Dolby Virtual

Dolby Virtual lets you experience panoramic effects of sound.

To recall your preferred setting, press the **SSM** button until the desired sound (**Dolby Virtual**, **Flat**, **Music**, **Movie**, **Speech** or **User**) appears. The sound **Dolby Virtual**, **Flat**, **Music**, **Movie** and **Speech** are programmed for good sound reproduction at the factory and cannot be changed.

**Note :** If you press the **SSM** button after making appropriate adjustment on the **Equalizer** sub menu, the display User automatically appears even though you have already set a factory preset setting; **Dolby Virtual**, **Flat**, **Music**, **Movie** or **Speech**.

 


# AUDIO MENU

## AVL (Auto Volume Leveler)

If you select **AVL On**, the set automatically keeps on an equal volume level even if you change programmes.

1. Press the **MENU** button and then **▲ / ▼** button to select the **AUDIO** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **AVL**.
3. Press the **▶** button and then **▲ / ▼** button to select **On** or **Off** on the **AVL** pull-down menu.

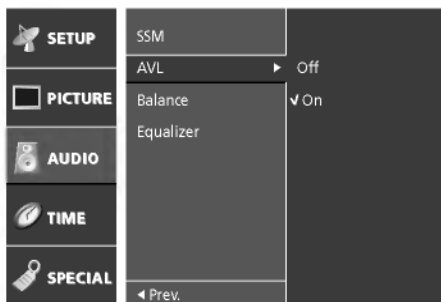


4. Press the **OK** or **◀** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.



## Balance adjustment

 You can adjust balance.


1. Press the **MENU** button and then **▲ / ▼** button to select the **AUDIO** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Balance**.
3. Make desired adjustment with the **◀ / ▶** button on the Balance pull-down menu.

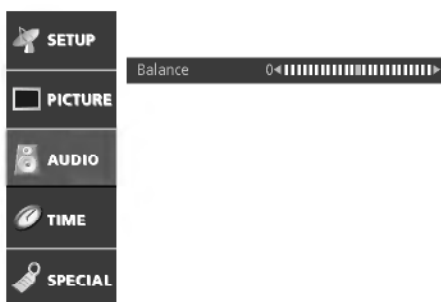

  4. Press the **OK** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

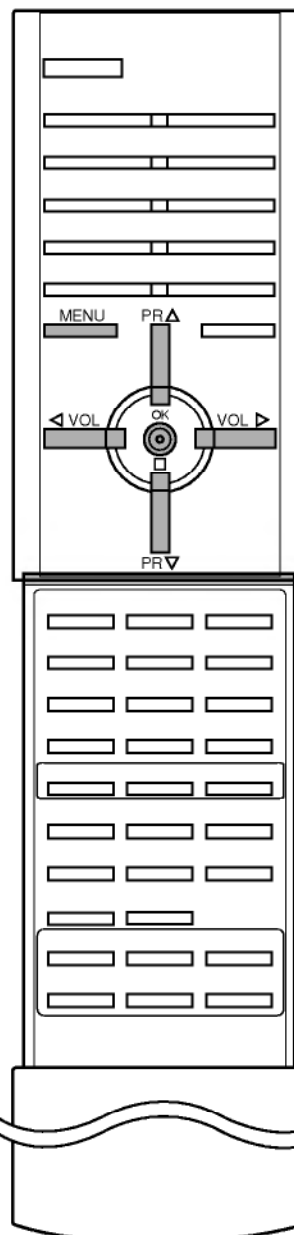
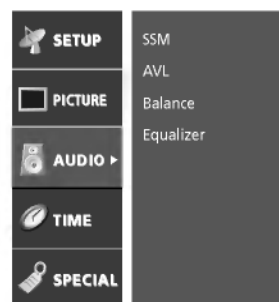


# AUDIO MENU

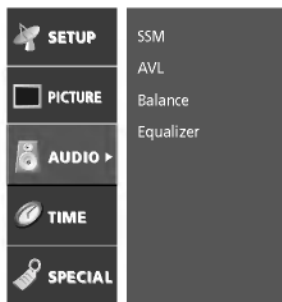 

## Equalizer (option)

  1. Press the **MENU** button and then **▲ / ▼** button to select the **AUDIO** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Equalizer**.
3. Press the **▶** button in **Equalizer** to display the **Equalizer** sub menu.

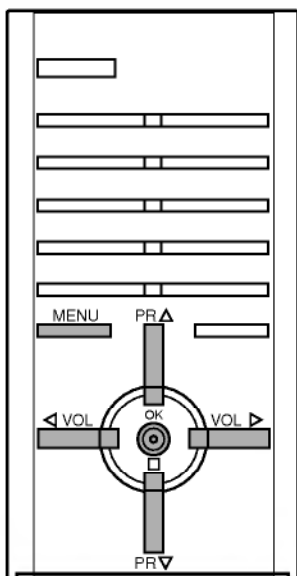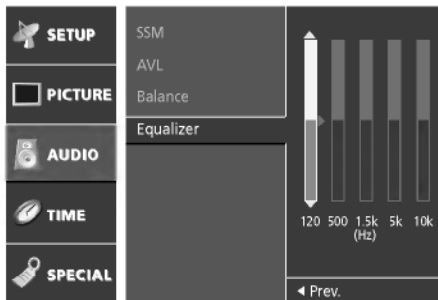


4. Select a sound band by pressing the **◀ / ▶** button.
5. Make appropriate sound level with the **▲ / ▼** button.
6. Press the **OK** button.
7. Repeatedly press the **MENU** button to return to normal TV viewing.

## Sound output selection

 In AV, Component mode, you can select output sound for the left and right loudspeakers.

Repeatedly press the **VII** button to select the sound output.

- L+R** : Audio signal from audio L input is sent to the left loud speaker and audio signal from audio R input is sent to the right loud speaker.
- L+L** : Audio signal from audio L input is sent to left and right loudspeakers.
- R+R** : Audio signal from audio R input is sent to left and right loudspeakers.

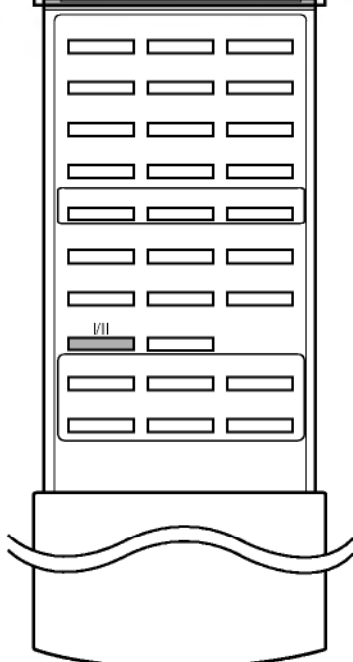

# AUDIO MENU

## Stereo/Dual reception

When a program is selected, the sound information for the station appears after the program number and station name disappear.

Broadcast	On Screen Display
Mono	<b>MONO</b>
Stereo	<b>STEREO</b>
Dual	<b>DUAL I</b>

## Mono sound selection

In stereo reception if the stereo signal is weak, you can switch to mono by pressing the **I/II** button twice. In mono reception the depth of sound is improved. To switch back to stereo, press the **I/II** button twice again.

## Language selection for dual language broadcast

If a program received in two languages (dual language), you can switch to **DUAL I**, **DUAL II** or **DUAL I+II** by pressing the **I/II** button repeatedly.

**DUAL I** sends the primary broadcast language to the loudspeakers.

**DUAL II** sends the secondary broadcast language to the loudspeakers.

 
**DUAL I+II** sends a separate language to each loudspeaker.

## NICAM reception


If your set is equipped with the receiver for NICAM reception, the high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of received broadcast as follows by pressing the **I/II** button repeatedly.

1. When NICAM mono is received, you can select **NICAM MONO** or FM MONO.
2. When NICAM stereo is received, you can select **NICAM STEREO** or FM MONO. If the stereo signal is weak, switch to FM mono.
3. When NICAM dual is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **MONO**.

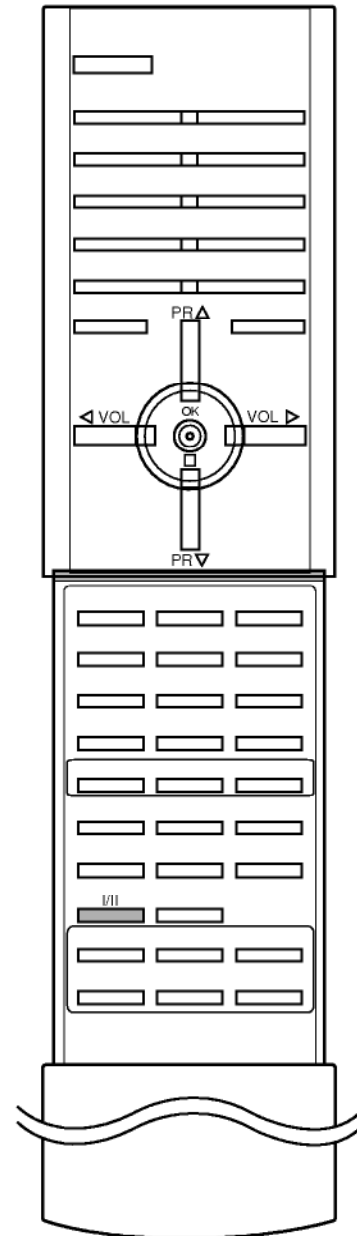


# TIME MENU

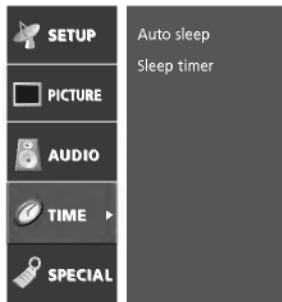 

## Auto sleep

If there is no input signal, the set will turn off automatically after 10 minutes.

 1. Press the **MENU** button and then **▲ / ▼** button to select the Time menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Auto sleep**.
3. Press the **▶** button and then **▲ / ▼** button to select **On** or **Off**.

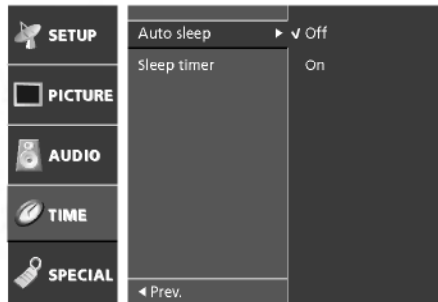


4. Press the **OK** or **◀** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

## Sleep timer

 You don't have to remember to switch the set off before you go to bed. The sleep timer automatically switches the set to standby after the preset time elapses.

1. Press the **MENU** button and then **▲ / ▼** button to select the Time menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Sleep timer**.
3. Press the **▶** button and then **▲ / ▼** button to select a timer setting on the **Sleep timer** pull-down menu.
4. Press the **OK** or **◀** button.

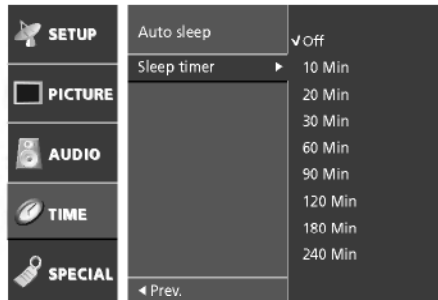


5. Repeatedly press the **MENU** button to return to normal TV viewing.

Press the **SLEEP** button to select the number of minutes. The display will appear on the screen, followed by **10, 20, 30, 60, 90, 120, 180** and **240**. The timer begins to count down from the number of minutes selected.

### Note :

 - a. To view the remaining sleep time, press the **SLEEP** button once.
- b. To cancel the sleep time, repeatedly press the **SLEEP** button until the display **Off** appears.
- c. When you switch the set off, the set releases the preset sleep time.

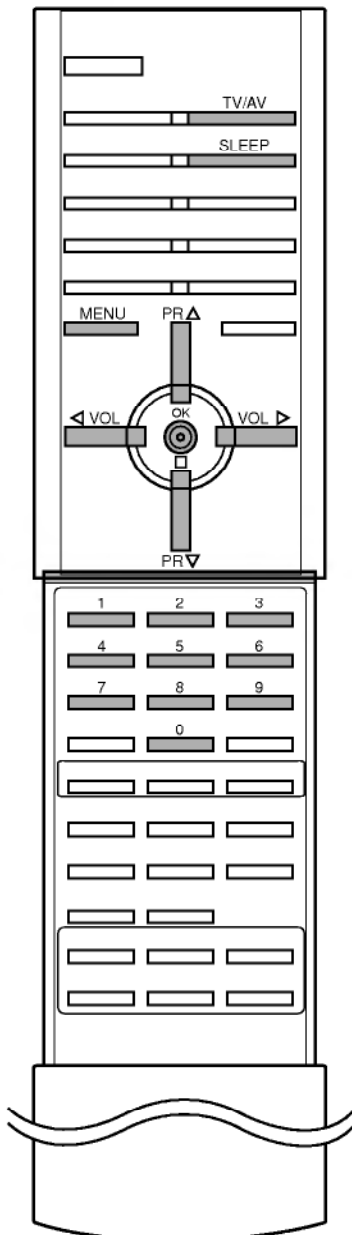


# SPECIAL MENU

## Main Picture Source Selection

Inputs can be set for TV, AV or COMPONENT mode. AV mode is used when a video cassette recorder (VCR), or other equipment is connected to the set.

**Note :** When a VCR is connected via the aerial socket the set is used in TV mode. See the 'Connection of external equipment' section.

 1. Press the **MENU** button and then **▲ / ▼** button to select the SPECIAL menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Main input**.
3. Press the **▶** button and then **▲ / ▼** button to select **TV, AV1, AV2, S-Video2, AV3, AV4, Component 1** or **Component 2**.

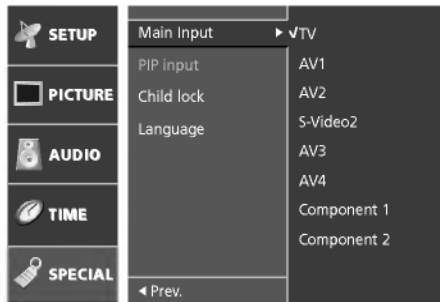

- AV1 : VCR connected to the Euro scart socket 1 on the set
- AV2 : VCR connected to the Euro scart socket 2 on the set
- S-Video2 : VCR connected to the Euro scart socket 2 on the set
- AV3 : VCR connected to the Euro scart socket 3 on the set
- AV4 : VCR connected to the **AV4** sockets on the set
- Component 1/2 : DVD or SET-TOP Box connected to the **DVD/DTV INPUT** sockets on the set


4. Press the **OK** or **◀** button.
5. Repeatedly press the **MENU** button to return to normal TV viewing.

Alternatively you can select the TV or AV mode by pressing the **TV/AV** button.

In AV or COMPONENT mode, to return to TV mode, press the **▲ / ▼** or **NUMBER** buttons.

## Auto AV switching

 If your VCR outputs switching voltage when switched to playback with the VCR connected to the Euro scart socket, the set will automatically switch to **AV1, AV2** or **AV3** mode when an AV signal is input. Press the **TV/AV** button to return to AV modes.

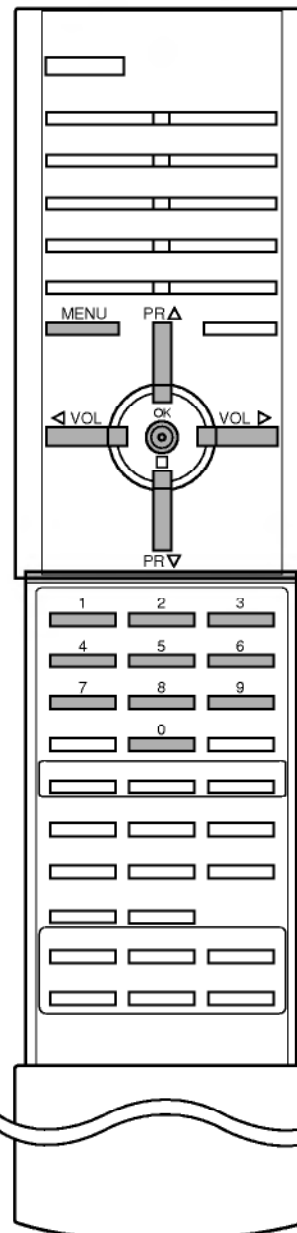

## SPECIAL MENU

### Child lock

The TV can be set so that the remote control handset is needed to control it. This feature can be used to prevent unauthorized viewing.

1. Press the **MENU** button and then **▲ / ▼** button to select the **SPECIAL** menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Child lock**.
3. Press the **▶** button and then **▲ / ▼** button to select **On** or **Off**.
4. Repeatedly press the **MENU** button to return to normal TV viewing.

With the lock on, the display **Child lock On** appears on the screen if any button on the front panel is pressed while viewing the TV.

**Note :** The display **Child lock On** will not appear on the screen if any button on the front panel is pressed while displaying the menus.

### Picture format

You can watch TV in various picture formats; 16:9 (Wide), 14:9, Zoom, 4:3 and Auto.

You can repeatedly press the **ARC** button to select your desired picture format.

#### 16:9

Following selection will lead you to adjust the picture horizontally, in a linear proportion, to fill the entire screen (useful for viewing 4:3 formatted DVDs).

#### 14:9

You can enjoy the picture format of 14:9 or general TV programme through the 14:9 mode. The screen 14:9 is viewed just like that the screen 4:3 is magnified to the upper / lower and left / right.

You can move the screen up or down with **▲ / ▼** button.

#### Zoom

Following selection will lead you to view the picture without any alternation, while filling the entire screen. However, the top and bottom portions of the picture will be cropped. You can move the screen up or down with **▲ / ▼** button.

 
#### 4:3

Following selection will lead you to view a picture with an original 4:3 aspect ratio, with black bars appearing at both the left and right sides.

#### Auto

When your TV receives the wide screen signal, it will be automatically changed to the picture format to be sent.

**Note :** You are available to 4:3 and 16:9 in Component (720p/1080i).

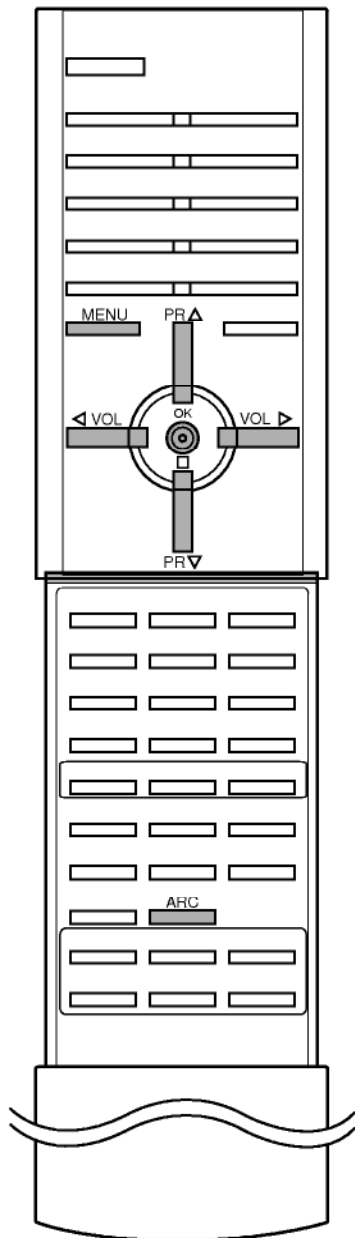

# Picture In Picture (PIP) Function

**Option :**

PIP (Picture in Picture) displays a picture within a picture.

**On and off**

Press the **PIP** button to switch on the sub picture.

Press **CANCEL/EXIT** button to switch it off.

Each press of **PIP** button changes the screen display as shown below.

 


**Note :** When the sub picture size is 1/2 of the main picture, the picture quality might get poor.

**Input mode selection for sub picture**

Press the **INPUT** button to select the input mode for the sub picture.

Each time this button is pressed, each input mode for the sub picture is displayed as shown below.



**Note :**

- a. When the main picture is AV or Component modes, the sub picture is available to select TV mode.
- b. When the PIP function is switched on, you can also adjust it in the Special menu.

**Swapping between main and sub pictures**

Press the **SWAP** button to exchange the main and sub pictures.

**Note :** When the main picture is TV or AV modes, the swapping is available.

**Program selection for sub picture**

The sub picture program selection is available when the sub picture is TV mode. Press the **PR +/-** buttons to select a program for the sub picture.

**Sub picture size**

 
Repeatedly press the **SIZE** button to select the desired sub picture size. The sub picture appears as 1/9 size of the main picture, followed by 1/16.

**Sub picture freeze**

Press the **STILL** button to freeze motion of the sub picture. Press this button again to restore motion.

**Sub picture position change**

Press the **POSITION** button repeatedly until desired position is achieved. The sub pictures move clockwise.

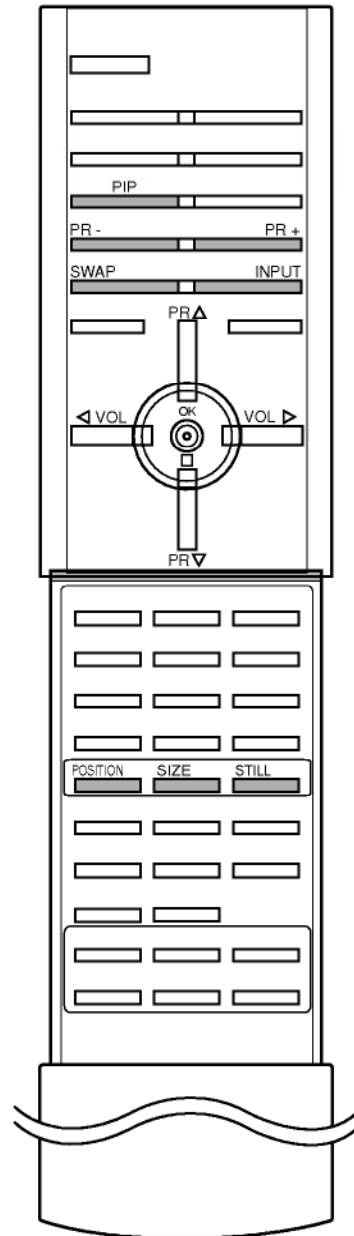




## Teletext (option)

Teletext (or TOP text) is an optional function, therefore only a set with the teletext system can receive the teletext broadcast.

Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.

 The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

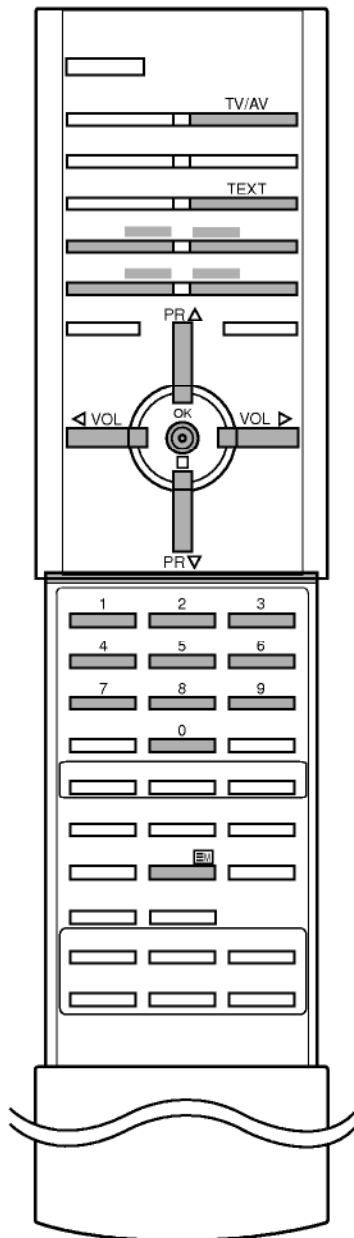

### Switch on/off

Press the **TEXT** button to switch to teletext.

If TV and text picture are displayed half and half of the screen, press the **TEXT** button again to display text picture fully.

The initial page or last page appears on the screen.

Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed.


Press the **TEXT** button to switch off teletext. The previous mode reappears.

### SIMPLE text

#### Page selection

1. Enter the desired page number as a three digit number with the NUMBER buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
2. The ▲ / ▼ button can be used to select the preceding or following page.

#### Programming a colour button in LIST mode

If the TV is in SIMPLE text, TOP text or FASTEXT mode, press the  button to switch to LIST mode.

Four teletext page numbers of your choice can be colour coded and easily selected by pressing the corresponding coloured button on the remote control handset.

1. Press a coloured button.
2. Using the NUMBER buttons, select the page you wish to programme.
3. Press the **OK** button. The selected page is stored as the selected page number, blinking once to confirm this. From now on, you can select this page with the same coloured button.
4. The three other coloured buttons are programmed in this way.



## Teletext (option)

### TOP text (option)

The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

#### Block / group / page selection

1. With the blue button you can progress from block to block.
2. Use the yellow button to proceed to the next group with automatic overflow to the next block.
3. With the green button you can proceed to the next existing page with automatic overflow to the next group.  
Alternatively the ▲ button can be used.
4. The red button permits to return to previous selection.  
Alternatively the ▼ button can be used.


#### Direct page selection

 
Corresponding to the SIMPLE teletext mode, you can select a page by entering it as a three digit number using the NUMBER buttons in TOP mode.

### FASTEXT

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.


#### Page selection

1. Press the  button to select the index page.
2. You can select the pages which are colour coded along the bottom line with the same coloured buttons.
3. Corresponding to the SIMPLE teletext mode, you can select a page by entering its three digit page number with the NUMBER buttons in FASTEXT mode.
4. The ▲ / ▼ button can be used to select the preceding or following page.

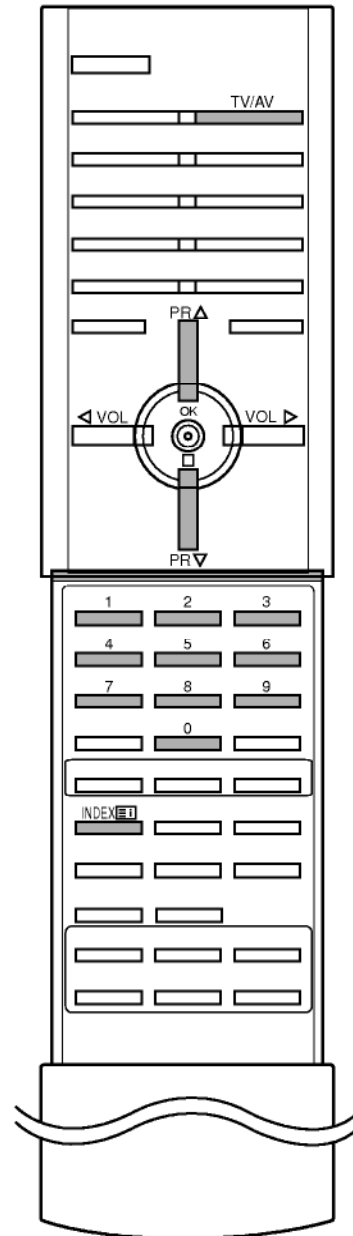

# Teletext (option)
 
## Special teletext functions

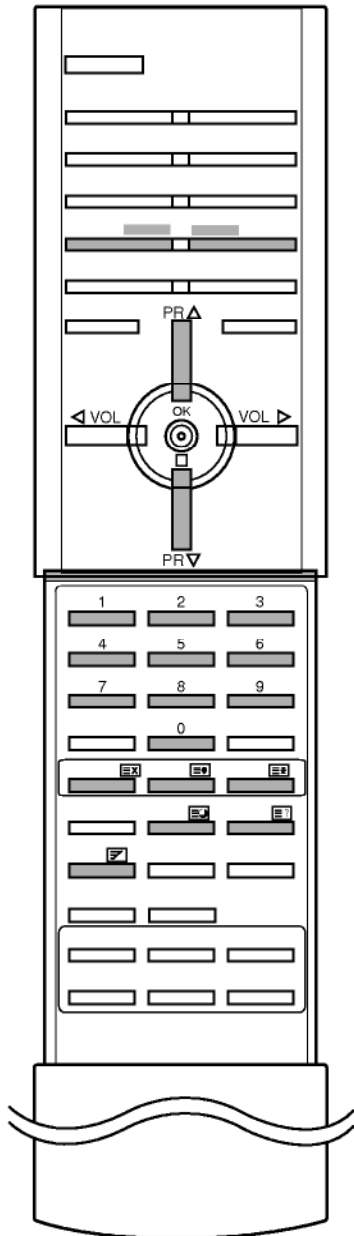

### REVEAL

Press this button to display concealed information, such as solutions of riddles or puzzles. Press this button again to remove the information from the display.





### SIZE

Selects double height text. Press this button to enlarge the top half of the page. Press this button again to enlarge the bottom half of the page. Press this button again to return to the normal display.



### UPDATE

Displays the TV picture on the screen while waiting for the new teletext page. The display  will appear at the top left hand corner of the screen. When the updated page is available then display  will change to the page number. Press this button to view the updated teletext page.



### HOLD

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inhibited. To continue press this button again.



### MIX

Displays the teletext pages superimposed on the TV picture.

To switch the TV picture off press this button again.

**Note :** When TV and text picture are displayed half and half of the screen, MIX function is not available.



### TIME

When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display. In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the RED / GREEN, ▲ / ▼ or NUMBER buttons.

 
Press this button again to exit this function.

## Connection of external equipment

You can connect additional equipment, such as VCRs, camcorders etc. to your set.  
Here shown may be somewhat different from your set.

### Aerial socket

1. Connect the RF out socket of the VCR to the aerial socket on the back of the set.
2. Connect the aerial cable to the RF aerial in socket of the VCR.
3. Store the VCR channel on a desired programme number using the 'Manual programme tuning' section.
4. Select the programme number where the VCR channel is stored.
5. Press the **PLAY** button on the VCR.

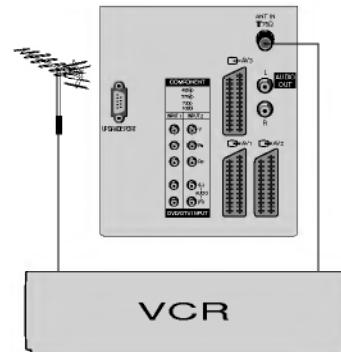


### Euro scart Sockets

1. Connect the Euro scart socket of the VCR to the Euro scart socket 1, 2 or 3 of the set.
2. Press the **PLAY** button on the VCR.  
If your VCR outputs a switching voltage connect to Euro scart socket 1, 2 or 3, the set will switch to **AV 1**, **AV 2** or **AV 3** mode automatically. But if you want to keep on watching TV mode, press the **▲ / ▼** button.

Otherwise press the **TV/AV** button on the remote control handset to select **AV 1**, **AV 2** or **AV 3**. The VCR playback picture appears on the screen.

 You can also record programmes received by the TV on video tape.

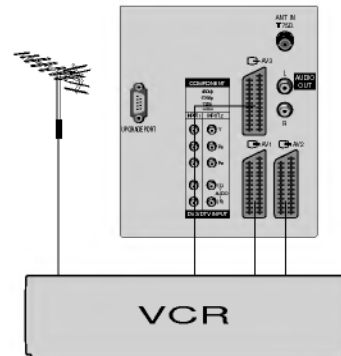


### Note :


- a. Signal type RGB, i.e. the signals red, green and blue can only be selected for the Euro scart socket 1. These signals are transmitted, for example, by a pay TV decoder, game machine or photo CD unit, etc.
- b. If both Euro scart 1, 2 and 3 sockets have been connected to the VCRs simultaneously, only the AV 2 can be received.
- c. If the S-VIDEO(Y/C) signal is received through the Euro scart socket 2, you must change to the S-Video2 mode.
- d. If you use a RCA to Scart adaptor (not supplied), when both VIDEO IN and Y/C IN(S-VIDEO) sockets have been connected to the adaptor, the picture of the set can be unstable.

### Audio out sockets (AUDIO OUT)

 The phone sockets for a Hi-Fi amplifier system are on the back of the set; L=left sound channel, R=right sound channel.  
If you connect an amplifier system, you can also play the TV sound through the stereo amplifier system.

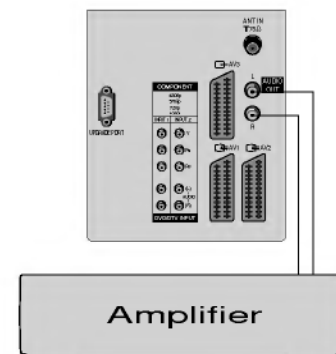


## Connection of external equipment

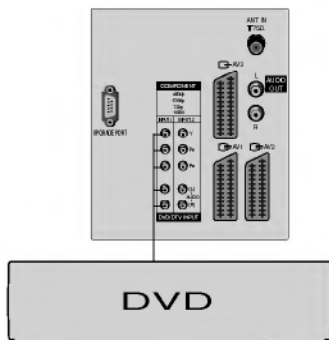 

### DVD input sockets

 1. Connect the DVD output sockets (Y Cb Cr, Y Pb Pr, Y B-Y R-Y or Y Pb Pr) of the DVD to the **DVD/DTV INPUT** sockets (Y Pb Pr) of the set.
2. Connect the audio cable from the DVD to **DVD/DTV INPUT AUDIO** sockets of the set.
3. Press the **TV/AV** or **COMPONENT** button to select **Component 1** or **Component 2**.
4. Press the **PLAY** button on the DVD.  
The DVD playback picture appears on the screen.

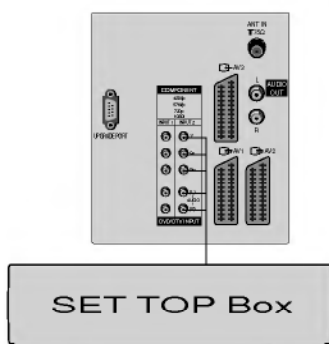


### DTV input sockets

1. Connect the SET TOP inputs to the **DVD/DTV INPUT** sockets (Y Pb Pr) of the set.
2. Connect the audio cable from the SET TOP to the **DVD/DTV INPUT AUDIO** sockets of the set.
3. Press the **TV/AV** or **COMPONENT** button to select **Component 1** or **Component 2**.

### Audio/Video input sockets

 
1. Connect the audio/video out sockets of the VCR to audio/video in sockets of the set.
2. Press the **TV/AV** button to select **AV4**.
3. Press the **PLAY** button on the VCR.  
The VCR playback picture appears on the screen.

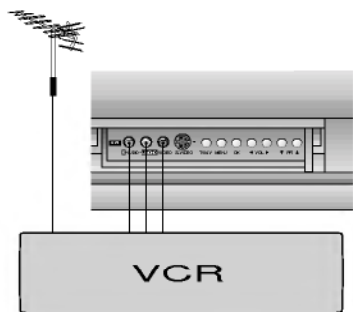

**Note :** If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** socket of the set.

### S-Video / Audio input sockets (option)

 When connecting a VCR to the **S-VIDEO** socket of the set, the picture quality will be further improved.

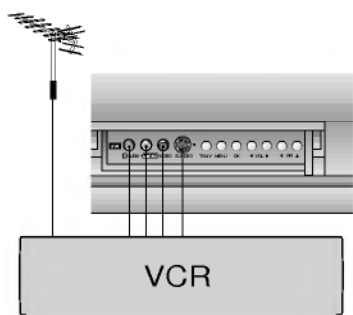

1. Connect the S-Video socket of the VCR to the **S-VIDEO** socket on the front or side panel of the set.
2. Connect the audio cable from the VCR to the **AUDIO** sockets on the side panel of the set.
3. Select **AV4** by pressing the **TV/AV** button repeatedly.
4. Press the **PLAY** button on the VCR.  
The VCR playback picture appears on the screen.

**Note :** If both S-VIDEO and VIDEO sockets have been connected to the VCR simultaneously, only the S-VIDEO can be received.

---

# MEMO

---

 
 
---

# MEMO

---

# Troubleshooting check list

## Symptoms

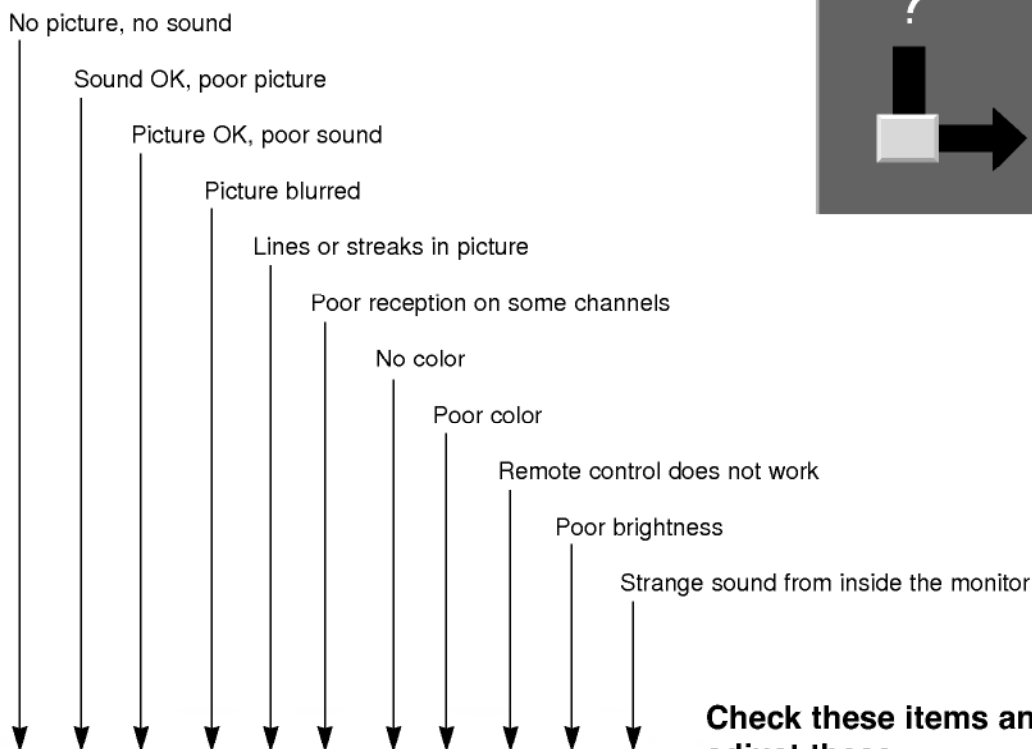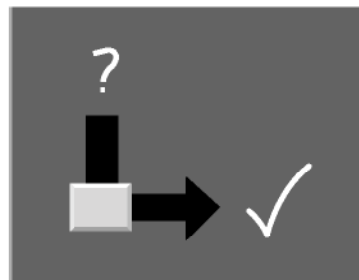


### Check these items and try to adjust these

- The mains plug-(plugged in and switched on)
  - Is the TV switched on?
  - Try another channel (weak signal)
  - Check aerial (plugged into TV?)
  - Check aerial (broken lead?)
  - Check aerial
  - Check for local interference
  - Adjust contrast
  - Adjust brightness
  - Adjust color
  - Adjust volume
  - Check the batteries in remote control
  - Check Audio/Video sockets (VCR only)
  - Contact LG service provider(s)
- A change in ambient humidity or temperature may result in an unusual noise at the time of switching off or on of the monitor and does not indicate a fault with the monitor



# LG Electronics GUARANTEE

- LG Electronics U.K. Ltd. will provide the following services in order to expedite this Guarantee.
- 1. All faulty components which fail due to defective manufacture will be replaced free of charge for a period of 12 months from the original date of purchase.
- 2. The dealer (or his service agent) who sold the product will be reimbursed for any labour provided in the repair of this LG equipment, for a period of 12 months from the original date of purchase. These claims must be made in accordance with the published scale of service charges and relevant claims procedure.

**PLEASE NOTE:**

- A. The dealer may restrict the guarantee to the original purchaser.
- B. The dealer is not obliged to carry out service under guarantee if unauthorized modifications are made to the apparatus, or if non standard components are used or if the serial number of the apparatus is removed, defaced, misused, or altered.
- C. Any claims made under guarantee must be directed to the dealer from whom the equipment was originally purchased. The dealer may, before carrying out service under guarantee, require a receipted account as evidence of the date of purchase.
- D. We respectfully point out that your dealer is not obligated to replace batteries if they become exhausted or worn in use.
- E. Aerial alignment and consumer control adjustments are not covered by this guarantee.

This guarantee does not affect your statutory rights.

● REQUIREMENTS TO MAINTAIN WARRANTY COVERAGE:

RETAIN YOUR RECEIPT TO PROVE DATE OF PURCHASE. A COPY OF YOUR RECEIPT MUST BE SURRENDERED AT THE TIME GUARANTEE SERVICE IS PROVIDED.

- Product Registration Card: It is helpful to complete at least your name, address, phone, model & serial numbers and return it. This will enable LG to assist you in the future should you lose your receipt, your units be stolen, or should modifications be necessary.
- To obtain information or assistance: Call 0870 607 5544 Monday-Friday 9.00am-4.30pm.
- Service website: <http://lgelectronics.co.uk>

MODEL NO.*	SERIAL NO.*	DATE OF PURCHASE *

\* Please complete for your own record

**In all cases of difficulty - consult your LG dealer from whom the product was purchased**