

DLA-RS40 DLA-RS50 DLA-RS60

> PROYECTOR D-ILA PROJECTEUR D-ILA

DLA-RS40/DLA-RS50/DLA-RS60 **D-ILA PROJECTOR**


ENGLISH FRANÇAIS ESPAÑOL/CASTELLANO

JVC

INSTRUCTIONS MANUEL D'INSTRUCTIONS MANUAL DE INSTRUCCIONES

D-ILA PROJECTOR PROJECTEUR D-ILA PROYECTOR D-ILA

DLA-RS40 **DLA-RS50** DLA-RS60

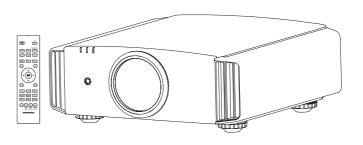











JVC

© 2010 Victor Company of Japan, Limited

For Customer use:

Enter below the serial No. which is located on the side of the cabinet. Retain this information for future reference.

DLA-RS40 Model No. DLA-RS50 DLA-RS60

Pour utilisation par le client :

Entrer ci-dessous le N° de série qui est situé sous le boîtier. Garder cette information comme référence pour le futur.

DLA-RS40 N° de modèle DLA-RS50 DLA-RS60

N° de série

Instrucción para el cliente :

Introduzca a continuación el nº de serie que aparece en la parte inferior lateral de la caja. Conserve esta información como referencia para uso ulterior.

DLA-RS40 Modelo Nº DLA-RS50 DLA-RS60

Nº de serie

PC010680499-1

0710TTH-AO-AO



Safety Precautions

IMPORTANT INFORMATION

This product has a High Intensity Discharge (HID) lamp that contains mercury.

Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information, please contact your local authorities or for USA, the Electronic Industries Alliance: http://www.eiae.org.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

WARNING:

THIS APPARATUS MUST BE EARTHED.

CAUTION:

To reduce the risk of electric shock, do not remove cover. Refer servicing to qualified service personnel.

This projector is equipped with a 3-blade grounding type plug to satisfy FCC rule. If you are unable to insert the plug into the outlet, contact your electrician.

MACHINE NOISE INFORMATION (Germany only)

Changes Machine Noise Information Ordinance 3. GSGV, January 18, 1991: The sound pressure level at the operator position is equal or less than 20 dB (A) according to ISO 7779.

FCC INFORMATION (U.S.A. only)

CAUTION:

Changes or modification not approved by JVC could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protec tion against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruc tions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encourage to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

About the installation place

Do not install the projector in a place that cannot support its weight securely.

If the installation place is not sturdy enough, the projector could fall or overturn, possibly causing personal injury.

IMPORTANT SAFEGUARDS

Electrical energy can perform many useful functions. This unit has been engineered and manufactured to assure your personal safety. But IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZ ARD. In order not to defeat the safeguards incorporated into this product, observe the following basic rules for its installation, use and service. Please read these Important Safeguards carefully before use.


- All the safety and operating instructions should be read before the product is operated.
- The safety and operating instructions should be retained for future reference.



- All warnings on the product and in the operating instructions should be adhered to.
- All operating instructions should be followed.
- Place the projector near a wall outlet where the plug can be easily unplugged.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use attachments not recommended by the product manufacturer as they may be hazardous.
- Do not use this product near water. Do not use immediately after moving from a low temperature to high temperature, as this causes condensation, which may result in fire, electric shock, or other hazards.
- Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. The product should be mounted according to the manufacturer's instructions, and should use a mount recommend ed by the manufacturer.
- When the product is used on a cart, care should be taken to avoid quick stops, excessive force, and uneven surfaces which may cause the product and cart to overturn, damaging equipment or causing possible injury to the operator.



- Slots and openings in the cabinet are provided for _ ventilation. These ensure reliable operation of the product and protect it from overheating. These openings must not be blocked or covered. (The openings should never be blocked by placing the product on bed, sofa, rug, or similar surface. It should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the manufacturer's instructions have been adhered to.)
- To allow better heat dissipation, keep a clearance between this unit and its surrounding as shown below. When this unit is enclosed in a space of dimensions as shown below, use an air-conditioner so that the internal and external temperatures are the same. Overheating can cause damage.

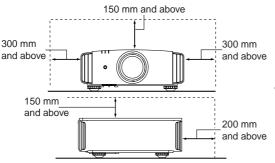

- power source indicated on the label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
- This product is equipped with a three-wire plug. This plug will fit only into a grounded power outlet. If you are unable to insert the plug into the outlet, contact your electrician to install the proper outlet. Do not defeat the safety purpose of the grounded plug.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at doors, plugs, receptacles, and the point where they exit from the product.
- For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system. This will prevent damage to the product due to lightning and power line surges.
- Do not overload wall outlets, extension cords, or convenience receptacles on other equipment as this can result in a risk of fire or electric shock.
- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltages and other hazards. Refer all service to qualified service personnel.
- Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions:
 - a) When the power supply cord or plug is damaged. b)If liquid has been spilled, or objects have fallen on the product.
 - c)If the product has been exposed to rain or water. d)If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the Operation Manual, as an improper adjustment of controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - e)If the product has been dropped or damaged in any
 - f) When the product exhibits a distinct change in performance, this indicates a need for service.
- When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or with same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.



- The product should be placed more than one foot away from heat sources such as radiators, heat registers, stoves, and other products (including amplifiers) that produce heat.
- When connecting other products such as VCR's, and DVD players, you should turn off the power of this product for protection against electric shock.
- Do not place combustibles behind the cooling fan.
 For example, cloth, paper, matches, aerosol cans or gas lighters that present special hazards when over heated.
- Do not look into the projection lens while the illumination lamp is turned on. Exposure of your eyes to the strong light can result in impaired eyesight.
- Do not look into the inside of this unit through vents (ventilation holes), etc. Do not look at the illumination lamp directly by opening the cabinet while the illumination lamp is turned on. The illumination lamp also contains ultraviolet rays and the light is so powerful that your eyesight can be impaired.
- Do not drop, hit, or damage the light-source lamp (lamp unit) in any way. It may cause the lightsource lamp to break and lead to injuries. Do not use a damaged light source lamp. If the lightsource lamp is broken, ask your dealer to repair it. Fragments from a broken light-source lamp may cause injuries.
- The light-source lamp used in this projector is a high pressure mercury lamp. Be careful when disposing of the light-source lamp. If anything is unclear, please consult your dealer.
- Do not ceiling-mount the projector to a place which tends to vibrate; otherwise, the attaching fixture of the projector could be broken by the vibration, possibly causing it to fall or overturn, which could lead to personal injury.
- Use only the accessory cord designed for this product to prevent shock.
- For health reasons, please take a break of about 5-15 minutes every 30-60 minutes and let your eyes rest. Please refrain from watching any 3Dimages when you feel tired, unwell or if you feel any other discomfort. Moreover, in case you see a double image, please adjust the equipment and software for proper display. Please stop using the unit if the double image is still visible after adjustment.
- Once every three years, please perform an internal test. This unit is provided with replacement parts needed to maintain its function (such as cooling fans). Estimated replacement time of parts can vary greatly depending on frequency of use and the respective environment. For replacement, please consult your dealer, or the nearest authorized JVC service center.
- When fixing the unit to the ceiling, Please note that we do not take any responsibility, even during the warranty period, if the product is damaged due to use of metal fixtures used for fixation to the ceiling other than our own or if the installation

- environment of said metal fixtures is not appropriate. If the unit is suspended from the ceiling during use, please be careful in regard to the ambient temperature of the unit. If you use a central heating, the temperature close to the ceiling will be higher than normally expected.
- Video images can burn into the electronic com ponent parts. Please do not display screens with still images of high brightness or high contrast, such as found in video games and computer programs. Over a long period of time it might stick to the picture element. There is no problem with the playback of moving images, e.g. normal video footage.
- Not using the unit for a long time can lead to malfunction. Please power it on and let it run occasionally. Please avoid using the unit in a room where cigarettes are smoked. It is impos sible to clean optical component parts if they are contaminated by nicotine or tar. This might lead to performance degradation.
- Please watch from a distance three times the height of the projected image size. Persons with photosensitivity, any kind of heart disease, or weak health should not use 3D glasses.
- Watching 3D-images might be cause of illness.
 If you feel any change in your physical condition, please stop watching immediately and consult a physician if necessary.
- When watching 3D images, it is recommended to take regular breaks. As the length and frequency of the required breaks differ for every person, please judge according to your own condition.
- If your child watches while wearing 3D glasses, it should be accompanied by its parents or an adult guardian. The adult guardian should be careful to avoid situations where the child's eyes might become tired, as responses to tiredness and discomfort, etc., are hard to detect, and it is possible for the physical condition to deteriorate very quickly. As the visual sense is not yet fully developed in children under the age of 6, please consult a physician in regard to any problem concerning 3D-images if necessary.
- Note that when using the 3D feature, the video output may appear different from the original video image due to image conversion on the device.

*DO NOT allow any unqualified person to install the unit.

Be sure to ask your dealer to install the unit (e.g. attaching it to the ceiling) since special technical knowledge and skills are required for installation. If installation is performed by an unqualified person, it may cause personal injury or electrical shock.

Safety Precautions (Continued) POWER CONNECTION


For USA and Canada only Use only the following power cord.

Power cord



The power supply voltage rating of this product is AC110V - AC240V. Use only the power cord designated by our dealer to ensure Safety and EMC. Ensure that the power cable used for the projector is the correct type for the AC outlet in your country. Consult your product dealer.

Power cord





For United Kingdom

For European continent countries

WARNING:

Do not cut off the main plug from this equipment.

If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or adapter or consult your dealer. If nonetheless the mains plug is cut off, dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the main supply. If a new main plug has to be fitted, then follow the instruction given below.

WARNING:

THIS APPARATUS MUST BE EARTHED.

IMPORTANT (Europe only):

The wires in the mains lead on this product are colored Vert et jaune in accordance with the following cord:

Green-and-yellow: Earth Blue :Neutral

As these colors may not correspond with the colored making identifying the terminals in your plug, proceed as follows:

The wire which is colored green-and-yellow must be connected to the terminal which is marked M with the letter E or the safety earth or colored green or green-and-yellow. The wire which is colored blue must be connected to the terminal which is marked with the letter N or colored black. The wire which is colored brown must be connected to the terminal which is marked with the letter L or colored red.


POWER CONNECTION (United Kingdom only)

HOW TO REPLACE THE FUSE:

When replacing the fuse, be sure to use only a correctly rated approved type, re-fit the fuse cover. IF IN DOUBT -- CONSULT A COMPETENT

ELECTRICIAN. Open the fuse compartment with the blade

screwdriver, and replace the fuse. (* An example is shown in the illustration below.)

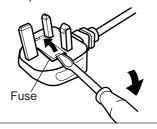

Dear Customer.

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is: JVC Technical Services Europe GmbH Postfach 10 05 04

61145 Friedberg

Germany



ENGLISH

Information for Users on Disposal of Old Equipment and Batteries





Battery

[European Union only]

These symbols indicate that equipment with these symbols should not be disposed of as general household waste. If you want to dispose of the product or battery, please consider the collection systems or fa cilities for appr opriate recycling.

Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead.

DEUTSCH

Benutzerinformationen zur Entsorgung alter Geräte und Batterien



Products



Batterie

[Nur Europäische Union]

Diese Symbole zeigen an, dass derartig gekennzeichnete Geräte nicht als normaler Haushaltsabfall entsorgt werden dürfen. We nden Sie sich zur Entsorgung des Produkts oder der Batterie an die hierfür vorgesehenen Sammelstellen oder Einrichtungen, damit eine fachgerechte Wiederverwertung möglich ist.

Produkte

Hinweis: Das Zeichen Pb unterhalb des Batteriesymbols gibt an, dass diese Batterie Blei enthält.

FRANÇAIS

Informations relatives à l'élimination des appareils et des piles usagés, à l'intention des utilisateurs





Pile

Produits

[Union européenne seulement]

Si ces symboles figurent sur les produits, cela signifie qu'ils ne doivent pas être jetés comme déchets ménagers. Si vous voulez jeter ce produit ou cette pile, veuillez considérer le système de collection de déc hets ou les centres de recyclage appropriés.

Notification: La marque Pb en dessous du symbole des piles indique que cette pile contient du plomb.

NEDERLANDS

Informatie voor gebruikers over het verwijderen van oude apparatuur en batterijen



Producten



Batterij



Deze symbolen geven aan dat appara tuur met dit symbool niet mag worden weggegooid als algemeen huishoudelijk afval. Als u het product of de batterij wilt weggooien, kun t u inzamelsystemen of faciliteiten voor een geschikte recycling gebruiken.

Opmerking: Het teken Pb onder het batterijsymboo I geeft aan dat deze batterij lood bevat.

Getting Started



ESPAÑOL / CASTELLANO

Información para los usuarios sobre la eliminación de baterías/pilas usadas





[Sólo Unión Europea]

Estos símbolos indican que el equipo con estos símbolos no debe desecharse con la basura doméstica. Si desea desechar el pro ducto o batería/pila, acuda a los sistemas o centros de recogida para que los reciclen debidamente.

Productos

Baterías/pilas

Atención: La indicación Pb debajo del símbolo de batería/pila indica que ésta contiene plomo.

ITALIANO

Informazioni per gli utenti sullo smaltimento delle apparecchiature e batterie obsolete





Batteria

[Solo per l'Unione Europea]

Questi simboli indicano che le apparecchiature a cui sono relativi non devono essere smaltite tra i rifiuti domestici generici. Se si desidera smaltire questo prodotto o questa batteria, prendere in considerazione i sistem i o le strutture di raccolta appropriati per il riciclaggio corretto.

Prodotti

Nota: Il simbolo Pb sotto il simbolo delle batter ie indica che questa batteria contiene piombo.

PORTUGUÊS

Informação para os utilizadores acerca da eliminação de equipamento usado e pilhas





[Apenas União Europeia]

Estes símbolos indicam que o equipamento com estes símbolos não deve ser eliminado juntamente com o restante lixo doméstico. Se p retende eliminar o produto ou a pilha, utilize os sistemas de recolha ou instalações para uma reciclagem apropriada.

Produtos

Pilha

Aviso: O sinal Pb abaixo do símbolo para pilhas indica que esta pilha contém chumbo.

ΕΛΛΗΝΙΚΑ

Πληροφορίες για την απόρριψη παλαιού εξοπλισμού και μπαταριών



Προϊόντα



Μπαταρία

[Ευρωπαϊκή Ένωση μόνο]

Αυτά τα σύμβολα υποδηλώνουν ότι ο εξοπλισμός που τα φέρει δεν θα πρέπει να απορριφθεί ως κοινό οικιακό απόρριμμα . Εάν επιθυμείτε την απόρριψη αυτού του προϊόντος ή αυτής της μπαταρίας, χρησιμοποιήστε το σύστημα περισυλλογής ή εγκαταστάσεις για ανάλογη ανακύκλωση.

Σημείωση: Το σύμβολο Pb κάτω από το σύμβολο μπαταρίας υποδηλώνει ότι η μπαταρία περιέχει μόλυβδο.



DANSK

Brugerinformation om bortskaffelse af gammelt udstyr og batterier



Produkter





[Kun EU]

Disse symboler angiver, at udstyr med disse symboler ikke må bortskaffes som almindeligt husholdningsaffald. Hvis du ønsker at smide dette produkt eller batteri ud, bedes du overveje at bruge indsamlingssystem et eller steder, hvor der kan ske korrekt gen

Bemærk: Tegnet Pb under symbolet for batterierne angiver, at dette batteri indeholder blv.

SUOMI

Tietoja vanhojen laitteiden ja akkujen hävittämisestä





Akku

[Vain Euroopan unioni]

Nämä symbolit ilmaisevat, että symboleilla merk ittyä laitetta ei tulisi hävittää tavallisen kotitalousjätteen mukana. Jos haluat hävit tää tuotteen tai sen akun, tee se hyödyntämällä akkujen keräyspisteitä tai muita kier rätyspaikkoja.

Tuotteet

Huomautus: Akkusymbolin alapuolella oleva Pb-merk intä tarkoit taa, että akku sisältää lyijyä.

SVENSKA

Information för användare gällande bortskaffning av gammal utrustning och batterier



Produkter





Batteri

[Endast den Europeiska unionen]

Dessa symboler indikerar att utrustning med dessa symboler inte ska hanteras som vanligt hushållsavfall. Om du vill bortsk affa produkten eller batteriet ska du använda uppsamlingssystem eller inrättningar för lämplig återvinning.

Observera! Märkningen Pb under symbolen för batterier indikerar att detta batteri innehåller bly.

NORSK

Opplysninger til brukere om kassering av gammelt utstyr og batterier







Disse symbolene viser at utstyr med dette symbolet, ikke skal kastes sammen med vanlig husholdningsavfall. Hvis du vil kass ere dette produkte t eller batteriet, skal du vurdere å bruke innsam lingssystemene eller andre muligheter for riktig gjenbruk.

Produkter

Batteri

Merk: Tegnet Pb under symbolet for batterie r, viser at batteriet inneholder bly.



РУССКИЙ

Сведения для пользователей по утилизации старого оборудования и батарей



Изделия



Батарея

[только для Европейского союза]

Данные символы указывают на то, что оборудование, на которое они нанесены, не должны утилизироваться, как обычные бытовые отходы. При необходимости утилизировать такое изделие или батарею обратитесь в специальный пункт сбора для их надлежащей переработки.

Уведомление: Надпись Рb под символом батар ей указывает на то, что данная батарея содержит свинец.

ČESKY

Informace pro uživatele k likvid aci starého zařízení a baterií





Baterie

[Pouze Evropská unie]

Tyto symboly označují, že produkty s těmito symboly se nesmí likvidovat jako běžný odpad. Pokud chcete produkt nebo baterii zlikvidovat, využijte sběrný systém nebo jiné zařízení, které zaji stí řádnou recyklaci.

Produkty

Upozornění: Značka Pb pod symbolem pro ba te rie znamená, že tato baterie obsahuje olovo.

POLSKI

Informacje dla użytkowników dotyczące poz bywania się zużytego sprzętu i baterii





[Tylko kraje Unii Europejskiej]

Te symbole oznaczają, że sprzę tu nie należy wyr zucać razem z odpadami gospodarczymi. Jeśli trzeba po zbyć się tego produktu lub ba terii, proszę skorzystać z systemu odbioru lub urządzeń do zbió rki odpadów elektronicznych, w celu odpowiedniego ponowne go ich przetworzenia.

Produkty

Bateria


Uwaga: Oznaczenie Pb, znajdujące się pod symbole m baterii wskazuje, że ta bateria zawiera ołów.

MAGYAR

Felhasználói információ az elhasznált be rendezések és akkumulátorok elhelyezéséről







Ez a szimbólum azt jelzi, hogy a berendezés nem helyezhető az általános háztartási hulladék közé. Ha meg szeretne szabadulni a terméktől vagy az akkumulátortól, akkor legyen tekintettel az gyűjtő rendszerre vagy intézményekre a megfelelő hasznosítás érdekében.

Termékek

Akkumulátor

Megjegyzés: Az alábbi Pb szimbólum - ha az akkum ulátoron megtalálható - azt jelzi, hogy az akkumulátor ólmot tartalmaz.

THX Certification



THX Certification

Established by film producer George Lucas, THX aims to enhance the reproduction of audio sound and video images intended by filmmakers by setting quality standards for cinema viewing environments as well as home entertainment systems.

Based on the know-how that we have cultivated over the past 25 years in areas including film production, cinema viewing environment design, and audio/video editing, we have established a partnership with JVC to develop an unprecedented home theater projector system.

The emphases of THX Certification lie in the video quality and signal processing capability of projector products. JVC projectors, DLA-RS50 and DLA-RS60, are equipped with the THX mode, which is able to bring out the full potential of the projector when playing movies on a large screen.

Also, JVC front projectors are the first in the world (*1) to have gained the "THX 3D Display Certification" (*2) by THX Ltd.

In addition, the certification standards were established with the aim to "faithfully reproduce images at home according to the intentions of the film director" during playback of 2D or 3D images, and they are "a proof of high definition and high image quality", indicating that a certified product has cleared more than 400 rigorous image quality tests including accuracy of color reproduction, cross-talk, viewing angles, and video processing performance.



In order for you to enjoy 3D movies:

- Please get ready "3D glasses" and a "3D Sync Emitter" (both sold separately).
- Please read through "Safety Precautions" (Reference page: 4), and the precautions in "Explanatory Notes on the 3D System" in "Operation Guide (Glossary)" (Reference page: 57).
- *1: "First" here refers to the first among front projectors as at November 1, 2010 based on research by JVC.
- *2: The recommended screen size is 90" (16:9), and this is limited to front projection only.





RECOMMENDED USE

All Home Theaters or Living Rooms

THX CERTIFICATION FEATURES

THX Movie Mode:

- Correct Gamma and Color Temperature
- No Overscan or Scaling
- Correct High Def Color Gamut

THX PERFORMANCE

Best in Class Parameters include:

- ANSI and Sequential Contrast
- Luminance and Color Uniformity
- Color Tracking with Gray Scale Optimum Brightness
- Deinterlacing Performance
- Jaggies and Contouring

Visit www.thx.com for further technical details.



For detail information about ISF, please refer web site http://www.imagingscience.com/

Contents

Getting started	
Safety Precautions	
THX Certification (850) (850)	
Contents	
Accessories/Optional	
Accessories	13
Check the Accessories	
Optional Accessories	
Controls and features	
Main body - Front	
Main body - Bottom	
Main body - Rear	15
Main body - About the indicator display	16
Main body - Warning display and	
confirmation/response	17
Main body - Input terminal	18
How to insert batteries into the remote	
control	19
Preparation	
• • • • • • • • • • • • • • • • • • • •	
About installation	20
Ilmportant points concerning the	
installation	
installation Installing the Projector and Screen	21
installation	21 21
installation	21 21 21
installation	21 21 21 22
installation	21 21 21 22
installation	21 21 21 22
installation	21 21 21 22 23
installation	21 21 21 22 23
installation	21 21 22 23 23
installation	21 21 22 23 23
installation	21 21 22 23 23 24 24
installation	21 21 22 23 23 24 24
installation	21 21 22 23 23 24 24 25
installation	21 21 22 23 23 24 24 25
installation	21 21 22 23 23 24 24 25 31
installation	21 21 22 23 23 24 24 25 31
installation	21 21 22 23 23 24 24 31
installation	21 21 22 23 23 24 24 31

an Image	
Temporary turning-off of the video	
Adjustment of the keystone correction	36
Adjustments and settings	
in the menu	37
Structure of the menu hierarchy	
(summary)	37
Menu operation button	
Menu operation procedure	
Menu item description	
Operation guide (glossary)	
- p	
Maintenance	
Douboing the Lowe	
Replacing the Lamp	
Lamp replacement procedure	
Resetting lamp Time	62
Method for cleaning and	
replacing filters	64
Others	
omers	• • • •
Troubleshooting	65
In case this message is	
displayed	67
RS-232C Interface	68
RS-232C Specifications	
TCP/IP-connection	
Command Format	
RS-232C Communication Examples	
Copyright and Caution	
About Trademarks and Copyright	
Caution	
Specifications	
Dimensions	
Index	76



CAUTION

About the marks used in this book

Compatible only with DLA-RS40

Compatible only with DLA-RS50

Compatible only with DLA-RS60



Accessories/Optional Accessories

Check the Accessories

AAA size Batteries (for operation confirm)......2 pieces Power Cord For the US market (2 m)......1 piece Power Cord For the EU market (2 m)......1 piece Power Cord For the UK market (2 m)......1 piece

Instruction manual, warranty card and other printed material are also included.

Optional Accessories

Please check with your authorized dealer for details.

Replacement Lamp: PK-L2210U


Replacement Filter: PC010661199

3D-Glasses: PK-AG1-B

3D Synchro Emitter: PK-EM1

Controls and features

Main body - Front

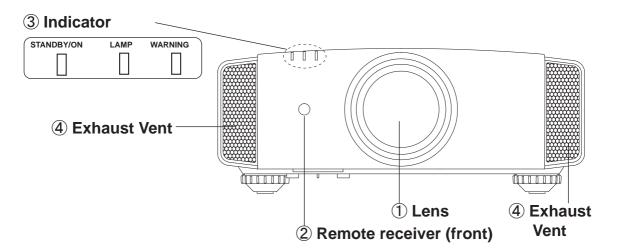

1 Lens

This is a projection lens. Please do not look inside during projection.

2 Remote receiver (front)

Please aim the remote control at this area when using it.

* There is also a remote receiver at the rear.


(3) Indicator

Please see "About the indicator display" for details. (Reference page: 16)

4 Exhaust Vent

Warm air flows out in order to cool the interior of the set. Please do not block the vents.

Main body - Bottom

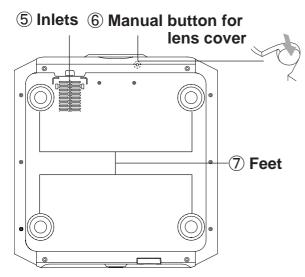

(5) Inlets (at 3 points on the rear/bottom)

In order to cool the inside of the unit, air is let inside. Do not block or prevent the outflow of hot air. Doing so could lead to failure of the unit.

* There are inlets at two points on the right and

* There are inlets at two points on the right and left sides of the rear side. (Reference page: 15)

6 Manual operation button of the lens cover

The lens cover can be opened when pressed down.It is used for maintenance and not used during normal use.


(7) **Feet**

The height (0 to 5 mm) can be adjusted by turning the foot.

etting Started

Controls and features (continued)

Main body - Rear

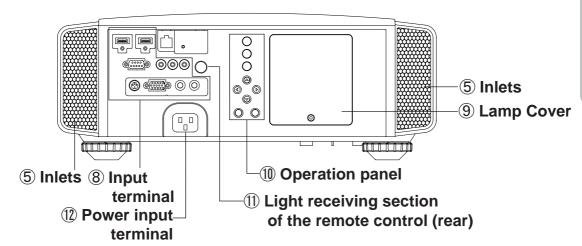

(8) Input terminal

There is also a terminal other than the input terminal for video images, such as those used for controlling or optional equipment. This illustration is RS50 RS60. Please see "About input terminals" for detailed information (RS40) about terminals. (Reference page: 18)

(9) Lamp Cover

When replacing the light source lamp, remove this cover. (Reference page: 60)

(10) Operation panel

See the following illustration "Control panel" for more details.


(1) Light receiving section of the remote control (rear)

Please aim the remote control at this section when using.

* There is also a light receiving section at the

12 Power input terminal

This is the power input terminal. It is connected via the supplied power cord. (Reference page: 31)

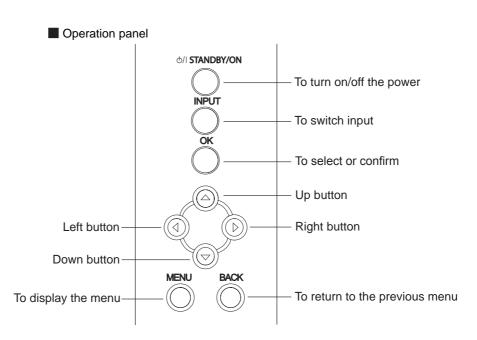



Main body - About the indicator display

Warnings and indications used during normal operation mode of this unit are displayed with the indicators for [STAND BY / ON], [LAMP], [WARNING] at the front of this unit.

Meaning of the lighting figures:



The display the indicator lights.



They display flashing of the indicator.

Operation mode display

Displays the color and lighting/flashing of the [STAND BY / ON] indicator.

STAND BY Light on(Red) During standby

STAND BYLight on(Green) While activating the lamp

(about 1 minute)



STAND BY Blinking(Red) During cool down



STAND BY Blinking(Green) When "Hide" is set to ON

(STANDBY/ON

П

WARNING П

All Off

During image projection

П

(1) STANDBY/ON 0

WARNING

Criterion indication of the lamp replacement

Displays lighting/flashing of the [LAMP] indicator. Moreover, the [STAND BY / ON] indicator, which shows the operation mode of this unit, is displayed as described above. (Reference page: 73)

LAMP Light on(orange)

Lamp replacement is near(When accumulated lamp time has exceeded 2900 hours)



LAMP Light on(orange)

Lamp has reached the end of life (When accumulated lamp time has exceeded 3000 hours)

(STANDBY/ON





Main body - Warning display and confirmation/response

Warning display

You are informed of the contents of warning notices by the (repeated) displays of the [WARNING] and [LAMP] indicators. Moreover, the [STAND BY / ON] indicator, which shows the operating mode of the unit, is displayed simultaneously as described above.


Upon activation of the warning mode, the projection is interrupted at the same time for about 60 seconds and the cooling fan is turned on. Please disconnect the power plug from the electric socket after the cooling fan has stopped. Subsequently, please perform the following checks and take appropriate countermeasures.

Lighting/flashing lights status diagram		Blinking Frequency	Content	Confirmation and countermeasures			
			1 time	Abnormalities in the power supply			
(STANDBY/ON O	LAMP	WARNING	2 times	Cooling fan stops	Check that nothing is blocking the air inlets. Check that the external		
Mode		(red)	3 times	Internal temperature is too high	temperature is normal.		
display			4 times	External temperature is too high	Action Leave the unit until it cools		
			1 time		down. After that, turn on the power		
() STANDBY/ON			2 times	Abnormal electrical circuit	again.		
	(orange)	(red)	3 times				
Mode display	Simultai flash	neous	4 times	If something is wrong with the automatic lens cover	Check that an impact shock has not occurred during operation.		
() STANDBY/ON	LAMP 0	WARNING	1 time	Lamp does not light up and unit is unable to project	Check that the lamp unit and lamp cover are correctly installed.		
Mode display	(orange)	(red)	2 times	Lamp is turned off during projection	Check that nothing is blocking the auto lens cover.		
			3 times	Lamp cover is removed	Action Turn on the power again.		

If the warning indication is displayed again, please wait for the cooling fan stopped, then pull out the power plug from the power outlet. Then call your authorized dealer for repair.



Main body - Input terminal

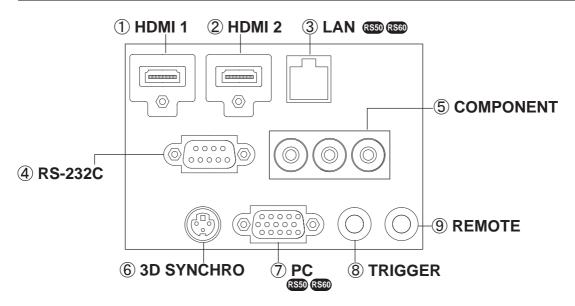

(1) HDMI 1 Terminal

You can connect a device equipped with HDMI output, etc. It is fitted to the M3 lock hole. Screw hole depth 3mm. (Reference page: 26)

(2) HDMI 2 Terminal

You can connect a device equipped with HDMI output, etc. It is fitted to the M3 lock hole. Screw hole depth 3mm. (Reference page: 26)

3 LAN terminal "RJ-45" (SSD) (SSD)

This is a LAN-terminal. If one connects an external PC, it is possible to control this unit by sending control commands. (Reference page: 30)

(4) RS-232C terminal (male D-Sub 9 pin)

This is a RS-232C interface standard terminal. If one connects an external PC, it is possible to control this unit. (Reference page: 29)

⑤ COMPONENT terminal "RCAx3"

It is also used as input terminal for analog RGB (G on Sync) signals, component (Y, Cb, Cr) signals, DTV format (Y, Pb, Pr) signals. It can also be connected with devices, which are equipped with signal output, etc. (Reference page: 27)

6 3D SYNCHRO terminal


3D synchro emitter: it is connected to the PK-EM1 (sold separately) when enjoying 3D video contents. (Reference page: 28)

7 PC terminal "D-Sub 15 pin" 659 659


This is an input term used for Personal Computer (PC) signals only (RGB video signals and sync signals). Use to connect a computer display output terminal, etc. (Reference page: 28)

DC power supply output terminal with DC12V, 100mA. It is used for output signals which control the vacillating screen responding to the SCREEN TRIGGER. Please note it can cause damage to your equipment if the connection is done incorrectly. (Tip = DC +12 V, Sleeve = GND) (Reference Page: 29, 54)

In case it is impossible to use the remote control due to the installation of this unit's dedicated BOX or rear projection, one can set up an external light receiving section. It is used to connect this external receiver and this unit. There is no such product as an external light receptor. Therefore, please consult your authorized JVC service center. (Reference page: 30)

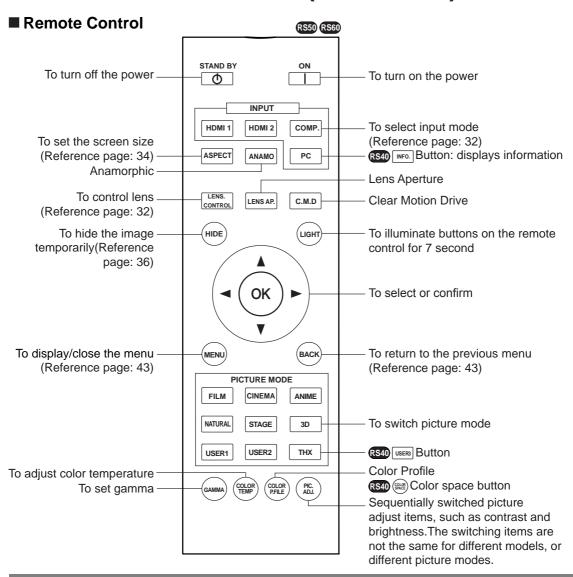

How to insert batteries into the remote control

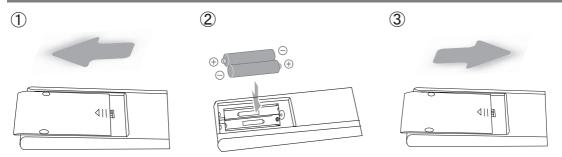

- If the remote control has to be brought closer to the projector to operate, it means that the batteries are wearing out.
 - When this happens, replace the batteries. Insert the batteries according to the \bigcirc marks.
- If an error occurs when using the remote control, remove the batteries and wait for 5 minutes. Load the batteries again and operate the remote control.



About installation

Important points concerning the installation

Please read the following carefully before the installation of this unit.



Installation environment

This unit is a precision device. Therefore, please refrain from installation or use in the following locations. Otherwise, it may cause fire or malfunction.

- · Dust, wet and humid locations.
- · Sooty or cigarette smoke filled locations.
- · On top of a carpet or bedding, or other soft surfaces.
- Locations with high temperatures as located in direct sunlight.
- Locations with high or low temperatures.
 Permissible operating temperature range: +5 ° to +35°.
 Relative humidity range permissible for operating: 20% ~ 80% (non-condensing).
 - Storage temperature tolerance: -10° to +60°.
- If the installation of the unit is done in a room with soot and/or smoke over a longer period, even small amounts of these substances will affect the device. This unit cools its optical components, which produce a great amount of heat, by sucking in air. If the optical circuits get dirty, this might lead to malfunctions, like the video images becoming darker or a deterioration of the color development. Dirt sticking to the optical components cannot be removed.




Please be careful to perform the installation at a certain distance from walls and other devices

For better heat dissipation, please keep a minimum distance between this unit and its surroundings as shown in the following illustration.

Moreover, please open the front of the unit. If there are any objects in front of the exhaust port, the hot air will flow back to the unit and heat it. The hot air flowing out of the unit might cause shadows on the screen (heat haze phenomenon).

Moreover, when it is enclosed in a space as shown in the following illustration, please make sure that the enclosed interior has the same temperature as the outside. High temperatures might lead to failure of the unit.

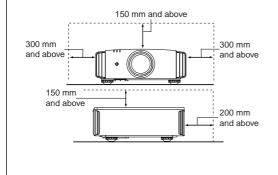



Please be careful when using

This unit uses a projection lamp, which will get hot when in use. Please refrain from projecting in the following circumstances.

Otherwise, it might cause fire or malfunction.


- Projection while lying on its side.
 Please avoid projection if the installation of the unit is done at an excessive angle of more than ± 30 °. It may cause harm to the life of the lamp and color shading.
- Please avoid projection at a location where the air vents or exhaust ports might get blocked.

Please choose a non-uniform cloth material for the screen. If you choose something uniform, like something with a checkered pattern, there might be interference with the pixel array of the D-ILA components. One way to reduce the interference pattern is to change the size of the screen, so that it will not be so noticeable.

Inclination adjustment for this unit

How to adjust the vertical angle

Height and inclination of the unit $(0 \sim 5 \text{mm})$ can be adjusted by rotating its feet. Lift the unit and adjust the four feet.

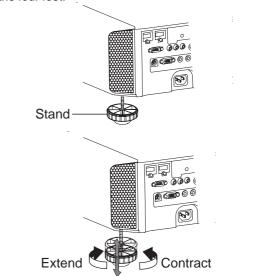

About installation (Continued)


Installing the Projector and Screen

While installing, please place this unit and the screen perpendicular to each other. Failing to do so may increase trapezoidal distortion. (Reference page: 36, 52)

OPureGlare

Set Angle

The angle range which can be set for this unit is ±30°.




Malfunctions may occur if the angle is not set within the above-mentioned range.

Shift

■ Left/Right position


* 0% up/down position (center)

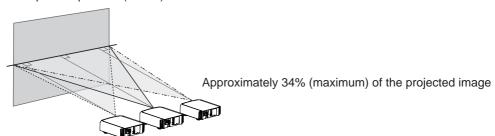

Approximately 34% (maximum) of the projected image

■ Up/Down position

* 0% left/right position (center)

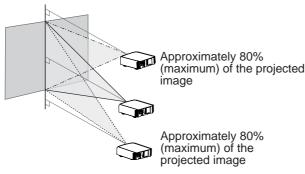


Lens shift correlation chart:

Left-Right Shift(%)	0%	10%	20%	30%	34%
Up-Down Shift(%)	80%	66%	47%	18%	0%

- Maximum Up-Down shift varies with the amount of Left-Right shift. Likewise, maximum Left-Right shift varies with the amount of Up-Down shift.
- The values on the chart are intended to act as a guide. Use them for reference during installation.

Lens shift movement range

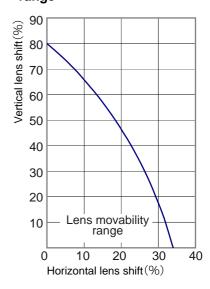


About installation (Continued)

Fixation of the projector

Measures to prevent the unit from toppling or dropping should be taken for safety reasons and accident prevention during emergencies including earthquakes.

When mounting this unit on a pedestal or ceiling, remove the 4 feet on the bottom surface and use all the 4 screw holes (M5 screws) to mount.

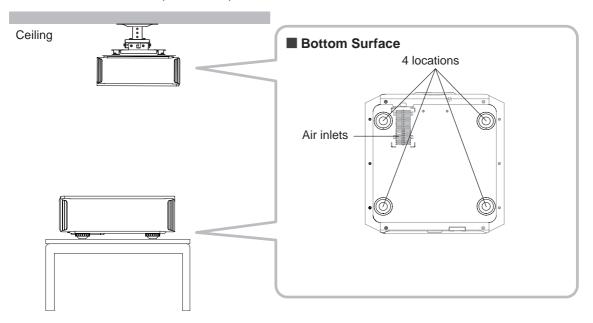

Precautions for Mounting

- Special expertise and techniques are required for mounting this unit. Be sure to ask your dealer or a specialist to perform mounting.
- Depth of the screw holes (screw length) is 23 mm. Use screws shorter than 23 mm but longer than 13 mm.
 - Using other screws will result in malfunctioning or cause the unit to drop.
- When mounting to a pedestal, ensure sufficient space (foot height of 10 mm or higher) around the unit so that the air inlets are not blocked.
- Do not tilt this unit more than ±5 degrees from side to side when using.

- Regardless whether the unit is still under guarantee, JVC is not liable for any product damage caused by mounting the unit with non-JVC ceiling fittings or when the environment is not suitable for ceiling-mount.
- When using the unit hanging from a ceiling, pay attention to the surrounding temperature. When a heater is in use, temperature around the ceiling is higher than expected.

About installation (Continued)

Screen Size and Projection Distance

Determine the distance from the lens to the screen to achieve your desired screen size. This unit uses a 2.0x power zoom lens for projection.

■ Relationship Between Projection Screen Size and Projection Distance

Projection Screen Size (Height, Width) Aspect Ratio 16:9	Approximate Projection Distance W(Wide) to T(Tele)
60" (Approx. 0.7, 1.3m)	Approx.1.78m to Approx.3.66m
70" (Approx.0.9, 1.5m)	Approx.2.09m to Approx.4.28m
80" (Approx.1.0, 1.8m)	Approx.2.40m to Approx.4.89m
90" (Approx.1.1, 2.0m)	Approx.2.70m to Approx.5.51m
100" (Approx.1.2, 2.2m)	Approx.3.01m to Approx.6.13m
110" (Approx.1.4, 2.4m)	Approx.3.31m to Approx.6.75m
120" (Approx.1.5, 2.7m)	Approx.3.62m to Approx.7.36m
130" (Approx.1.6, 2.9m)	Approx.3.92m to Approx.7.98m

Projection Screen Size (Height, Width) Aspect Ratio 16:9	Approximate Projection Distance W(Wide) to T(Tele)
140"	Approx.4.23 m to
(Approx.1.7, 3.1m)	Approx.8.60m
150"	Approx.4.53m to
(Approx.1.9, 3.3m)	Approx.9.22m
160"	Approx.4.84m to
(Approx.2.0, 3.5m)	Approx.9.84m
170"	Approx.5.14m to
(Approx.2.1, 3.8m)	Approx.10.45m
180"	Approx.5.45m to
(Approx.2.2, 4.0m)	Approx.11.07m
190"	Approx.5.75m to
(Approx.2.4, 4.2m)	Approx.11.68m
200"	Approx.6.06m to
(Approx.2.5, 4.4m)	Approx.12.30m


Effective Range of Remote Control Unit


■ When directing the remote control toward this unit.

- When aiming the remote control towards the remote sensor on this unit, ensure that the distance to the sensor in front or at the rear of this unit is within 7 m.
- If the remote control fails to work properly, move closer to this unit.

■ When reflecting off a screen

- Ensure that the total of distance A between this unit and screen and distance B between remote control and screen is within 7 m.
- As the efficiency of signals reflected from the remote control unit differ with the type of screen used, operable distance may decrease.

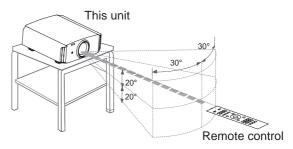

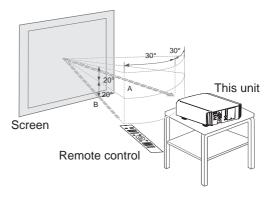

About the connection

Types of possible input signals (PC compatible)

HDM

No.	Designation	Resolution	fh [kHz]	fv [Hz]	dot CLK [MHz]	Total No. of dots [dot]	Total No. of lines [line]	No. of effective dots [dot]	No. of effective lines [line]
1	VGA 60	640 X 480	31.500	60.000	25.200	800	525	640	480
2	VGA 59.94	640 X 480	31.469	59.940	25.175	800	525	640	480
3	SVGA 60	800 X 600	37.879	60.317	40.000	1,056	628	800	600
4	XGA 60	1024 X 768	48.363	60.004	65.000	1,344	806	1,024	768
5	WXGA 60	1280 X 768	47.760	60.000	79.998	1,675	796	1,280	768
6	WXGA +60	1440 X 900	55.919	59.999	106.470	1,904	932	1,440	900
7	SXGA 60	1280 X 1024	63.981	60.020	108.000	1,688	1,066	1,280	1,024
8	WSXGA +60	1680 X 1050	65.222	60.002	147.140	2,256	1,087	1,680	1,050
9	WUXGA 60	1920 X 1200	74.038	59.95	154.000	2,080	1,235	1,920	1,200


PC (D-sub 3-lines 15 pins)

No.	Designation	Resolution	fh [kHz]	fv [Hz]	dot CLK [MHz]	Total No. of dots [dot]	Total No. of lines [line]	No. of effective dots [dot]	No. of effective lines [line]
1	VGA 60	640 X 480	31.500	60.000	25.175	800	525	640	480
2	VGA 72	640 X 480	37.900	72.000	31.500	832	520	640	480
3	VGA 75	640 X 480	37.500	75.000	31.500	840	500	640	480
4	VGA 85	640 X 480	43.300	85.000	36.000	832	509	640	480
5	SVGA 56	800 X 600	35.200	56.000	36.000	1024	625	800	600
6	SVGA 60	800 X 600	37.900	60.000	40.000	1056	628	800	600
7	SVGA 72	800 X 600	48.100	72.000	50.000	1040	666	800	600
8	SVGA 75	800 X 600	46.900	75.000	49.500	1056	625	800	600
9	SVGA 85	800 X 600	53.700	85.000	56.250	1048	631	800	600
10	XGA 60	1024 X 768	48.400	60.000	65.000	1344	806	1024	768
11	XGA 70	1024 X 768	56.500	70.000	75.000	1328	806	1024	768
12	XGA 75	1024 X 768	60.000	75.000	75.750	1312	800	1024	768
13	XGA 85	1024 X 768	68.700	85.000	94.500	1376	808	1024	768
14	WXGA 60	1280 X 768	47.760	60.000	79.998	1675	796	1280	768
15	WXGA+ 60	1440 X 900	55.919	59.999	106.470	1904	932	1440	900
16	SXGA 60	1280 X 1024	64.000	60.000	108.000	1688	1066	1280	1024
17	SXGA+ 60	1400 X 1050	63.981	60.020	108.000	1688	1066	1400	1050
18	WSXGA+ 60	1680 X 1050	65.222	60.002	147.140	2256	1087	1680	1050
19	1920x1080 60	1920 X 1080	67.500	60.00	148.500	2200	1125	1920	1080
20	MAC13"	640 X 480	35.000	66.667	30.240	864	525	640	480
21	MAC16"	832 X 624	49.107	75.087	55.000	1120	654	832	624
22	MAC19"	1024 X 768	60.241	74.927	80.000	1328	804	1024	768




Connection to the unit

- Do not turn on the power until connection is complete.
- The connection procedures differ according to the device used. For details, refer to the instruction manual of the device to be connected.
- This device is used for image projection. Connect to an audio output device such as amplifier and speaker for audio output from the connected device.
- The images may not be displayed depending on the devices and cables to be connected. For HDMI cable (sold separately), only use one that is HDMI-approved.
- It may not be possible to connect to this unit depending on the dimension of the connector cover of the cables to be connected.

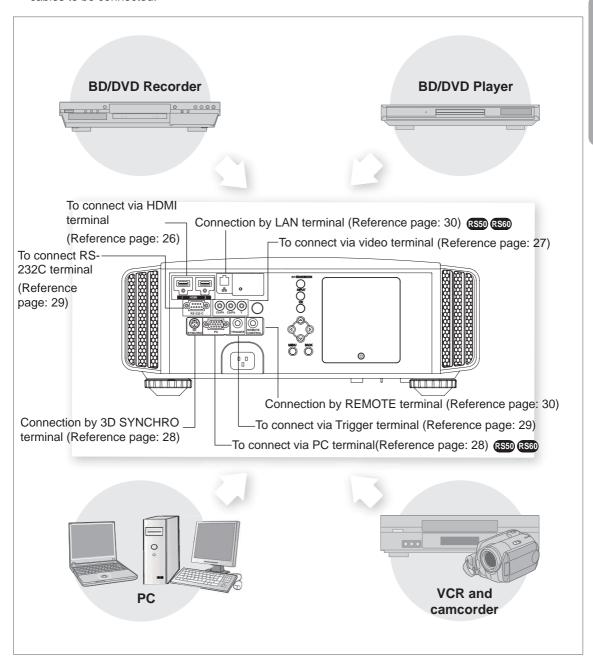


■ Connecting via HDMI Cable

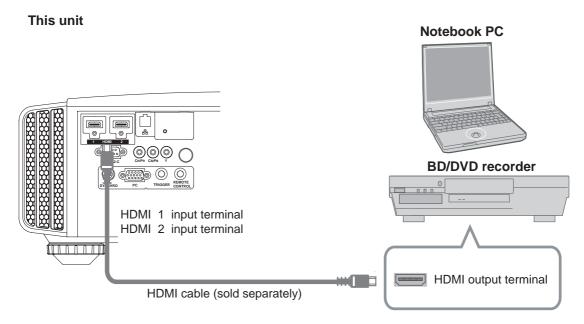

- If noise is produced, take PCs (Notebook PC) away from this unit.
- For a transmission bandwidth in compliance with the HDMI standard, a 340MHz cable is recommended. In case a cable is used for transmission bandwidth of 75MHz, it is recommended to choose 1080i or less for the transmitting equipment.
- If the video is not displayed, try to reduce the length of the cable or lowering the resolution of the video transmitting equipment.


■ Connecting via HDMI-DVI Conversion Cable

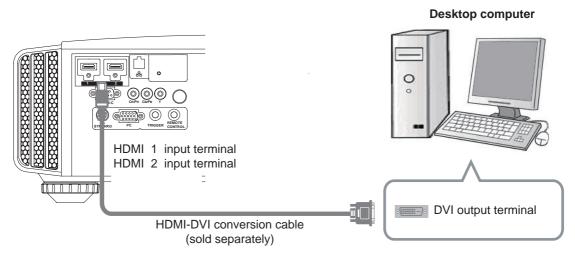

- If noise is produced, take PCs (desktop computer) away from this unit.
- If the video is not displayed, try to reduce the length of the cable or lowering the resolution of the video transmitting equipment.

■ Connecting via Component Video Cable


This unit

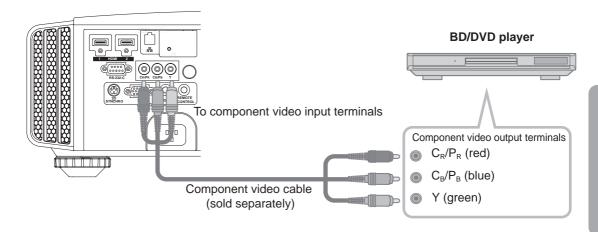

OPureGlare

Set "COMP." in the setting menu to "Y Pb/Cb Pr/Cr". (Reference page: 52)

■ Connecting via RGB Video Cable

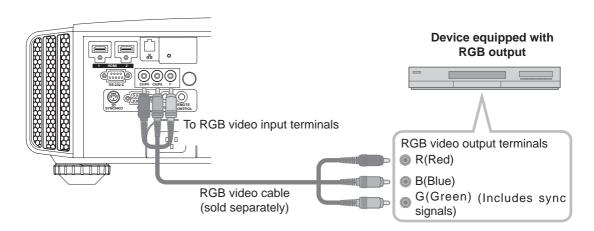


- Set "COMP." in the setting menu to "RGB". (Reference page: 52)
- For information on compatible input signals, see "Specifications". (Reference page: 73)




■ Connecting via PC Cable RS50 RS60

This unit

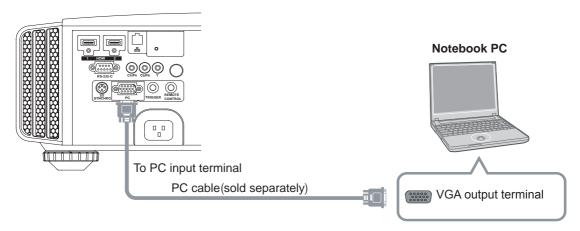

• For information on supported input signals, please refer to "Specifications".(Reference page: 73)

■ Connected by a 3D SYNCHRO terminal

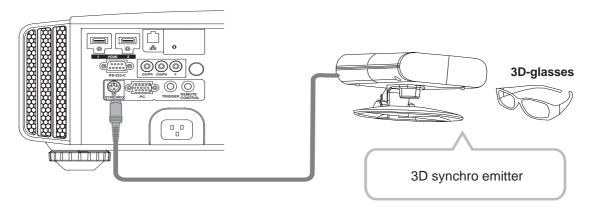


- 3D synchro emitter: This is a dedicated terminal for PK-EM1 (sold separately).
- 3D glasses (PK-AG1-B) is an optional device, and is not included in the 3D synchro emitter.



- Note that converting 2D images to 3D ones using the 3D feature of this product, and playing them for commercial purposes or for broadcasting in public places may infringe the rights of authors protected under the copyright laws.
- 3D images may appear different depending on the ambient temperature and lamp usage. Stop using the projector if images cannot be projected correctly.
- Before you watch 3D video images, make sure to read "3D description of the system" (Reference page 57 to 59).

■ Connecting via Trigger Cable


This unit

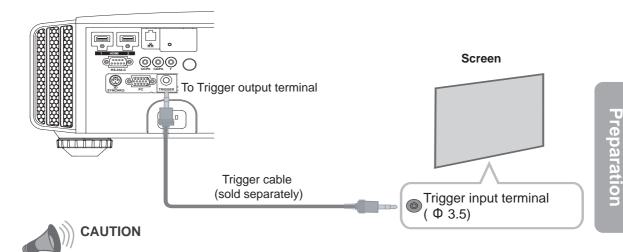

OPureGlare


- Do not supply the power to the other devices.
- Do not connect audio terminals of the other devices such as headphones etc. Otherwise, this may cause a malfunction of the other devices or injury.
- Using beyond the rated value will cause malfunction.
- Exercise adequate caution to prevent short circuit as the trigger terminal outputs a voltage of 12V.
- The default is set to "No output". Please set it under the item "Trigger" of menu [5] "Function" (Reference page: 54).

■ Connected by RS-232C connection cable

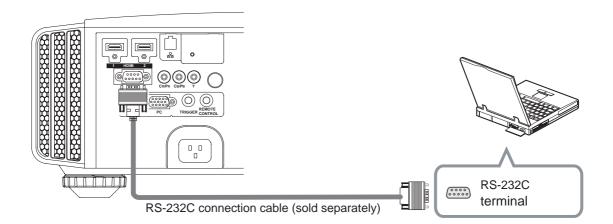

■ Connected by LAN terminal ® ®®


This unit

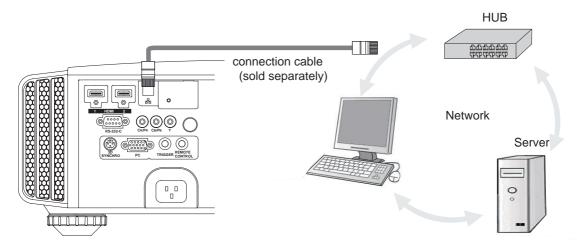

- The network is used to control the unit. It is not used for transmission of the video signal.
- Please contact your network administrator for questions concerning the network connection.

■ Connected by a REMOTE terminal

This unit

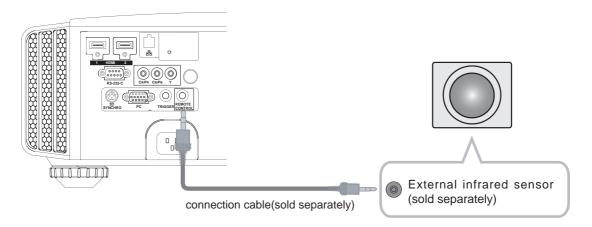


 For an external infrared sensor and connecting cable, please contact your dealer or a JVC service center.

OPureGlare

Connection of the power cord (provided)

Once you have connected the equipment, connect the projector power cord.

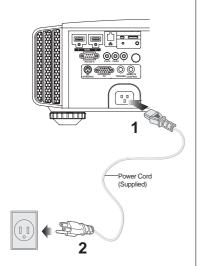


- 1 Connect the power cord supplied with the unit power input terminal
- 2 Connect to the power outlet

Be carful to avoid fire and electric shocks



- As the amount of electrical energy for this unit is large, please connect it directly into the wall outlet.
- When you are not using the equipment, please unplug the power cord.
- Connect it only with the provided power cord.
- Do not use voltage other than the indicated power voltage.
- Do not damage, break or modify the power cord. Moreover, the power cord will be damaged if you place it under heavy objects, heat or pull it.
- Do not unplug with wet hands.

Basic Operation

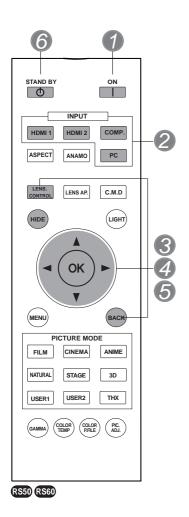



Basic operation procedures

Once you have finished the basic setup, the unit can normally be used just with the following operations.


Turn on power source




- You can also press the (७/۱) button on the unit to turn on the power. (Reference page: 15)
- The lens cover will be opened.

Choose the projected image

- 1 Select input mode
- You can also select the input mode by pressing the (INPUT) button on the unit. (Reference page: 15)



- 2 Play back the selected device
- Adjust the zoom (screen size)

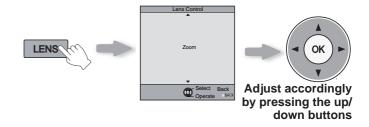

Adjust the focus (focal point)



OPureGlare










- After adjusting the image position, it may be necessary to select "Pixel Adjust" from the Settings menu "Installation". (Reference page:53)
- Every time the LENS button is pressed, the adjustment item will be switched among "Focus", "Zoom" and "Shift".
 - It can also be switched with the button.



Turn off power source

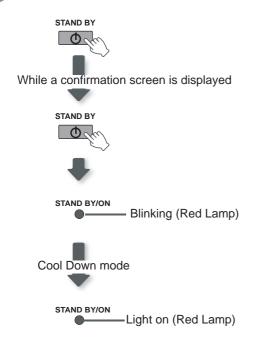


- When power off, the lens cover will be closed.
- The power cannot be turned off within approximately 90 seconds after it has been turned on. Start operation only after 90 seconds time.
- You can also press the (७/۱) button on the unit to turn off the power. (Reference page: 15)
- Pull out the power plug when the unit will not be used for a prolonged time.



About Cool Down mode

- The Cool Down mode is a function to cool down the lamp for approximately 60 seconds after projection is complete. This function prevents the internal parts of the unit from deformation or damage due to overheating of the lamp. It also prevents lamp blowout and premature shortening of lamp life.
- During Cool Down mode, the [STANDBY/ON] indicator blinks in red.
- After the Cool Down mode is complete, the unit automatically returns to standby mode.
- Do not pull out the power plug during Cool Down mode. This may shorten the lamp life and cause a malfunction.

Basic Operation (continued)

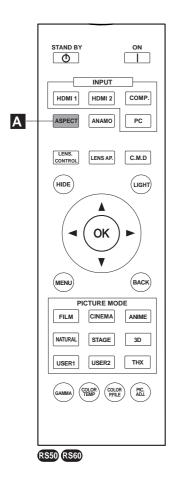

Frequently used useful functions

You can change the screen size of the projected image or hide the surrounding area of an image for which quality at the outer area has deteriorated.

- A Setting the Screen Size
- Masking the Surrounding Area of an Image
- C Temporary turning-off of the video
- Adjustment of the keystone correction

A Setting the Screen Size

The projected image can be set to a most appropriate screen size (aspect ratio).




- The screen size can also be set from "Aspect(Video)" of the setting menu. (Reference page: 50)
- When PC signals are input, the "Aspect(Computer)" setting will be available instead. (Reference page: 50)
- Input Image and Projected Image by Different Screen Size

Input Image		Screen Size	
input image	4:3	Zoom	
SDTV(4:3)	Aspect Ratio:Same	Aspect Ratio:	Aspect Ratio:Same
0517(1.0)	Most appropriate screen size	Landscape Image is stretched horizontally	Top and bottom of the image are missing
SDTV(4:3) Image recorded in landscape (black bands on top and bottom) of DVD software	Aspect Ratio:Same Small image is projected	Aspect Ratio: Landscape Image is stretched horizontally	Aspect Ratio:Same Most appropriate screen size

- Depending on the input image, selecting "4:3" may result in a vertically stretched image, while selecting "16:9" provides you with the most appropriate screen size.
- When there is 3D signal input, the ratio is fixed to "16:9".



Masking is available only when high definition images are input.

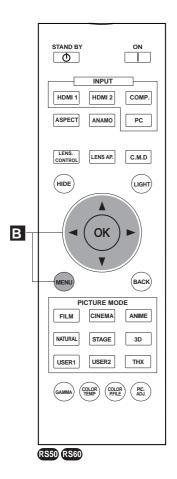

B Masking the Surrounding Area of an Image

Images for which quality at the outer area has deteriorated can be projected by masking (hiding) the surrounding area of the projected image.

Project the image



OPure Glare

Image for which quality at the outer area has deteriorated.


Mask the image


1 Display the setting menu







2 Select "Input Signal" → "Mask"



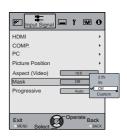

3 Set a mask value



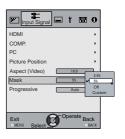

Example:


When the "Mask" value is changed from "Off" → "5%"







Basic Operation (continued)

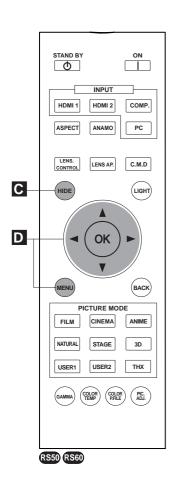

 When there is a 3D input signal, adjustment is not possible. Moreover, even if the keystone correction is adjusted, keystone correction is removed when there is a 3D input signal.

c Temporary turning-off of the video

You can hide the image temporarily.




- Press the HIDE button again to display image.
- The power cannot be turned off when the image is temporarily hidden.


D Adjustment of the keystone correction

In regards to the projection plane, any occurring keystone distortion is adjusted in case the installation location is inclined.

1 Display the setting menu

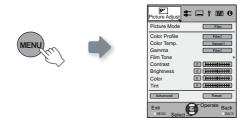

2 Select "Installation" → "Keystone"




3 Adjusts keystone correction

If one presses the cursor (vertical and horizontal arrows) in the keystone correction mode, the keystone distortion can be adjusted.

Adjust horizontal distortion with the cursors for left and right.



Adjust vertical distortion with the cursors for up and down.



4 Exit




Adjustments and settings in the menu


Structure of the menu hierarchy (summary)

The Menu of this unit is organized as follows. As this is only a brief guideline, items, which might not be displayed due to certain settings, are still displayed in the illustration. Moreover, in regard to com, it shows countermeasures for all kinds of devices, but there the values for setting and adjustment might be different. See "Description of menu items" (Reference: Since 45 and following) for details. It can be moved to subscreens used for adjustment, even for items that do not feature submenus.

[1] Picture Adjust

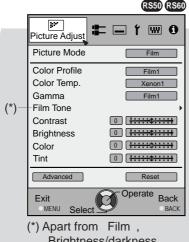


(*) Apart from Film , Brightness/darkness correction is displayed in the Picture Mode .

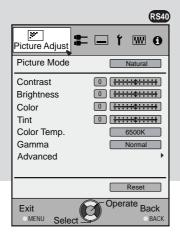

- "**[**4]]


To "[1] Layers and organization of the picture quality submenu"

[2] Input Signal

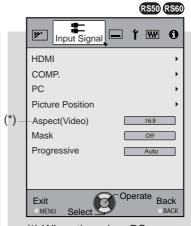

(*) When there is a PC signal input, Aspect (PC) is displayed.

Continue to the next

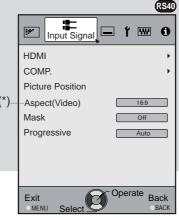

(*) When there is a PC signal input, Aspect (PC) is displayed.




To "[2] Layers and organization of the input signal submenu"

[3] Installation



Continued from the previous page

[4] Display Setup

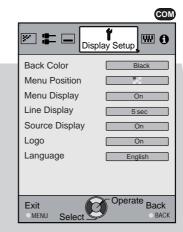

Continue to the next



To "[3] Layers and organization of the installation submenu"

[5] Function



RS40

0

Operate Back

Continued from the previous page

Trigger


Exit


Off Timer

Lamp Reset

High Altitude Mode

[6] Information

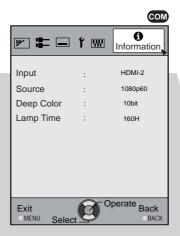

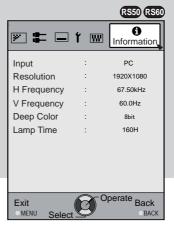


For PC signal input




To "[5] Layers and organization of the function submenu"


[1] Layers and organization of the picture adjust submenu

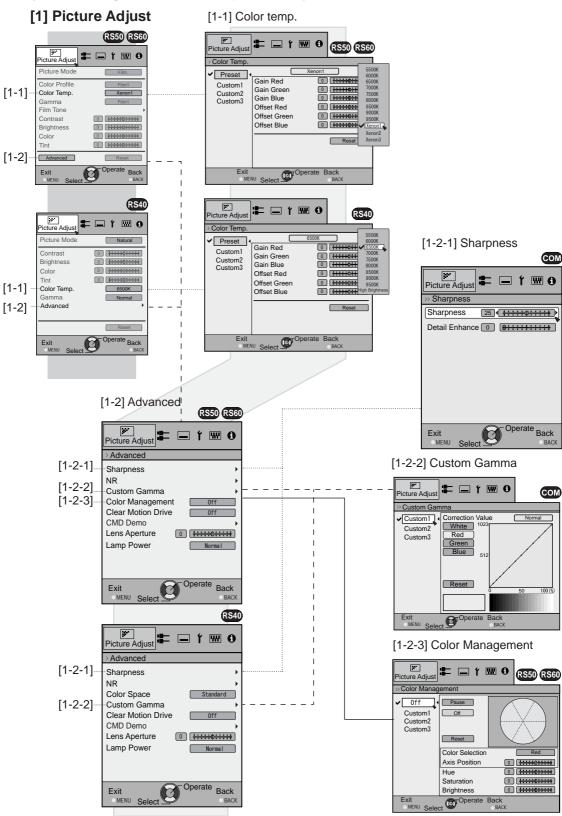

[2] Layers and organization of the input signal submenu

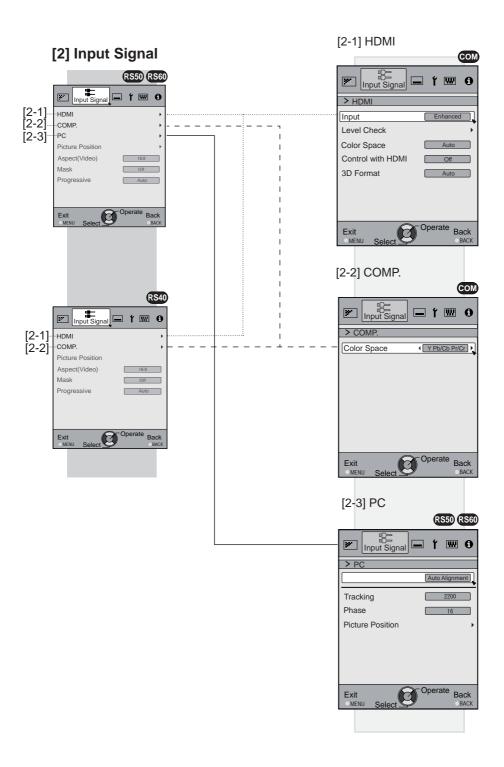


Layers and organization of the submenus [3] installation and [5] function

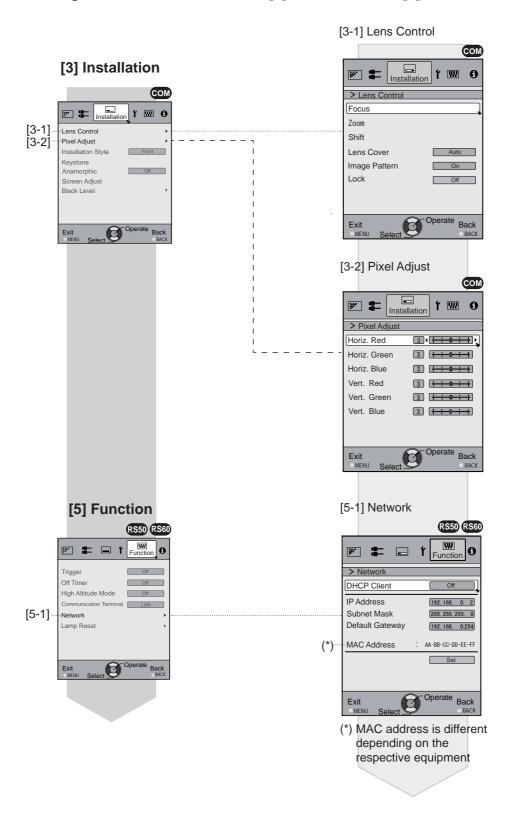


Menu operation button

Operate the menu by use of the buttons on the main body or the remote control.


Button	
This unit Remote Control	Function
MENU MENU	Menu is displayed. ● While the menu is displayed, the menu screen is turned off.
Chi Chi	While showing "Main menu" (Layer 1) selected items are confirmed, and "Submenu" (Layer 2) will be displayed. When the submenu is displayed, press OK, and the displayed items in the selection are moved to the "Setting screen" (Layer 3).
BACK BACK	Return to the previous menu screen. The menu screen is turned off when the main menu screen is shown.
This unit Remote Control	Displaying the main menu and the submenu ✓/►: Select an adjustment item in the menu. Set the setting value of the selected adjustment item. The adjusted setting value is immediately reflected in the image. ✓/▲: Selection of a displayed sub-menu item. Selection of an item in the menu.

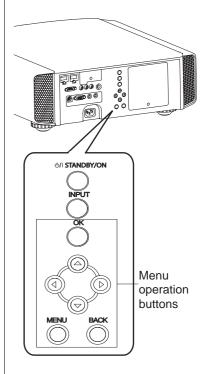


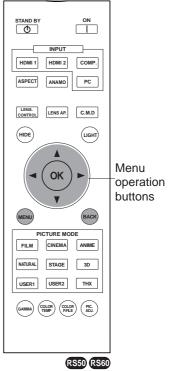

A L' - (-----1

Adjustments and settings in the menu (continued)

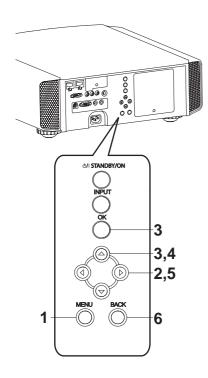


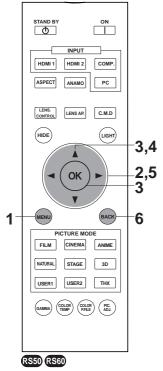

Menu operation procedure

1 Press MENU.

The main menu is displayed on the screen.



The submenu items, which are currently selected, are shown. Currently selected menu items are highlighted and the icon is colored in orange.

The submenu items, which are currently selected, are displayed.

Example: Picture Adjust RS50 RS60

2 Press cursor (✓/►) to select a submenu.

- A submenu (picture adjust, input signal, installation, display setup, function, information) is selected:
- If one selects "Information", information about the currently selected video input and PC input are displayed at the bottom of the menu.

3 Press OK or cursor (▲/▼).

- Sub-menu item is displayed.
- Sub-menu items vary depending on the input signal and the picture mode. See "Content menu" on the next page for more details.



Example: Input of signals other than PC signals



Example: When inputting PC signals

4 Press the cursor (▲ /▼) to select the items to adjust.

If the name of a submenu item is displayed in a dimmed manner, it cannot be selected.

5 Press cursor (◄/►) to change settings.

6 After adjusting, press BACK.

Every time it is pressed, you will return to the respective previous menu screen.

7 Repeat steps 6-2 to adjust other items.

After all adjustments are done, press MENU, and the menu disappears from the screen.



OPureGlare

Menu item description

All numbers for the items within []are default settings.

- It is possible to operate all items displayed in the menu display by pressing OK/BACK or the cursor (up, down, left, right arrows).
- Displayed items vary depending on the selected item in the menu and type of input signal or absence of any signal.

[1]	Picture	Ad	iust
1.1	liotaic	AU.	Jusi

[1] Picture Adjust	
Picture Mode	Please refer to the description of each mode, and then use the mode to best suited for you. Moreover, it is possible to adjust the image quality by using a user 1, 2, and 3. Settings: Film, Cinema, Animation, Natural, Stage, 3D, THX, User 1, User 2, User 3. [Natural]
Film	This quality setting is similar to the texture of the film setting. It is suitable for watching movies in general.
Cinema	This image setting is based on the DCI standard and brings to life brightly colored pictures. Suitable for viewing action movies and brightly colored images. DCI: Shorthand for Digital Cinema Initiatives.
Animation	An image quality setting for watching animation movies and the like.
Natural	It is an image quality setting with natural color/tone. Suitable for viewing video material, such as dramas/serials.
Stage	This image quality setting is suitable for watching of live events, e.g. on a stage.
3D	This is an image quality setting for watching 3D movies.
User 1 User 2 User 3 (RS40)	The users 1, 2, and 3 should adjust the image quality as desired in each case. Data of the last adjustment is saved.
	It is an image setting certified by the company THX.
THX (RS50) (RS60) Color Profile (RS50) (RS60)	It selects a color profile to suit the input source. Depending on the settings, the items that can be set in the "Picture Mode" vary. (See Table 1) The color profile is selected based on the video production. We recommend to match the color profile of the video you want to watch. (*) If you select "Off", it is impossible to perform any picture adjust for other color temp. other than "Lamp power" and "Lens aperture" under "Advance", and also not gamma or sharpness. Setting: Film 1, Film 2, Cinema 1, Cinema 2, Standard, Anime 1, Anime 2, Video, Vivid, Adobe, Stage, 3D, Off. Depending on the picture mode, the default values will change. [See table 1]
Film 1	This is a profile that comes close to a color space that resembles using a Xenon lamp to transmit a film used for movies by the Eastman Kodak Company.
Film 2	This is a profile that comes close to a color space that resembles using a Xenon lamp to transmit a film used for movies by the FUJIFILM Corporation.
Cinema 1	This is a profile that resembles the color space of the DCI standard.
Cinema 2	This is a profile that resembles the color space of HDTV.
Standard	It is a profile with an especially rich representation of the film-specific colors. HDTV: Shorthand for High Definition Television.
Anime 1	This is a profile suitable for CG-animations, which can be often found in Hollywood- produced animated series. It is intended for animations with multiple bright colors.
Anime 2	This is a profile suitable for animation cel-style animation series, which are common in Japan. It is intended for animations with many dim colors.
Video	This profile is suitable e.g. for TV / drama / sports.
Vivid	This is a profile with rich sense of color, which makes it suitable for games.
Adobe	This is the color profile for Adobe RGB.
	(*) Adobe, and the Adobe logo are registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
Stage	This profile is suitable for live music, orchestra and opera concerts, theater, etc.
3D	This is the most suitable profile when using 3D-glasses.
Off	It is a mode that does not adjust the color management.



[Table 1] The setting contents and default values (RSSO) (RSSO) of the color profiles for the picture mode

	Picture Mode							
	Film	Cinema	Anime	Natural	Stage	3D	THX	User 1, 2
	Film 1	Cinema 1	Anime 1	Video	Stage	3D	THX	Everything
Color Profile	Film 2	Cinema 2	Anime 2	Vivid	Standard	Standard		is displayed
Color Profile		Standard	Standard	Adobe		Vivid		except for Film 1 and
				Standard				Film2.

This is the default value according to the picture mode.

Color Temp.	It is possible to set the color temp. To "[1-1] Color Temp." of the submenu	
Gamma	It is possible to set the gamma curve. Please set to your preference. Settings: Normal, A (3D), B (3D), Film 1, Film 2, Film 3 Film 4, A, B, C, D, Custo Custom 2, Custom 3	m 1, [Normal]
Normal	Typically we recommend this setting.	
A (3D) B (3D)	A (3D), B (3D) can only be set, if the "Picture Mode" is "3D". This is the normal gamma curve for 3D. A (3D) will be brighter.	
	Film 1, 2, 3, 4 can only be set if the "Picture Mode" is set to "Film" (RS50) (RS60)	
Film 1	This is a gamma curve that approximates the characteristics of an Eastman Ko Company film for movies.	odak
Film 2	This is a gamma curve that approximate the gamma curve characteristics of a cinematographic film made by the FUJIFILM Corporation.	
Film 3	This is a gamma curve that is even more focused on tone for the gamma of Film	n 1.
Film 4	This is a gamma curve that emphasizes more contrast for the gamma of Film 2.	
	A, B, C, D cannot be set if the "Picture Mode" is "3D".	
Α	In regard to normal gamma, this is a gamma curve focused on tone.	
В	This is a gamma curve for the film's unique S curve.	
С	This is a gamma curve that – in regard to the gamma of B – emphasized even n feeling of contrast.	nore the
D	For normal, this is a gamma curve where the intermediate gradations look very	bright.
Custom 1	Custom 1, 2, 3 cannot be set if the "Picture Mode" is "3D".	
Custom 2 Custom 3	Under submenu "[1-2-2] Custom Gamma", it is possible to change the gamma save it.	curve and
	The initial value of Custom 1, 2, and 3 is the same as for "Normal".	
Film Tone	You can reproduce the intensity of the exposure image.	
RS50 RS60	(*) This function can be set if the "Picture Mode" is set to "Film".	
White	Settings: (The more under-exposure, the darker) -16 to 16 (the more over-expositing ther)	sure, the [0]
Red	Setting: (under-exposure to for red), -16 to 16 (over-exposure for red)	[0]
Green	Settings: (under-exposure for green) -16 to 16 (over-exposure for green)	[0]
Blue	Settings: (under-exposure for blue) -16 to 16 (over-exposure for blue)	[0]
Dark/Bright Level	Compensating darkness / brightness of an area.	
RS50 RS60	(*) It is possible to set it unless the "Picture Mode" is set to "Film".	
Dark Level	Values: (makes dark areas darker) -7 to 7 (brightens dark areas)	[0]
Bright Level	Settings: (darkens bright areas) -7 to 7 (makes bright areas brighter)	[0]





Contrast	Adjusts the contrast of the video images. Settings: (blackish) -50 50 (whitish)	
Brightness	You can adjust the brightness of the video image. Settings: (dark) -50 to 50 (bright)	
Color	Adjust the color intensity of the video images. Settings: (dim), -50 to 50 (saturated)	
Tint	Adjusts the image tint of the video images. Settings: (reddish) -50 to 50 (greenish)	
Advanced	Functions such as contour correction, custom gamma and color managem to sub-menu "[1-2] Advanced".	ent can be set
Reset	Sets settings to default factory settings.	
1-1] Color Temp.		
	Set the color temp. of the video images.	
	Please adjust to your preference. (*) For this setting, the setting items can differ in accordance with the "Pictor Adjustment is not possible when set to "THX".	ure Mode".
	Settings: (Preset value), Xenon1, Xenon2, Xenon3, Custom 1, Custom 2, Custom 3	[Preset value]
(Preset value)	The color temp. can be adjusted within the range of 5500K to 9500K in ste	ps of 500K.
	It is said that a value of 6500K produces a well balanced video image. Settings: Between (reddish) 5500-9500 (bluish) in steps of 500K	[6500
Xenon1	This reproduces the color temp. characteristics of a xenon lamp being use	d in cinemas.
Xenon2	A light source color that is emitted by a film projector.	
Xenon3	A light source color emitted by a projector used for digital cinema.	
	A light source color that looks cooler than that of the Xenon2.	
Offset	Xenon 1, Xenon 2, Xenon 3 can each be adjusted based on the dark color images.	of the video
Red	Settings: (Weak red) -50 to 50 (strong red)	[0]
Green	Setting: (Weak green), -50 to 50 (strong green)	[0
Blue	Setting: (Weak blue) -50 to 50 (strong blue)	[0
Custom 1 Custom 2 Custom 3	You can adjust the color temp. and save each Custom 1, 2, and 3.Please s preferred adjustment values and enjoy it.	save your
Gain	It is possible to adjust the bright part of the video images for each color.	
Red	Settings: (Weak red) -50 to 50 (strong red)	[0
Green	Setting: (Weak green) -255 to 0 (strong green)	[0
Blue	Setting: (Weak blue) -255 to 0 (strong blue)	[0
Offset	For each color, the dark areas of the video images can be adjusted.	
Red	Settings: (Weak red) -50 to 50 (strong red)	[0]
Green	Setting: (Weak green) -50 to 50 (strong green)	0]
Blue	Setting: (Weak blue) -50 to 50 (strong blue)	[0]




[1-2]	Advanced	
-------	----------	--

Sharpness	You can set the sharpness and detail enhance to "[1-2-1] Sharpness" of the subr	menu
NR	Reduces the noise of the video images. Please adjust to your preference.	
RNR	Adjusts the intensity of random noise elimination of the image. Values: (Low) 0 to16 (strong)	[0]
MNR	Adjusts the intensity of mosquito noise elimination of the video images. (*) It is not possible to set it when the "Picture Mode" is set to "3D". Moreover, it is not possible to set it when there is an input of HD input signals. Values: (Low) 0 to16 (strong)	[0]
BNR	Reduces the block noise of the video images. (*)) It is not possible to set it when the "Picture Mode" is set to "3D" Moreover, it is not possible to set it when there is an input of HD input signals. Settings: On, Off	[Off]
Color Space RS40	You can switch the color space display of the projector output. Settings: Standard, Wide 1, Wide 2	
Standard Wide 1 Wide 2	Equivalent to the HDTV color space Equivalent to the color space of the DCI standard A color space that is broader than Wide1	
Custom Gamma	It is possible to set the gamma curve and save it. Please adjust to your preference To "[1-2-2] Custom Gamma" of the submenu	Э.
Color Management	It is possible to set the color of the screen to the preferred color and save it. To "[1-2-3] Color Management" of the submenu.	
Clear Motion Drive	It improves video images with fast movements to produce clear video images with residual image retention. For PC and 3D signals, the "Clear motion Drive" cannot be set. Moreover, the images in some scenes may be distorted. In such a case, please so "Off". Settings: Off, Mode 1, Mode 2, Mode 3, Mode 4, Film motion	
Off	Off	
Mode 1	Black insertion weak	
Mode 2	Black interpolation strong	
Mode 3	Interpolation weak	
Mode 4	Interpolation strong	
Inverse Telecine	With 60i/60p signals, e.g of TV-broadcast and DVDs, original 24 frame video image footage is changed to a 24 frame display. (*) 24p will not function.	je
CMD Demo	It is possible to confirm the effect of the setting of Mode 3 and Mode 4 of the Clea drive. Upon pressing the button "OK", it will be displayed on all sides of a screen i center split into two parts. Finally, it will turn to "Off". It cannot be set for PC and 3 signals.	n the D
1.4	Settings: Left -> right -> top -> Bottom -> Off (changed with "OK" button)	[Off]
Left	The left screen displays a demonstration of the Clear motion drive.	
Right	The right screen displays a demonstration of the Clear motion drive.	
Top	The upper screen displays a demo of the Clear motion drive.	
Bottom O#	The screen below displays a demo of the Clear motion drive.	
Off	The Demo of the Clear motion drive is turned off.	т.
Lens Aperture	Adjusts the amount with which the optical iris is squeezed. A setting of 0 means fu opened. Settings: (Dark) -15 to 0 (bright)	ılly [0]



ENGLISH • O

Lamp Power	It is possible to change the brightness of the lamp. (*) If continually used with "High", the lamp will become dark earlier. (*) The more one lets the interior temperature of the device rise due to generation of heat, the less the level of tolerance against high temperatures. (*) For about 60 seconds after the lamp is lit, the lamp cannot be switched off. Settings: Normal, High [Normal]
Normal	Normally this setting is chosen.(160W drive)
High	In a bright room, when the video is hard to see, this setting is chosen.(220W drive)
[1-2-1] Sharpness	
Sharpness	Emphasizes the outlines of video images. Please adjust to your preference. Values: 0 to 50 (clear)
Detail Enhance	It makes minute details of the video images stand out. Please adjust to your preference. Values: 0 to 50 (strong)
[1-2-2] Custom Gamma	1
Custom 1~3	[1] It is possible to select a gamma curve adjustment for Custom 1, 2, and 3 under the "Gamma" of the picture adjust and then save it. Please adjust to your preference. (*) Initial values of Custom 1, 2, and 3 are the same as for "Normal". (*) Please refer to the figure at the bottom of the menu in two frames for adjustment. (*) It is recommended that you read "Gamma Curve" (page reference: 56) for hints about adjustment.
Correction Value	You can choose to add the underlying gamma curve adjustment. (*) Can choose any setting, as the default gamma curve will always appear linear. Settings: Normal, A, B, C, D (brightens in particular dark to intermediate parts) 1.8 to 2.6 (darkens in particular dark to intermediate parts) in the range of values with increments of 0.1 [Normal]
Gamma Adjustment	The gamma curve for "green" is being displayed as being representative. If "white", "red," "green" or "blue" are selected, the corresponding color curves are displayed. Place the cursor on a gamma curve with 12 points with the buttons for left and right, and then use the buttons for up and down buttons to move those points up or down.
White	Red, green and blue can be adjusted at the same time.
Red	It is possible to adjust the gamma curve of red.
Green	It is possible to adjust the gamma curve for green.
Blue	It is possible to adjust the gamma curve for blue.
Reset	The same data as for the "Normal" mode are used. (*) When you exit the adjustment menu of Custom Gamma, please save the adjustment values.

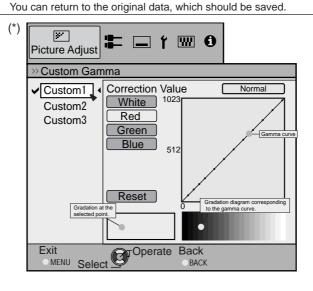

are expanded.

Settings: Auto, 1:1, Full

image off the screen is cut off.

Adjustments and settings in the menu (continued)

Custom 1~3	Set the 7 color axis (red / orange / yellow / green / cyan / blue / magenta) color	r as vou
ouotom i o	like and save it then. For example you may want to change only the red color of	
	Please adjust to your preference. According to your adjustments, the input ima	
	background changes. It is possible to confirm the video image before adjustment	ent by
	pressing the "HIDE" button of the remote control.	
Pause	It is possible to display the input video image of the background being adjusted picture.	
	Settings: On, Off	[Off]
On O"	Freezes the input video image.	
Off	Unfreezes the input video image.	
Color Selection	It is possible with the 7 colors of red, orange, yellow, green, cyan, blue and ma precisely adjust the hue, color saturation and brightness, and then save it. Pleato your preference.	
Axis Position	Fine-tune the position of the central axis of the selected color further.	
	Settings: -30 to 30	[0]
Hue	Adjust the hue.	
	Settings: -30 to 30	[0]
Saturation	Adjust the color saturation. Settings: (dim color), -30 to 30 (vivid colors)	[0]
Brightness	Adjust the brightness. Settings: (dark) -30 to 30 (bright colors)	[0]
Input Signal		
HDMI	It is possible to set this if one selects the HDMI terminal to the submenu "[2-1]	HDMI".
COMP.	This can be set if one selects the COMP. terminal to the submenu "[2-2] COM	
PC RS50 RS60	This can be set if one selects the PC terminal to the submenu "[2-3] PC".	<u> </u>
Picture Position	Please adjust if the edges of the picture are partially missing due to the timing horizontal and vertical synchronization signals. The value of the picture positio on the input signal.	n depends
	(*) Depending on the input signal, it may be the case that not everything of the image is displayed.	video
11	(*) When there is a 3D input signal, adjustment is not possible.	
Horiz. Vert.	This aligns the horizontal direction of the image position.	
	This aligns the vertical positions of the image.	
Aspect (Video)	(*) It is displayed when there is a video signal input.(*) If set to3D, ratio is fixed to 16:9.Settings: 4:3, 16:9, Zoom	[16:9
4:3	Sets the screen size of the image to 4:3. For HD signals, left and right sides ar	
16:9	Sets the screen size of the video image screen to 16:9. For SD signals left and	
	The same state of the state state state and the state state of the sta	

Positions the video image screen in the center of the display range, to fill the screen.

Depending on the size of the video screen, left and right black borders will be drawn.

It does not keep the aspect ratio of the video image screen and fills the entire screen.

Depending on the input video image, the screen will become smaller or part of the input

[Auto]

Zooms the video images. (*) For HD signals, this cannot be selected. Sets the video image screen size when there is a PC video signal input.

The video image screen size is displayed with the size of the input image.

(*) Is displayed when there is a PC signal input.

Zoom

Aspect (PC)

Auto

Just

Full





Mask	It hides the upper, lower, left and right borders of the screen with a black ma individually adjusted vertically and horizontally. Please adjust to your prefere Setting: Off, 2.5%, 5%, Custom	
Off	Not masked.	[OII]
2.5%	Compared to the original video images, around 2.5% around the video images, around 2.5% around the video images, around 2.5% around the video images.	es are
5%	Compared to the original video images, around 5% around the video images	s are masked.
Custom		
Left	Compared to the original video images, around 5% of the video images are the left side.	
Right	Settings: 0^{\sim} 5% Compared to the original video images, around 5% of the video images is mright side.	
Тор	Settings: 0 $^{\sim}$ 5% Compared to the original video images, around 5% of the video images are upper side. Settings: 0 $^{\sim}$ 5%	[0] masked at the [0]
Bottom	Compared to the original video images, around 5% of the video images are bottom side. Settings: 0 ~ 5%	
Progressive	Interlaced signals (480i/576i/1080i) are converted to progressive signals. Int interlaced signal video images with video images from the surrounding. Pleat preference. Settings: Auto, Off	erpolates
Auto	It is automatically detected if the 24p video images, which can be seen in the interlaced signals from the original video material or if they are the product conversion and are interpolated accordingly.	e film screens,
Off	The interpolation of video images as interlaced video signals, e.g. video mat	erial is done.
2-1] HDMI		
Input	(*) It can be set when the HDMI terminal is selected.	
	Sets the dynamic range of the input video images (scale). Dark and bright a are not matched to the range, might get brighter or darker. If you are unsure signal dynamic range, please check under "Level Check". Settings: Standard, Enhance, Super White	
Standard	It gets set if the dynamic image range of the gradation level of the input image 16-235. In case of a video signal, please set it up here.	
Enhanced	It is set if the dynamic range of the input video scale level is 0-255. If these a please set them here.	re PC signals,
Super White	It is set if the dynamic range of the input video scale level is 16-255.Please to video equipment compatible with Super White for Super White-enabled D	VD / BD etc.
0 235 255 16	You can confirm the dynamic range of the input signal. A pattern as shown in illustration is displayed in the four corners and center of the screen. Please dynamic range of input signal with this pattern illustration and confirm. (*) The number in the illustration is the scale level. This number is not displa illustration of the gradation in the figure is accentuated for explanatory purposes.	compare the yed. The
Color Space	different from the actual scale level. It sets the color space of the input signal. Settings: Auto, VChCr(4:4), VChCr(4:3), RCR	[AutA]
Auto	Settings: Auto, YCbCr(4:4:4), YCbCr(4:2:2), RGB YCbCr(4:4:4), YCbCr(4:2:2), RGB signals are automatically detected and cc	[Auto]
Auto YCbCr (4:4:4)	Sets it if the input of the YCbCr(4:4:4) input video image signal is performed	-
YCbCr (4:4:4)	Sets it if the input of the YCbCr(4:2:2) input video image signal is performed	
RGB	It is set when the RGB video signals input is performed.	
Control with HDMI	Configured communication of the HDMI equipment control Settings: On, Off	[Off]

3D Format	Sets the format of the 3D input signal. Some signals may not be appended with 3D information themselves, and profail if they are recognized as normal 2D signals. When this occurs, configure the settings manually. (*) It is recommended to read "On 3D" (reference page: 53) before watching 3	
	images. Settings: Auto, Frame Packing, Side by Side, Top & Bottom, 2D	[Auto
Auto	Is set automatically.	
Frame Packing	Select this if the 3D input signal is the frame pack method.	
Side by Side	Select this if the 3D input signal is the side by side method.	
Top and Bottom	Select this if the 3D input signal is the top and down method.	
2D	Projected as a 2D signal.	
2-2] COMP. (RS50) (RS60)		
	(*) It can be set when the COMP. terminal is selected.	
Color Space	It configures the input signal method of the component input terminal. Settings: Y Pb/Cb Pr/Cr, RGB [Y	Pb/Cb Pr/Cr
Y Pb/Cb Pr/Cr	It is set for the component video image input signal.	
RGB	It is set for the RGB video image input signal.	
[2-3] PC		
	(*) Setting can be done when selecting a PC terminal.	
Auto Alignment	The picture position of Tracking and Phase are automatically adjusted.	
Tracking	Adjusts the size and display of the horizontal direction and display area of the images. (Depending on the signal, there is normally no need to be adjusted.)	video
Phase	Adjusts the flickering and blur of the video images. (Depending on the signal, there is normally no need to adjustment.)	
Picture Position	Adjust the display of the picture position.	
Horiz.	Adjusts the horiz. of the video image.	
Vert.	Adjusts the vertical position of the image.	
3] Installation		
Lens Control	To Sub-menu "[3-1] Lens Control"	
Pixel Adjust	To submenu "[3-2] Pixel Adjust"	
Installation Style	Matching the state of the projector's projection, one can switch horizontal and / forward switch.	vertical flip
	Settings: Front, Ceiling Mount (Front), Rear, Ceiling Mount (RE)	[Front
Front	Front upright projection mode.	
Ceiling Mount (F)	Ceiling/front projection mode.	
Rear	Rear upright projection mode.	
Ceiling Mount (R)	Ceiling/ rear projection mode.	
Keystone	In regards to the projection plane, any occurring keystone distortion is adjusted the installation location is inclined. (*) There may be instances, when the video image - after having corrected key distortion - will not match the screen. The position with a shift correction of 0% an exception. (*) When there is a 3D input signal, adjustment is not possible.	ystone
Horizontal	Adjusts the horizontal keystone. Settings: -40 to 40	[0
Vertical	Adjusts the vertical keystone.	





Anamorphic	The video images are projected after being enlarged in the vertical direction of the resolution. This setting is used when one uses the anamorphic lens to enlarge the horizontal direction.	
	(*) Anamorphic mode cannot be set when there is a 3D signal input.	
	If a 3D signal is fed in when Anamorphic mode is set to A or B, Anamorphic mode automatically turned Off.	is
	Settings: A, B, Off	[Off
A	Video with an aspect ratio of 2.35:1 is enlarged in the vertical direction of the pane resolution and then projected.	el
В	Video with an aspect ratio of 16:9 are displayed by reducing them in the horizonta direction, without changing their size in the vertical direction.	I
Off	Used when watching video images other than those with a 2.35:1 aspect ratio whi an anamorphic lens. 2.35:1 video images are projected without any changes. (Bla bands appear on all sides)	
Screen Adjust	It corrects the white balance fault according to the reflective properties of the proje screen. Please adjust to your preference.	ection
Black Level	Sets the black level when used indoors.	
	Settings: 0 to 10	[0
-1] Lens Control		
	It controls each motorized functions of the lens during the projector-installation.	
Focus	This function is used to adjust the focus.	
Zoom	This function is used to adjust the zoom.	
Shift	This function is used to adjust the shift.	
Lens Cover	This function is used to set if the lens cover should be linked with a power supply opening/closing, or if it should be left open.	
·	Settings: Auto, Open	[Auto
Auto	This opens/closes the lens cover when it is linked to on/off of a power supply.	
Open	Regardless if the power supply is on on/off, the lens cover is always open.	
Image Pattern	It is possible to adjust the projection screen during adjustment of the focus zoom s Settings: On, Off	shift. [Or
	During the adjustment, the image pattern is displayed.	
On		
On	The image pattern is displayed in conjunction with the above setting items.	
On	The image pattern is displayed in conjunction with the above setting items. The external input signal is displayed without displaying the image pattern.	
		[Off

[3-2] Pixel Adjust

Off

This fine tunes each slight color errors in the horizontal/vertical directions of the video images in units of 1 pixel.

- (*) It is impossible to match all image pixels on the screen. Due to the equipment, there will always be some gaps.
- (*) In case the image is reversed, or upside-down, the horizontal and vertical directions are reversed.
- (*) Please perform adjustments on a clear still picture.

button is pressed, a warning message is issued.

This functions as lens control function.

(*) For fine tuning, the effects of adjustments may be difficult to understand for some video images.

Horiz. Red	(Move red to the left) 1 to 5 (move red to the right)	[3]
Horiz. Green	(Move green to the left), 1 to 5 (move red to the right)	[3]
Horiz. Blue	(Move blue to the left) 1 to 5 (move red to the right)	[3]
Vert. Red	(move red down) 1 to 5 (move red up)	[3]
Vert. Green	(Move green down) 1 to 5 (move green up)	[3]
Vert. Blue	(move blue down) 1 to 5 (move blue up)	[3]

[4]	Dis	play	Setu	p

Back Color	Sets the color of the background, which is displayed without an input signal. Settings: Blue, Black	[Blue]
Blue	Sets the background color to blue.	
Black	Sets the background color to black.	
Menu Position	Sets the picture position of the menu. Please set to your preferred position N menu by pressing the left or right keys when you have selected an item. Mor one presses the button [OK], an image illustration appears at the position of The highlighted position in the illustration moves by use of the left and right k presses [OK], the menu moves to the highlighted position. If you press the key to the right, the menu will move starting from the top left -> central -> bottom right -> bottom left and then back to the upper left. By pressing of the left key, the menu moves in the opposite direction.	eover, if the menu. eys. If one
Menu Display	Sets the time for the menu to be displayed.	
	Settings: 15 sec, On	[On]
15 sec	If there is no menu operation for 15 seconds, the menu display vanishes.	
On	Display always.	
Line Display	Configures if input is displayed or not when input is switched. value: 5 sec, on	[5 sec]
5 sec	Displays for 5 seconds.	• •
Off	Not displayed.	
Source Display	Configures whether or not to display the signal, when the input is switched. Settings: On, Off	[On]
On	Display.	
Off	Not displayed.	
Logo	Configures whether or not to display the "D-ILA" logo upon activation. Settings: On, Off	[On]
On	Displayed for 5 seconds.	
Off	Not displayed.	

[5] Function

Trigger	Configures 12V output to an external screen equipped with a trigger function. Settings: Off, On(Power), On(Anamo)	[Off]
Off	No output.	
On (Power)	When turned on, control signals (12V) from the trigger terminal are emitted. If you turn off the power, the output of the control signal stops. During standby mode, an output will occur if the OPERATE button is pressed. After cooling, the output stops when you go back to standby.	
On (Anamo)	Control signals (12V) are emitted when the Anamorphic mode is set from "Off" to "B". If the Anamorphic mode is set to "A" or "B", the operation in this state equals " (Power)".	
Off Timer	Sets Off Timer function and its time. * If there are no operations, the unit powers off automatically. * It powers off automatically even while projecting an image. Settings: Off, 1 hour, 2 hours, 3 hours, 4 hours	[Off]



Off	Power is not turned off.	
1 Hour	Power is turned off automatically after 1 hour.	
2 Hours	Power is turned off automatically after 2 hours.	
3 Hours	Power is turned off automatically after 3 hours.	
4 Hours	Power is turned off automatically after 4 hours.	
High Altitude Mode	Set to use at low pressure locations (900m above sea level). Settings: On, Off	[Off]
On	Set.	
Off	Do not set.	
Communication Terminal (RS50 (RS60)	Sets the used control terminal. It is not possible to use it at the same time. Settings: RS-232C, LAN	[RS-232C]
RS-232C	Sets the RS-232C terminal.	
LAN	Sets the LAN terminal.	
Network RS50 RS60	It is displayed, if the setting of the "Communication terminal" to the submenu "[5-1] Network" is set to "LAN".	
Lamp Reset	Reset of the lamp use time to "0".	

[5-1] Network RS50 RS60

DHCP Client	Sets the DHCP client. Settings: On, Off	[Off]
On	Obtains automatically an IP address from within the conn * The automatic retrieval starts with the "Set" within the n	
Off The network settings are being done manually.		
IP Address	Sets the IP address.	[192.168.0.2]
Subnet Mask	Sets the subnet mask.	[255.255.255.0]
Default Gateway	Sets the default gateway.	[192.168.0.254]
MAC Address	Displays the MAC address of the unit.	
Set	[5-1] Reflects the network setting.	

[6] Information

Displays upon HDIVII/CO	DIMP. Input
Input	Displays video image input terminal.
Source	Displays the name of the input source.
Deep Color	Displays the color bit depth concerning an input video image signal. * When you input YCbCr (4:2:2), it is not displayed. * When there is information about DeepColor from the source device, it is displayed.
Lamp Time	Displays the lamp use time.

Displays upon PC inc	\i it

Input Resolution

H Frequency	Displays the H Frequency.
V Frequency	Displays V Frequency.
Deep Color	Displays the color bit depth concerning an input video image signal. * When you input YCbCr (4:2:2), it is not displayed. * When there is information about DeepColor from the source device, it is displayed.
Lamn Time	Displays the lamp use time

Displays video image input terminal.

Displays image resolution.

peration guide (glossary)

Gamma Curve

The description of the gamma curve that assumes a gamma curve unit. Please read the relevant detailed description and professional books.

The gamma curve of the projector to the input video signal determines for each color the relative value of its light output. 100%

The value of the input video image signal is displayed as a percentage - with both being displayed in % as units - of the maximum light input signal for brightness and the brightness output value as a percentage of the maximum output value of each color or the projector. In relation to the signal value of 50% of the input, it projects with brightness output value of 50%. However, a light output value of 0% is not completely black and neither no projection. As the possibility of the projector to reproduce blackness is limited, it will be actually slightly

The input video image signal value becomes a continuous curve of 0% to 100% for the gamma curve, which can be set with the projector. Moreover, it is impossible to get only one light output value for the input video image signal value. The gamma curve can be set for each color, i.e. red, green and blue. By selecting the white color, the 3 colors can be adjusted at the same time.

The light output 50% 0% Input signal


value


100%

50%

A larger angle of inclination of the gamma curve leads to a greater gap of the


light output value of that area and makes it easier to distinguish the video images. A low angle of inclination leads, on the contrary, to the difference in that area becoming smaller, so that the video images are harder to distinguish. If it is impossible to get an inclination angle, so that it is chosen to become horizontal, the gap in that area vanished and it might be impossible to distinguish the video images.

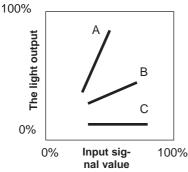


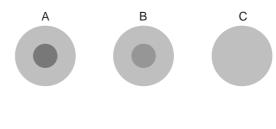


Suppose you knew the inclination of the input video image signal values of the watched video images, and would increase the slope of the portion of this area and attenuate the slope of other areas. It would then be easier to determine the video images. Also, if you did not know the inclination of the input video image signal value of the watched video images, adjustment would be difficult. However, there are some trends of the distribution of the input video image signal value depending on the type of video content. As some typical examples are prepared in the [Gamma] (Reference Page: 46), it is recommended to perform similar settings before watching.

Some methods about how to adjust the gamma curve are presented here, but in reality one can think of various adjustment methods, for example where red, green and blue are individually adjusted. In your own image creation, please enjoy the process of trial and error.

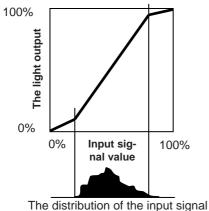

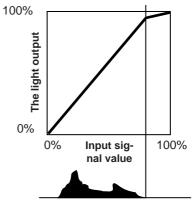


The distribution of the input signal



This is a description for the 3D-method using this unit, 3D-glasses (sold separately: PK-AG1-B) and an 3D synchro emitter (sold separately: PK-EM1). Set the 3D TV and 3D compatibility software to an appropriate

viewing standard. For viewing, a separate unit compatible with 3D playback is needed. For detailed description of other 3D methods, please read specialized books on this topic. (For the sake of explanation, a simplified and exaggerated picture is used.)

The 3D scheme of this unit utilizes the principle of binocular parallax. It projects with the frame sequential method, where separately alternating images are produced for the left and right eye. Opening and closing of 3D glasses fitted with liquid crystal shutters are controlled in such a way, that video images corresponding to the right/left eye and are only visible for the respective eye. As a result, one can watch three-dimensional images.

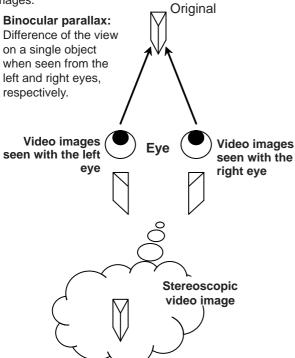

Due to the difference of the video images both eyes see, the brain perceives them in a stereoscopic way. The video images that can be seen by the respective eyes are artificially produced. Due to the exposure of the eyes to the respective video images, the brain is induced to create a stereoscopic image, which is not present as a real object. In other words, it is a use of virtual images.



CAUTION


- Please stop watching at once if you do not feel well and consult a physician if necessary.
- People who already have a kind of photosensitivity, sufferers from heart disease, and people in poor physical condition should not watch 3D video images of this device, which makes use of 3D glasses.
- It is recommended that you take a break periodically. Length and frequency of the required break differ due to individual differences. Please judge for yourself.



CAUTION

- The comprehensive brain function to judge stereoscopic vision and which include a feeling for real distances, develops while growing up by touching and seeing real objects, but in early childhood, it is still in an underdeveloped state. Even though there are individual differences, children under 5 are still developing. Letting them frequently watch virtual 3D video images can be an obstacle for the development of a comprehensive three-dimensional feel.
- For younger children may suddenly become sick, because they continue watching without realizing symptoms like 3D sickness or deterioration of health until after watching 3D images. Please accompany your while it watches. And please be careful when it comes to your child's bodily condition and state.

Separate images which can be seen by the right eye and left eye, respectively, are taken and produced separately. Therefore, the image for the left eye is only visible to the left eye, and the images for the right eye only or the right eye. The Human brain perceives stereoscopic images based on image information on both sides.

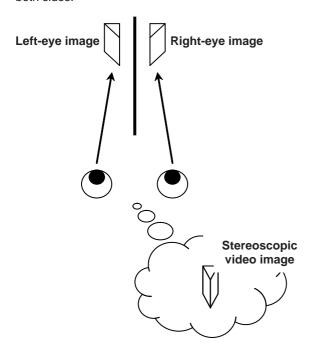



In most cases, 3D images taken or produced are horizontally arranged respectively. If these images were not horizontally arranged for left and right eye movement when watching, the brain could not perceive a stereoscopic image, but would still recognize a double image. As such video images can cause 3D sickness, please do not hold the 3D glasses slanted relative to the video images.


The closer one looks at stereoscopic images, the greater the binocular disparity, which means greater perception of outward projection. At the same time, the focus has to fit the screen, but the projecting image and the focus cause a great contradiction. This causes visual fatigue and discomfort.



CAUTION

Please watch from a distance three times the height of the screen. For example, for a projection size of 120, it should be approximately 4.5m, and for an 80-type, it should be around of 3 m. Please refer to page 19, where one can find a table with the screen seizes and at the same height. Choosing a distance closer than recommended may cause eyestrain.

The frame sequential method is a way of displaying video images left and right sequentially. The projector projects the video images used for the left- and right eyes onto the screen. The video images for the left and right side are only visible with the respective eye, as the left and right side of the 3D glasses are opened and shut by a liquid crystal shutter. As a result, the left and right images are seen by the eye and show a 3D image.

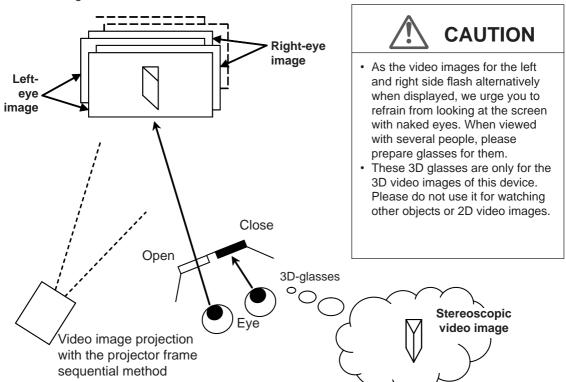

In order to match the timing of the display of video images and the timing of the opening/closing of the 3D glasses liquid crystal shutters and it is necessary to show to the eyes only those video images, for the left or right eye, respectively, the projector of this unit sends these timing data from the 3D synchro emitter to the 3D glasses with infrared rays.

∕N CA

CAUTION

- In regard to the 3D emitter, please direct the 3D glasses in such a way towards it, that the infrared rays can directly reach the 3D glasses.
- · In the following cases, it may not work correctly.
 - If you are near infrared communication equipment or lighting equipment.
 - If the 3D-glasses do not face to the 3D synchro emitter.
- Depending on the use of 3D emitters, it may be possible that its operation might influence the operation of other devices with infrared communication.

0-0-0-4-

Replacing the Lamp

The lamp is a consumable item. If the image is dark or the lamp is turned off, replace the lamp unit.

• When the lamp replacement time approaches, a message is displayed on the screen and the condition is indicated by the indicator. (Reference page: 16 to 17, 67)



- Do not insert your hands into the opening of the lamp!
 This could cause obvious deterioration of the equipment's function, wounds and electric shocks.
- Do not replace the lamp immediately after the unit has been used, and allow a cooling period of 1 hour or more before replacement. The temperature of the lamp is still high and this may cause a burn.
- Do not apply shock to the lamp unit. It may cause lamp blowout.
- Do not use flammable air duster to clean the internal parts of the unit. This may cause fire.



Usable Lamp Life

- When using the "Lamp Power" set at "Normal", the lifetime of the lamp will be approximately 3000 hours.
 - This is an average lifetime and cannot be guaranteed.
- The lamp life may not reach 3000 hours depending on the operating conditions.
- When the lamp has reached the end of its usable life, deterioration progresses rapidly.
- If the picture becomes dark, the tint becomes strange, or the image flickers, promptly the lamp unit for a new one.

Purchasing the Lamp Unit


Please consult your authorized dealer.

■ Lamp Unit Part No.: PK-L2210U


Lamp replacement procedure

- Remove the power plug from the outlet
- Remove the lamp cover

 Remove the screws with a
 screwdriver.

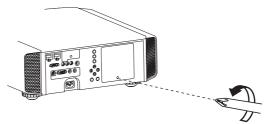


- Coosen the screws on the lamp unit
 - Loosen the screws with a + screwdriver.

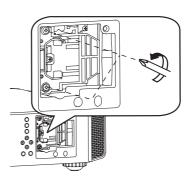


Pull out the lamp unit

Grasp the handle and pull out the lamp unit.

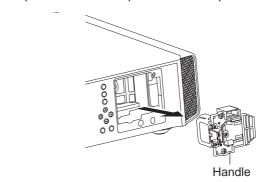


5 Install the new lamp unit

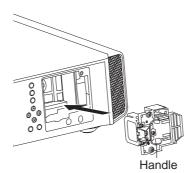


6 Tighten the screws of the new lamp unit

• Tighten the screws with a \oplus screwdriver.

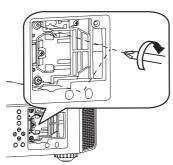

Attach the lamp cover

- Insert the top part (with 2 claws) of the lamp cover into the unit.
- Fasten the screws with a \oplus screwdriver.

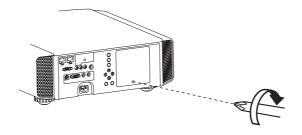



CAUTION

- Use only genuine replacement parts for the lamp unit. Also, never attempt to reuse an old lamp unit. This may cause a malfunction.
- Do not touch the surface of a new lamp. This may shorten the lamp life and cause lamp blowout.




MEMO

After Replacing the Lamp

- Do not place the removed lamp unit at locations that is reachable by children or near combustible items.
- Dispose used lamp units in the same way as fluorescent lamps. Follow your local community rules for disposal.

Replacing the Lamp (Continued)

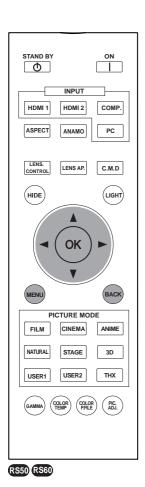


Resetting lamp Time


After replacing a new lamp unit, please reset the lamp time. Description of two methods.

Reset the lamp time from the menu screen.

1 Display the setting menu



Select"Function" → "Lamp Reset"





Re-confirm



 Select "Yes" and the lamp time is set to zero. Moreover, one returns to the previous menu.





Reset the lamp time by remote control.

Insert the power plug to the power outlet

> STANDBY/ON - Red Lights


- Must operate with the remote control in the standby mode (the projector is powered, but is not turned on).
 - Press in the order as shown.
 - Press each button within 2-second intervals and press the last button for 2 seconds or more.




Press for 2 seconds or more

OPureGlare

• [STANDBY/ON] indicator and [LAMP] indicator blink alternately for 3 seconds. After that, the unit switches to standby mode.

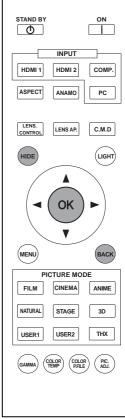



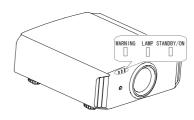



- Reset the lamp time only when you have replaced the lamp.
- Never reset the service time when the lamp is still in use. Otherwise, the approximate standard for gauging replacement time may be inaccurate and lamp blowout may occur.




Method for cleaning and replacing filters

Clean the filter regularly or air intake efficiency may deteriorate and malfunction may occur.




Remove the inner filter.

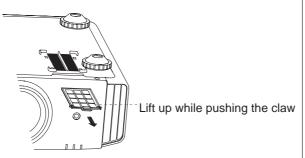



- Pull the power plug from the power outlet.
- Please turn this unit and if you put in on a bed or a table, first place something soft like a piece of cloth below. Then you can put it on top of it. Otherwise, it may cause scratches on this unit.



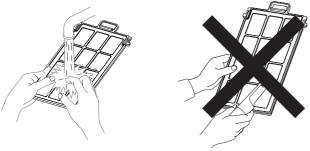

- Wash the filter with water and dry it in a shaded area.
- In extremely soiled cases, using a neutral detergent is recommended. Put on rubber gloves when using a neutral detergent.
- After washing the filter with water, make sure that it is completely dry before reinstalling. Otherwise electric shock or malfunctions may occur.
- Do not clean the filter with a vacuum cleaner or air duster. The filter is soft and may be damaged.



If the filter is damaged or too dirty to be cleaned.

- Replace with a new filter. A dirty filter will dirty the internal parts of the unit and cause shadows on the video image.
- To purchase a new filter or when it is dirty in the internal parts, consult your authorized dealer.
- Inner Filter Part No.:
- Replacement Filter: PC010661199

Reinstall the inner filter.



Check that the left and right claws are locked onto the unit

Troubleshooting

Before sending the unit to your authorized dealer for repair, please check the following points.

The following situations are not malfunctions.

- You do not need to worry about the following situations if there is no abnormality on the screen.
 - Part of the top surface or front of the unit is hot.
 - A creaking sound is heard from the unit.
 - An operating sound is heard from the inside of the unit.
 - Color smear occurs on some screens.
- Perform the following operations when the unit is unable to operate normally due to external static or noise.
 - ① When the unit is in standby mode, please pull out the power plug, then insert again.
 - 2 Press the power button on the unit to turn on the power again.
- A sound may be heard when the lamp is off but there is no danger.
- D-ILA device is manufactured using high-precision technology but there may be some missing pixels or pixels that remain permanently lit up.

Power is not supplied			
Is the power cord disconnected?	Insert the power cord (plug) firmly.	Reference page: 31	
Is the lamp cover properly shut?	Remove the power plug when the unit is in standby mode and close the lamp cover properly. After that, insert the plug again.	Reference page: 61	
Is the lamp in Cool Down mode?	After the Cool Down mode is complete, turn on the power again.	Reference page: 33	

Video image does not appear		
Is the correct external input selected?	Select the correct external input.	Reference page: 32
Is the AV device properly connected?	Connect the AV device properly.	Reference page: 25 to 30
Is the power of the AV device turned on?	Turn on the power of the AV device and play the video.	Reference page: 32
Are the correct signals being output from the AV device?	Set the AV device properly.	Reference page: 25 to 30
Is the setting of the input terminal correct?	Set "COMP." and "HDMI" in the setting menu according to the input signal.	Reference page: 51 to 52
Is the video image temporarily hidden?	Press the [HIDE] button to display the video image again.	Reference page: 36

Remote control does not work		
Are batteries installed correctly?	Match the polarities (\bigoplus or \bigoplus) correctly when inserting the batteries.	Reference page: 19
Are batteries exhausted?	Replace with new batteries.	Reference page: 19
Is there an obstructive object between the remote control and remote sensor?	Remove any obstructive objects.	Reference page: 23
Is the remote control held too far away from the unit?	Hold the remote control closer to the sensor when using.	Reference page: 23



The picture cannot be projected			
Will the picture flicker and become invisible with HDMI Please use a short HDMI cable. input?		Reference page: 26	
The image cannot output by HDMI terminal			
The image cannot output by	HDMI terminal		

• Even if the "Control with HDMI" function is "On", there are still some devices cannot reveal image normally.

Color does not appear or looks strange		
Is the image correctly adjusted?	Reference page: 47	
Video image is fuzzy		
Is the focus correctly adjusted?	Adjust the focus.	Reference page: 32
Is the unit placed too near or too far away from the screen?	Set the unit at a correct distance from the screen.	Reference page: 21, 23
Video images are missing		
Has setting been performed for screen mask?	Set "Mask" in the setting menu to "Off".	Reference page: 35 Reference page: 51
Is the display out of position?	Alter the "Picture Position" value in the setting menu to ensure that images are not missing.	Reference page: 50
Projected image is dark		
Is the lamp near exhaustion?	Check the lamp time on the information menu. Prepare a new lamp unit or replace as soon as possible when the lamp is near exhaustion.	Reference page: 60 to 63
The unit works when power is turned on but stops abruptly after a few minutes		
Are the air inlets and exhaust vent blocked?	Remove the power plug when the unit is in standby mode and remove any blocking object. After that, insert the plug again.	Reference page: 3, 14
Is the filter dirty?	Clean the filter.	Reference page: 64
Power is cut off suddenly		
Has setting been performed for off timer?	Set "Off Timer" in the setting menu to "Off".	Reference page: 54 to 55

In case this message is displayed


Message	Cause (Details)
COMP. NO Input	No device is connected to the input terminal. The input terminal is connected but there is no signal. Input the video signals.
COMP.	A video signal that cannot be used in this unit has been input. Input video signals that can be used. *The names of input terminals such as COMP. will be displayed in yellow
Lamp replacement Back	This message is displayed when the accumulated lamp time has exceeded 2900 hours. To clear the message, press the [Back] button. Get ready a new lamp unit and replace as soon as possible. Reset the lamp time after replacing the lamp. (Reference page: 60 to 63)



RS-232C Interface

It is possible to control this machine, if it is connected by an RS-232C cross cable (D-Sub9 pin) to a PC. Otherwise, this machine can be controlled via a computer network by connecting it with a LAN cable and sending of control commands. Please use it after you have understood this by reading professional books, or by discussing it with a system administrator.


RS-232C Specifications



Pin No.	Signal	Function	Signal Direction
2	RxD	Receive data	PC→This unit
3	TxD	Transmit data	This unit→PC
5	GND	Signal ground	-
1,4,6 - 9	N/C	-	-


PC refers to the controller such as a personal computer.

Mode	Non-synchronous
Character Length	8 bit
Parity	None
Start Bit	1
Stop Bit	1
Data rate	19200 bps
Data format	Binary



TCP/IP-connection

Before you can control it via LAN, you have to establish a TCP-connection via a "3-way-handshake". It is necessary for a connection authentication to send from the projector "PJ_OK" and - within 5 seconds after sending a "PJREQ" – to receive "PJACK". Please perform this operation – after confirming the operating status of the projector - again after establishment of a TCP connection, if you cannot send within 5 seconds "PJ_NG" or could not receive "PJNAK".

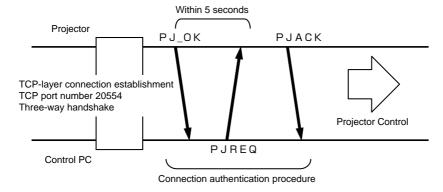

RS-232C Interface (Continued)

Command Format

The command between this unit and the computer consists of "Header", "Unit ID", "Command", "Data" and "End".

- Header (1 byte), Unit ID (2 bytes), Command (2 bytes), Data (n bytes), End (1 byte)
- Header

This binary code indicates the start of communication.

Binary code	Туре	Description
21	Operating command	PC → This unit
3F	Response command	PC → This unit
40	Reference command	This unit → PC
06	ACK	This unit → PC (When the command is accepted without error, it returns to PC)

■ Unit ID

This code specifies the unit. The binary code is fixed at "8901".

Command and data

Operating command and data (Binary code)

Command	Type	Description
0000	Connection check	Check whether communication is available between this unit and the PC during standby.
5057	Power supply	During standby 31: Turn on the power. During power on 30: Turn off the power. (Standby mode)
4950	Input	During power on 32: COMP. 33: PC (\$55) (\$56) 36: HDMI 1 37: HDMI 2
5243	Remote Control	Sends the same code as the supplied remote control. • "Remote control code" (Reference page: 70)



Reference command and data (Binary code)

Command	Type	Data description
5057	Power supply	During standby or power on 30: Standby mode 31: Power-on mode 32: During Cool Down mode 34: Warning mode
4950	Input	During power on 32: COMP. 32: PC (355) (356) 36: HDMI 1 37: HDMI 2

End

This code indicates the end of communication. The binary code is fixed at "0A".

■ Remote control code

• Binary code is sent during communication.

Remote control button name	Binary code
A	37 33 30 31
▼	37 33 30 32
BACK	37 33 30 33
ON	37 33 30 35
STAND BY	37 33 30 36
HIDE	37 33 31 44
LENS.AP.	37 33 32 30
MENU	37 33 32 45
OK	37 33 32 46
LENS CONTROL	37 33 33 30
>	37 33 33 34
■	37 33 33 36
PC RS50 RS60	37 33 34 36
COMP.	37 33 34 44
ANIME	37 33 36 36
STAGE	37 33 36 37
CINEMA	37 33 36 38
FILM	37 33 36 39

Remote control button name	Binary code
NATURAL	37 33 36 41
USER 1	37 33 36 43
USER 2	37 33 36 44
USER 3 RS40	37 33 36 45
THX RS50 RS60	37 33 36 46
HDMI 1	37 33 37 30
HDMI 2	37 33 37 31
PIC.ADJ.	37 33 37 32
INFO. RS40	37 33 37 34
GAMMA	37 33 37 35
C.TEMP	37 33 37 36
ASPECT	37 33 37 37
3D	37 33 38 37
COLOR PROFILE	37 33 38 38
C.M.D	37 33 38 41
ANAMO (RS40)	37 33 43 35
COLOR SPACE	37 33 43 44





RS-232C Communication Examples

This section shows the communication examples of RS-232C.

■ Operating command

Туре	Command	Description
Connection check	PC→This unit: 21 89 01 00 00 0A This unit→PC: 06 89 01 00 00 0A	Connection check.
Power (On)	PC→This unit: 21 89 01 50 57 31 0A This unit→PC: 06 89 01 50 57 0A	When power is turned on from standby mode.
Power (Off)	PC→This unit: 21 89 01 50 57 30 0A This unit→PC: 06 89 01 50 57 0A	When power is turned off (standby mode) from power-on mode.
Input (COMP.)	PC→This unit: 21 89 01 49 50 32 0A This unit→PC: 06 89 01 49 50 0A	When video input is set to component.
Remote Control (MENU)	PC→This unit: 21 89 01 52 43 37 33 32 45 0A This unit→PC: 06 89 01 52 43 0A	When the same operation as pressing the [MENU] button on the remote control is made

OPureGlare

■ Reference command

Туре	Command	Description
Power (On)	PC→This unit: 3F 89 01 50 57 0A This unit→PC: 06 89 01 50 57 0A This unit→PC: 40 89 01 50 57 31 0A	When information of power- on mode is acquired.
Input (HDMI 1)	PC→This unit: 3F 89 01 49 50 0A This unit→PC: 06 89 01 49 50 0A This unit→PC: 40 89 01 49 50 36 0A	When information of HDMI 1 input is acquired.



Copyright and Caution



About Trademarks and Copyright

 HDMI, HDMI logo and high definition multimedia interface are trademarks or registered trademarks of HDMI Licensing LCC.

Caution

D-ILA Device Characteristics

Do not project still pictures or pictures that have still segments for a long period of time. The still parts of the picture may remain on the screen.

Take special notice of images on the screens of video games and computer programs. There is no problem when playing normal video images such as movies.

When Unit is Unused for a Long Time

Prolonged disuse of the unit may effect an error on the functions. Turn on the power occasionally and operate the unit.

Usage Environment

- Avoid direct exposure of screen to direct sunlight and illumination. Block light using a curtain.
 Images can be well projected by darkening the brightness of the room.
- Do not use this unit in rooms with cigarette smoke or oily smoke. This may cause the unit to malfunction.

Parts Replacement

This unit contains parts (optical part, cooling fan, etc.) that require replacement to maintain its functioning. The estimated time for parts replacement varies greatly depending on the usage and environment. Please consult your authorized dealer for replacement.

Maintenance Procedures

Dirt on the cabinet

- Gently clean dirt on the cabinet with a soft cloth.
 In the case of heavy soiling, soak a cloth in water, wring dry and wipe, followed by wiping again with a dry cloth. Pay attention to the following as the cabinet may deteriorate in condition or paint may come off.
 - Do not wipe with thinner or benzene.
 - Do not spray with volatile chemicals like insecticide.
 - Do not allow prolonged contact with rubber or plastic products.

Dirt in the air inlets

Use a vacuum cleaner to suck up the dirt.
 Otherwise, use a cloth to wipe off the dirt. If dirt is allowed to accumulate in the air inlets, the internal temperature cannot be adjusted and this may cause a malfunction.

Dirt on the lens

 Clean the dirt using commercial blowers or lens cleaning papers for cleaning glasses and cameras. Do not use fluid-type cleaning agents. This may lead to peeling of the surface coating film. (Reference page: 14)

Specifications

Product Name		D-ILA Projector
Model Name		DLA-RS40-B, DLA-RS50-B, DLA-RS60-B *1
Display Panel/Size		D-ILA device * 2 *3 0.7" (1920pixels x 1080pixels) x 3 (Total no. of pixels: Approx. 6.22million)
Projection Lens		2.0 x power zoom lens (1.4:1 to 2.8:1) (Zoom/Focus: Power)
Light-source Lamp		220 W Ultra-high pressure mercury lamp [Part No. :PK-L2210U] Average lifespan: 3000 hours (normal mode)
Screen Size		Approx. 60" to 200" (Aspect ratio: 16:9)
Projection Distance		Approx. 1.8m to 12m
Analog Video Input Format		480i, 480p, 576i, 576p, 720p/50 Hz, 720p/60 Hz, 1080i/50 Hz 1080i/60 Hz
Digital Video Input Format		480i, 480p, 576i, 576p, 720p/50 Hz, 720p/60 Hz, 1080i/50 Hz 1080i/60 Hz, 1080p/24 Hz, 1080p/50 Hz, 1080p/60 Hz PC compatible signals (Reference page: P24)
Res	solution	1920 dots x 1080 dots
Inp	ut terminal	
	Video Input	1 system, RCA pin jack ×3 Y:1.0Vp-p, 75Ω Pb/Cb, Pr/Cr:0.7Vp-p, 75Ω * Also supports R / G / B Sync on G
	HDMI Input	2 system, HDMI 19 pin × 2(HDCP compliant) * 4 Compatible with the HDMIv1.4a standard * 5
	PC Input	1 system, D-Sub 15 pin VGA
Output terminal		
	Trigger terminal	1 system, Φ 3.5mmDC Power Jack (⊝—€—⊕) DC OUT 12V, 0.1A
	3D synchro	3D synchro emitter dedicated terminal (1 system, mini DIN 3pin)
Control terminal		
	RS-232C terminal	1 system , D-sub 9-pin (male) x1 (External control)
	Remote terminal	1 system, stereo mini jack x1 (Remote Control)
	LAN terminal	1 system, RJ-45 plug x1
Power Requirements		AC 110V-240V 50/60Hz
Power Consumption		350W(3.4A) (Standby mode: 0.9W)
Operation Environment		Temperature: 5°C to 35°C Humidity: 20% to 80%(No condensation) (Storage Temperature: -10°C to 60°C)
Installation Height		Below 5000ft (1524 m)
Dimensions (Width x Height x Depth)		About 455mmx179mmx472mm (Excluding foot, lens, and other protruding parts)
Mass		14.7kg (RS40) / 15.1kg (RS50) (RS60)
		(Please see page 13)






- * 1 Regarding -W the color of the main body is some kind of white color. Regarding -B, the color of the main body is some kind of black.
- * 2 D-ILA is the abbreviation for Direct drive Image Light Amplifier.
- * 3 D-ILA devices are manufactured using extremely high-precision technology. Pixel effectiveness is 99.99%. Only 0.01% or less of the pixels are either missing or would remain permanently lit up.
- * 4 HDCP is the abbreviation for High-bandwidth Digital Content Protection system.

 The image of HDMI input terminal may not be displayed due to HDCP specification change.
- * 5 Ethermet is not supported.
- Design and specifications are subject to change without prior notice.
- Please note that some of the pictures and illustrations may have been abridged, enlarged or contextualized in order to aid comprehension. Images may differ from the actual product.

Dimensions


(Unit: mm)

■ Top Surface

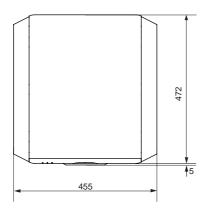


■ Bottom Surface


OPureGlare

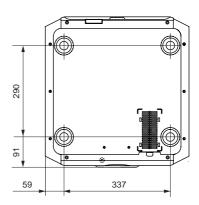

■ Front

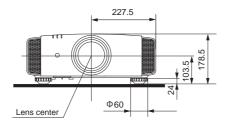

■ Back Surface



Connection terminal section of the illustration is $(850) \times (850)$.



Index

3D	[2] Input Signal	Page 37, 41
Shorthand for "Three-dimensional"	[3] Installation	Page 38, 42
Operation Guide (Glossary) Page 57	[4] Display Setup	Page 38
Connection by 3D SYNCHRO	[5] Function	Page 39, 42
terminal Page 28	[6] Information	Page 39
3D format of [2-1] HDMIPage 52	Operating procedure	Page 44
Picture Mode of [1] Picture Adjust Page 45	Batteries	
Color Profile of [1] Picture Adjust Page 45	Types	Page 13
Points of note Page 4, 57	How to insert batteries	Page 19
HDMI	Gamma	
Shorthand for "High-Definition Multimedia Interface"	Glossary	Page 56
SpecificationsPage 73	Gamma of [1] Picture Adjust	Page46
Connection method Page 26	[1-2-2] Custom Gamma	Page 49
[2-1] HDMI Page 51	Spare parts	
(Note on length) Page 26	See "Filters" section	
THX	See "Lamp" section	
The etymology for "THX" comes from the title of	Shift	
the movie "THX 1138".	Shift Amount	Page 21
THX CertificationPage 10	Adjustment	Page 33
Picture Mode of [1] Picture Adjust Page 45	Zoom	
Anamorphic Lens	Magnification	Page 73
Anamorphic of [3] Installation Page 53	Adjustment	Page 32
Color	Installation	
Color Profile of [1] Picture Adjust Page 45	Angle	Page 21
Color temp. of [1] Picture Adjust Page 46	Settings	Page 50
Color of [1] Picture Adjust Page 46	Ceiling Mount	Page 4,22
Tint of [1] Picture Adjust Page 46	Caution	Page 20
[1-1] Color temp Page 47	Settings Menu	
Color Space of [1-2] Advanced Page 48	Structure	Page 45
[1-2-2] Custom Gamma Page 49	Menu operating method	Page 44
[1-2-3] Color Management Page 50	Projection Distance	
Screen Size	Distance Chart	Page 23
Distance Chart Page 23	Input Signal	
Aspect (Video) and aspect	PC signal support table	Page 24
(PC) of [2] Input SignalPage 50	[6] Information	Page 55
Zoom of [3-1] Lens Control Page 53	Noise	
Mask	NR. of [1-2] Advanced	Page 48
Mask of [2] Input Signal Page51	Filter	Б
Screen Menu	Inlet filter location	_
Table Menu StructurePage 37	Replacement Filter Number	_
[1] Picture Adjust Page 37, 40	Cleaning and Replacement	Page 64

Others

Index (continued)

Message		
Meaning		Page 67
Lamp		
Replace	ment Lamp Number	Page 60
Recomm	nended use time	Page 60
Lamp tim	ne of [6] Information	Page 55
Replacei	ment	Page 60
Lamp po	wer of [1-2] Advanced	Page 49
Lamp res	set of [5] Function	Page 55
How to re	eset the lamp time	Page 62, 63
Notes of	Caution	Page 4
Remote cor	ntrol	
Button p	lacement	Page 19
Instruction	ons	Page 23
See "Dry	battery" section	
Lens		
[3-1] Len	s Control	Page 53
Focus of	[3-1] Lens Control	Page 53
Zoom of	[3-1] Lens Control	Page 53
Shift of [3-1] Lens Control	Page 53
(Cleaning	g the lens)	Page 72

MEMO